

SPEC-D *Tuning*

2002-2005 DODGE RAM HEADLIGHTS INSTALLATION INSTRUCTIONS



If you experience any difficulties that the instruction did not cover, Please seek local auto shop for advise.
Please wear protection before you work on your vehicle.

An assistant is helpful when removing the front bumper.

Please be careful while working with the bumper or body part to avoid scratching.

Do not make direct contact with the halogen bulb or the wire assembly until the unit has cooled down after use.

TOOLS AND SUPPLIES REQUIRED

Phillips Screwdriver

10mm Socket

If your Headlight is Halo type, you also need:

4 Blue Male Quick Wire Connectors

Pocket Flat Tip Screwdriver

Handy Remover

Wire Stripper

4 Blue Female Quick Wire Connectors

¼" Drive Ratchet

Wire Crimper

2 Red Wires (8 inch)

¼" Drive Extensions (6 to 10 inches)

4 Blue Quick Splice Wire Connectors

2 Black Wires (8 inch)

Product Part Numbers:

2LHP-RAM02JM-TM

2LHP-RAM02-TM

2LHP-RAM02BK -TM

2LHP-RAM02G-TM



2002-2005 DODGE RAM HEADLIGHTS INSTALLATION INSTRUCTIONS



If you experience any difficulties that the instruction did not cover, Please seek local auto shop for advise.
Please wear protection before you work on your vehicle.
An assistant is helpful when removing the front bumper.
Please be careful while working with the bumper or body part to avoid scratching.
Do not make direct contact with the halogen bulb or the wire assembly until the unit has cooled down after use.



1. There are three 10 mm bolts and a clip that needs to be remove



2. Remove the clip first




3. Then remove the two 10 mm bolts from the headlight



4. Gently pull the headlight out slightly enough to see the back of the headlight and disconnect all the connectors from the headlight. After disconnected, then remove the headlight



5. Connect all the connectors before you install the headlight
Please see the "Halo and L.E.D installation instructions"
If your headlights don't have HALO or L.E.D. You can skip that step

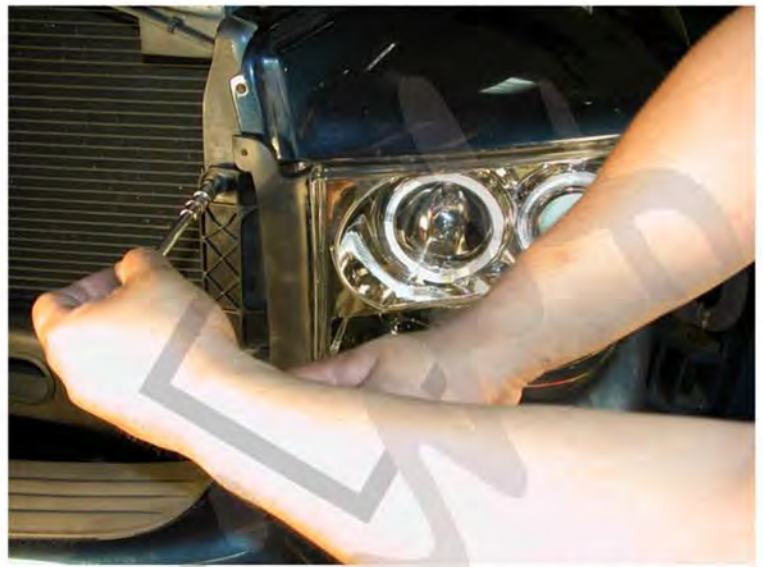

6. Install the headlight and install the three 10mm bolts



7. Install the clip to fasten the headlight



8. Please repeat the picture order from 1 to 7 for the opposite side



9. The installation is now complete