

Installation & CARE

2007-2013 CHEVY SILVERADO PROJECTOR HEADLIGHTS INSTALLATION INSTRUCTIONS

BEFORE INSTALLATION:

- If you experience any difficulties that the instructions did not cover, please seek assistance at a local automotive shop.
- Please wear proper protective equipment before you work on any vehicle.
- An assistant is recommended when removing the front bumper from your vehicle.
- Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

TOOLS AND SUPPLIES REQUIRED

1/4" Ratchet	6" Extension	10 mm socket	Needle Nose Plier
			
Trim Pad Remover			
			

PRODUCT NUMBER

2LHP-SIV07-G2-TM
2LHP-SIV07BK-G2-TM

2LHP-SIV07JM-G2-TM
2LHP-SIV07G-G2-TM



LET'S START THE INSTALLATION



STEP 1

Remove the eight plastic clips




STEP 2

Remove the plastic radiator cover



STEP 3

Remove the four 10mm bolts

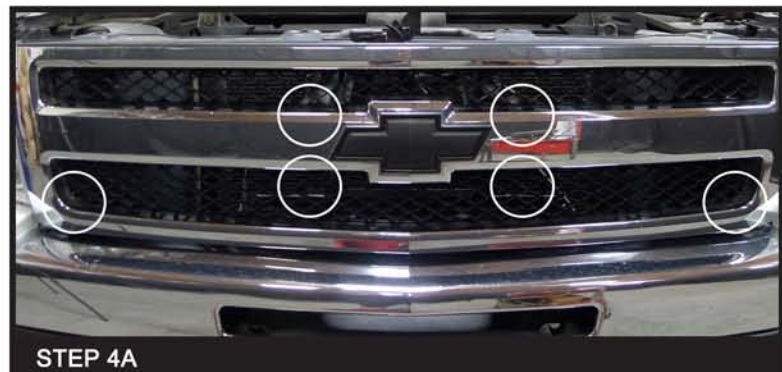

STEP 4A

Unclip and remove the front grill



STEP 4B

Unclip and remove the front grill



STEP 5

Remove the 10mm headlight bolt at the bottom



STEP 6

Remove the two 10mm headlight bolts at the top



STEP 7

Disconnect the headlight harness



STEP 8

Remove the factory headlight housing



STEP 9

Remove the headlight harness from the factory headlight



STEP 10

Install the headlight harness to the new headlight



STEP 11

Connect the light bar wires to parking lights. The white wire to positive and black wire to negative



STEP 12

Connect the headlight harness



STEP 13

Install the headlight assembly in place




STEP 14

Reinstall the two 10mm headlight mounting bolts at the top



STEP 15

Reinstall the 10mm headlight mounting bolt at the bottom

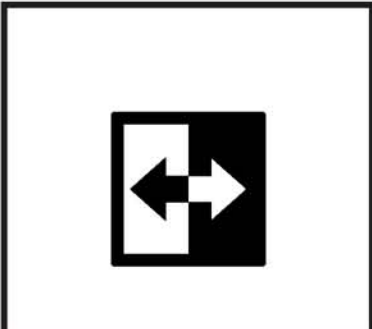

STEP 16

Please repeat the steps from 5 to 15 for the opposite side



STEP 17

Reinstall the four 10mm bolts



STEP 18

Reinstall the plastic radiator cover and the eight plastic clips



STEP 19

Close the hood to complete installation



Installation & CARE

2007-2013 CHEVY SILVERADO PROJECTOR HEADLIGHTS INSTALLATION INSTRUCTIONS

BEFORE INSTALLATION:

- If you experience any difficulties that the instructions did not cover, please seek assistance at a local automotive shop.
- Please wear proper protective equipment before you work on any vehicle.
- An assistant is recommended when removing the front bumper from your vehicle.
- Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

2007-2013 CHEVY SILVERADO PROJECTOR HEADLIGHTS INSTALLATION INSTRUCTIONS



LOW BEAM
ADJUSTMENT SCREWS