

SPEC-D *Tuning*

2007-2013 CHEVY SILVERADO PROJECTOR HEADLIGHTS INSTALLATION INSTRUCTIONS

If you experience any difficulties that the instruction did not cover, Please seek assistance at a local automotive shop

Please wear protection before you work on any vehicle.



An assistant is useful when removing the front bumper from your vehicle.

Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.

Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

TOOLS AND SUPPLIES REQUIRED

¼" Drive Ratchet

Trim Pad Remover

6" Extension

Needle Nose Pliers

10mm Socket

T15 Socket

If your Headlight is a Halo type, you will also need: 4 Blue Male Quick Wire Connectors

Wire Stripper

4 Blue Female Quick Wire Connectors

Wire Crimper

2 Red Wires (8 inch)

4 Blue Quick Splice Wire Connectors

2 Black Wires (8 inch)

Product Part Numbers:

2LHP-SIV07JM-TM

2LHP-SIV07-TM

2LHP-SIV07BK-TM

2LHP-SIV07G-TM



CHEVY SILVERADO PROJECTOR HEADLIGHTS INSTALLATION INSTRUCTIONS

If you experience any difficulties that the instruction did not cover, Please seek assistance at a local automotive shop

Please wear protection before you work on any vehicle.



An assistant is useful when removing the front bumper from your vehicle.

Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.

Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.



1. (8) plastic clips location



2. Remove the (8) plastic clips



3. Remove the plastic radiator cover




4. (4) 10mm bolts location




5. Remove the (4) 10mm bolts



6. Unclip the metal clips located behind the front grill

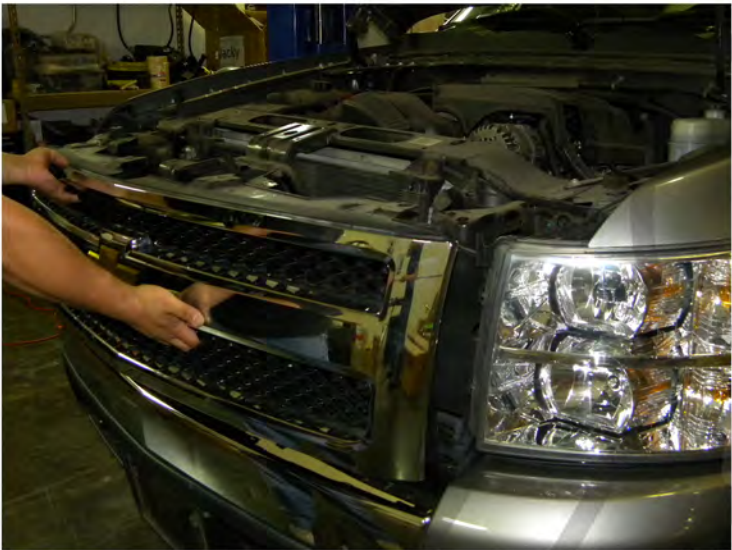

7. Remove the front grill

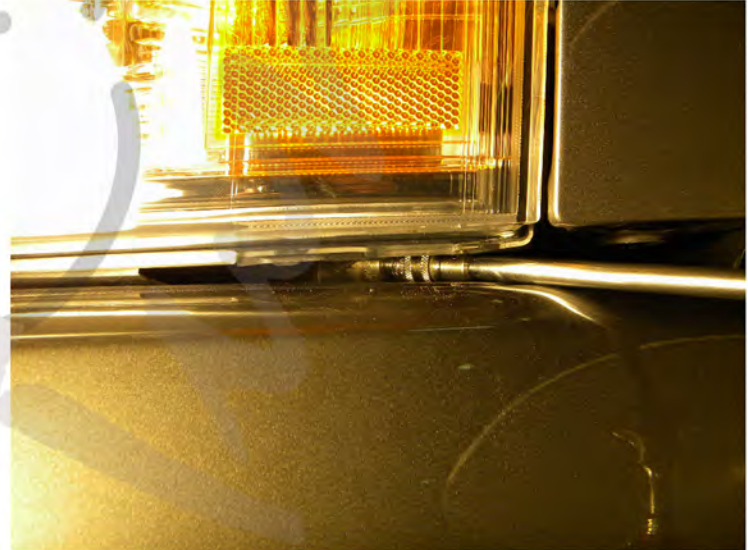

8. Remove the 10mm bolt



9. Remove the 10mm bolt



10. (2) 10mm bolts location



11. 10. Remove (2) 10mm bolts



12. Remove the headlight assembly



13. Disconnect the headlight harness



14. (2) T15 screws location




15. Loosen or remove the (2) T15 screws



16. Remove headlight harness
Please see the Halo and L.E.D installation instruction
If your headlights don't have HALO or L.E.D. You can skip it



17. Headlight harness

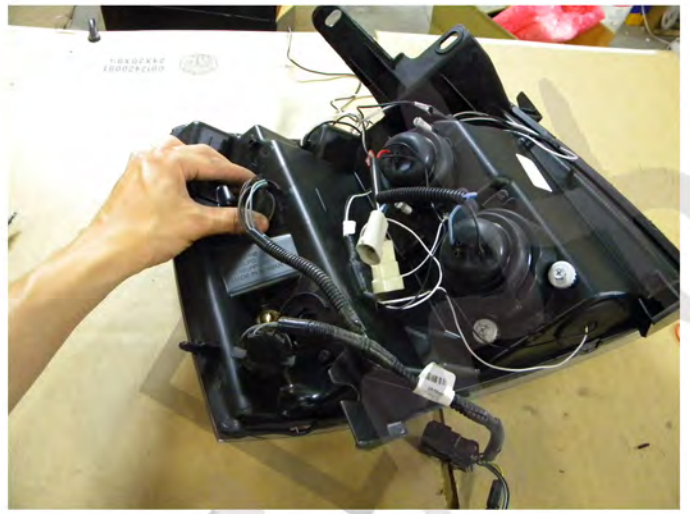

18. Place the headlight sockets in the projector headlight



19. Place headlight sockets in the projector headlight



20. Connect the headlight connectors onto the harness



21. Connect the headlight connectors onto the harness



22. Connect the headlight harness connector



23. Place projector headlight in the stock location



24. Tighten the (2) 10mm bolts




25. Tighten the 10mm bolt



26. Replace the front grill



27. Tighten the (4) 10mm bolts

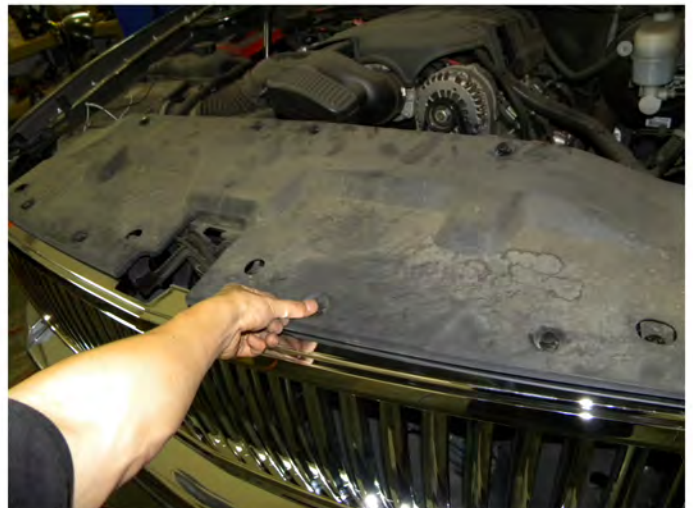

28. Replace the (8) plastic clips



29. Please repeat the steps in order from 1 to 28 for the opposite side



30. The installation is now complete

