

2011- UP SONATA PROJECTOR HEADLIGHTS

INSTALLATION INSTRUCTIONS

If you experience any difficulties that the instruction did not cover, Please seek assistance at a local automotive shop

Please wear protection before you work on any vehicle.

An assistant is useful when removing the front bumper from your vehicle.

Please be cautions when working with the bumper or any parts belonging to the vehicles's body to prevent scratching.

Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.









2011- UP

HYUNDAI SONATA PROJECTOR HEADLIGHTS

INSTALLATION INSTRUCTIONS


If you experience any difficulties that the instruction did not cover, Please seek assistance at a local automotive shop

Please wear protection before you work on any vehicle.

An assistant is useful when removing the front bumper from your vehicle.

Please be cautions when working with the bumper or any parts belonging to the vehicles's body to prevent scratching.

Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

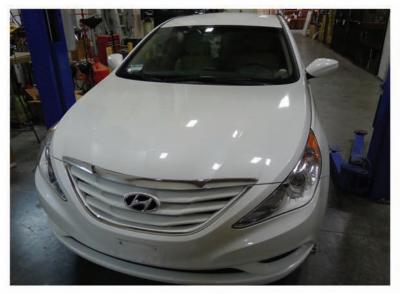



1. Before 2. 4 plastic clips location



3. Remove the (4) plastic clips



4. Remove the phillips head screw



5. (2) 10mm bolts and (6) plastic clips location



6. Remove the (2) 10mm bolts




7. Remove the (6) plastic clips



8. Remove the front bumper



9. Remove the 10mm bolt

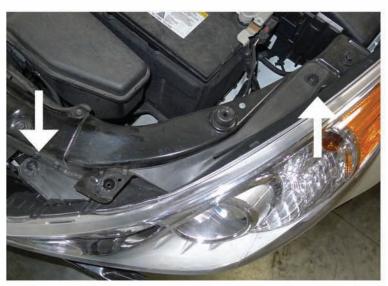

10.. 2 10mm bolts location




11. Remove the headlight




12. Disconnect the headlight harness



13. Connect the headlight harness to the new headlight
Please see the "L. E. D. headlights installation instructions"
If your headlights don't have L.E.D. You can skip the installation instruction.

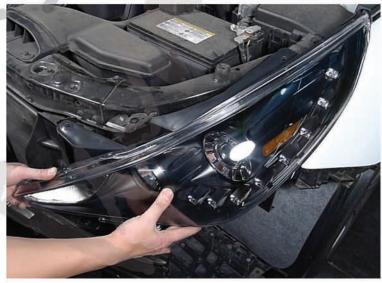

14. Place the headlight in the stock location

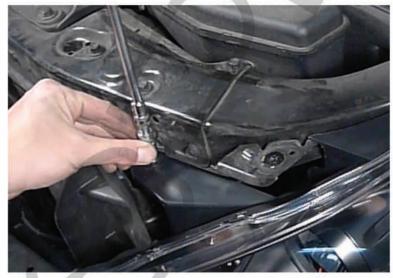

15. Tighten the (2) 10mm bolts



16. Tighten the 10mm bolt




17. Replace the front bumper




18. Replace the (6) plastic clips



19. Tighten the (2) 10mm bolts

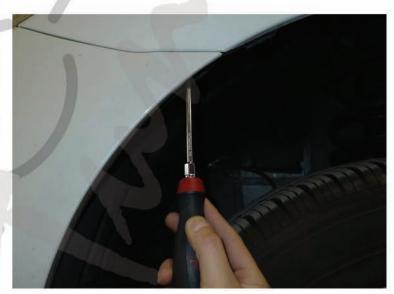

20. Tighten the phillips head screw

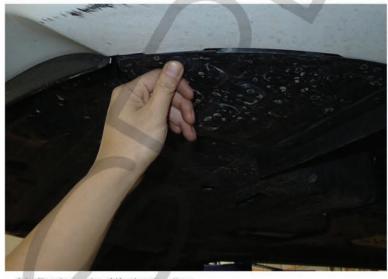

21. Replace the (4) plastic clips
Please repeat the steps from 1 to 21 for the opposite side



22. The installation now is complete