






Installation & CARE

2015-2018 CHEVY TAHOE PROJECTOR HEADLIGHTS INSTALLATION INSTRUCTIONS

BEFORE INSTALLATION:

- If you experience any difficulties that the instructions did not cover, please seek assistance at a local automotive shop.
- Please wear protection before you work on any vehicle.
- An assistant is useful when removing the front bumper from your vehicle.
- Please be cautious when working with the bumper or any parts belonging to the vehicles's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

TOOLS AND SUPPLIES REQUIRED

1/4" Ratchet	7 mm deep socket	10 mm deep socket	Flathead screwdriver
			
Plastic Pry bar			
			

PRODUCT NUMBER

2LHP-TAH15-TM
2LHP-TAH15BK-TM
2LHP-TAH15JM-TM
2LHP-TAH15G-TM




LET'S START THE INSTALLATION



STEP 1

Remove the twelve radiator cover fasteners

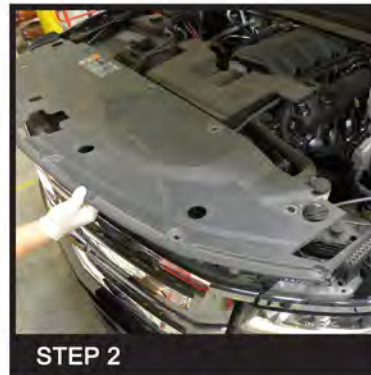

STEP 2

Remove the radiator cover




STEP 3

Remove the six 10mm front grille bolts



STEP 4

Remove the six 7mm wheel well bumper bolts

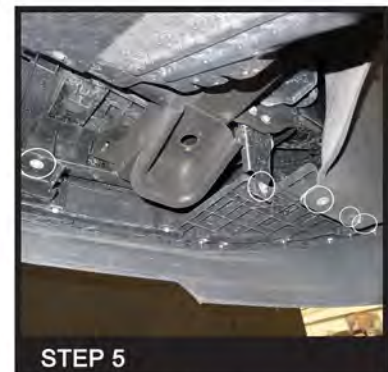

STEP 5

Remove the four 10mm bolts and one fastener per side



STEP 6

Gently pull back on the top of the front grille to access the rear of the front grille assembly




STEP 7A

Use the flat head screwdriver to depress the two lower tabs securing the bumper to the chassis




STEP 7B

Use the flat head screwdriver to depress the two lower tabs securing the bumper to the chassis

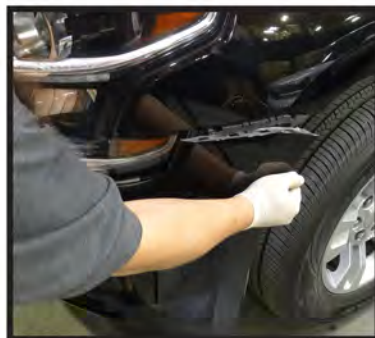


STEP 8

Firmly grasp the side of the bumper by the fender and carefully detach the end of the bumper from its retaining clip

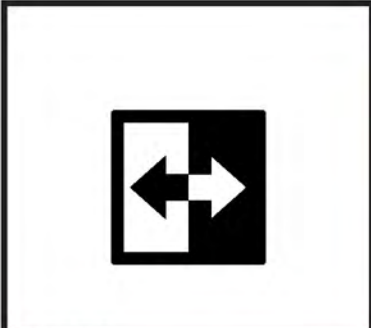

STEP 9

Please repeat the steps from 4 to 8 for the opposite side

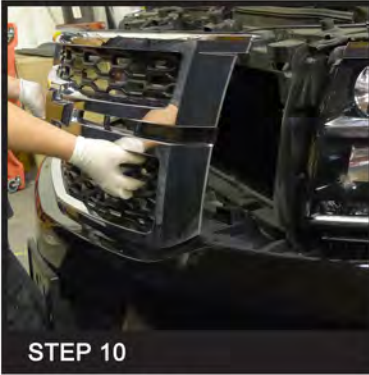

STEP 10

Remove front bumper



STEP 11

Remove the two lower 10mm headlight bolts



STEP 12

Remove the two upper 10mm headlight bolts



STEP 13

Uninstall the factory headlight housing




STEP 14

Disconnect the harness connector



STEP 15

Connect the headlight harness connector

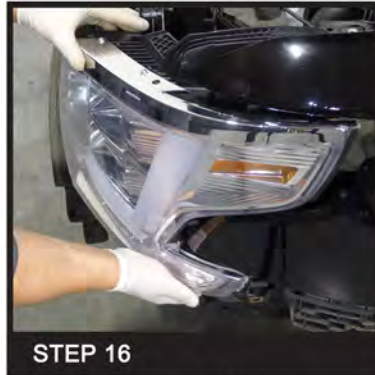


STEP 16

Install the new headlight housing



STEP 17

Reinstall the two upper 10mm headlight bolts

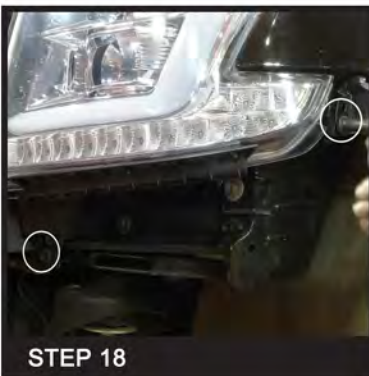


STEP 18

Reinstall the two lower 10mm headlight bolts




STEP 19

Please repeat the steps from 11 to 18 for the opposite side

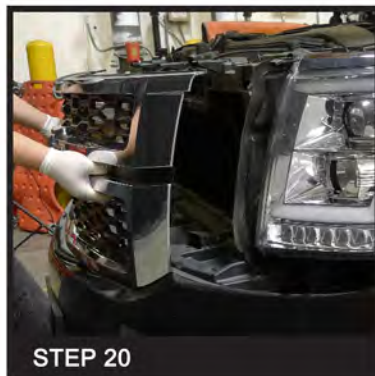

STEP 20

Reinstall the front bumper

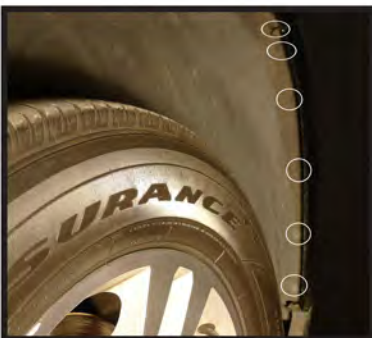

STEP 21

Reinstall the six 7mm wheel well bumper bolts



STEP 22

Reinstall the four 10mm bolts and one fastener per side



STEP 23

Reinstall the six 10mm front grille bolts



STEP 24

Reinstall the radiator cover



STEP 25

Reinstall the twelve radiator cover fasteners



STEP 26

Close the hood to complete installation

2015-2018 CHEVY TAHOE PROJECTOR HEADLIGHTS INSTALLATION INSTRUCTIONS

BEFORE INSTALLATION

- If you experience any difficulties that the instruction did not cover, please seek assistance at local automotive shop.
- Please wear protection before you work on any vehicle.
- An assistant is useful when removing the front bumper from your vehicle.
- Please be cautious when working with the bumper or any parts belonging to the vehicles's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

2015-2018 CHEVY TAHOE PROJECTOR HEADLIGHTS INSTALLATION INSTRUCTIONS

● HIGH / LOW BEAM Adjustment Screw

