

Installation & CARE

2011-2013 SCION TC PROJECTOR HEADLIGHTS

BEFORE INSTALLATION

- If you experience any difficulties that the instruction did not cover, please seek assistance at local automotive shop.
- Please wear protection before you work on any vehicle.
- An assistant is useful when removing the front bumper from your vehicle.
- Please be cautious when working with the bumper or any parts belonging to the vehicles's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

TOOLS AND SUPPLIES REQUIRED

1/4" ratchet	6" Extension	10mm Socket	Flat Head Screwdriver
			

PRODUCT NUMBER

2LHP-TC11-TM
2LHP-TC11-JM-TM
2LHP-TC11-G-TM




LET'S START THE INSTALLATIONS




STEP 1

Before installation

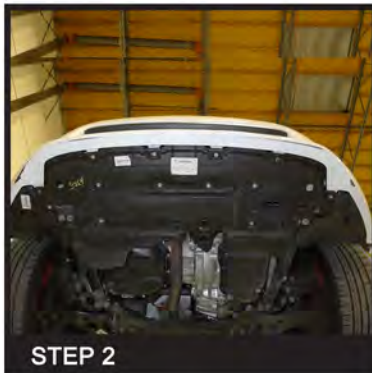


STEP 2

8 10mm bolts

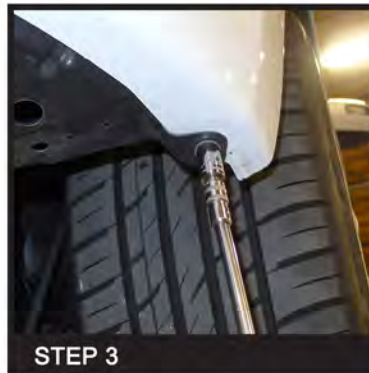


STEP 3

Remove 8 10mm bolts

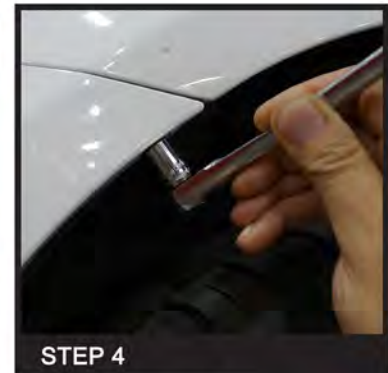

STEP 4

Remove the 10mm bolt

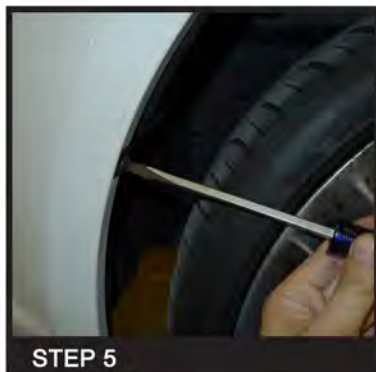

STEP 5

Remove the plastic clip



STEP 6

6 plastic clips location



STEP 7

Remove 6 plastic clips




STEP 8

Remove the plastic cover



STEP 9

5 plastic clips location

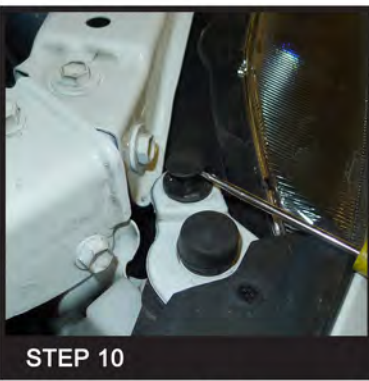

STEP 10

Remove the 5 plastic clips




STEP 11

Remove the front bumper



STEP 12

2 10mm bolts location

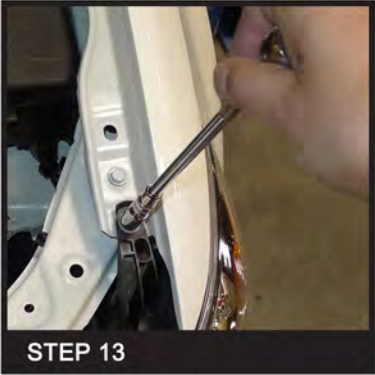

STEP 13

Remove the 2 10mm bolts



STEP 14

10mm bolt location



STEP 15

Remove the 10mm bolt




STEP 16

Remove the factory headlight




STEP 17

Disconnect the headlight harness

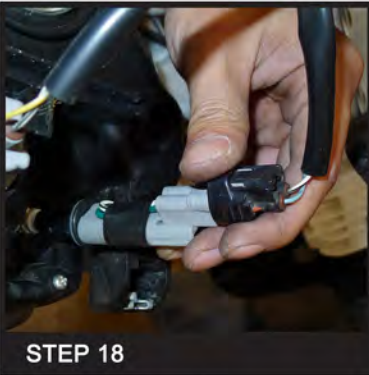


STEP 18

Remove the light socket

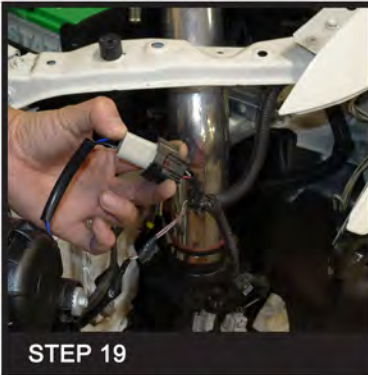

STEP 19

Connect the headlight harness to new headlight. Please see the "Halo & LED headlights installation instructions" If your headlights don't have Halo and led, you can skip the instruction

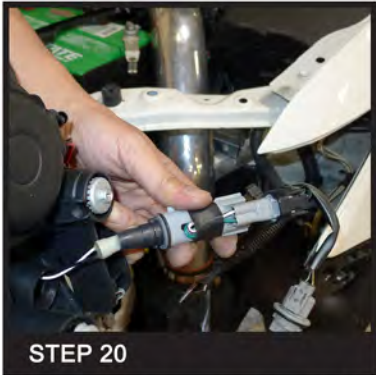

STEP 20

Connect the LED connector to the light socket




STEP 21

Install the light socket




STEP 22

Connect the LED connector to light socket

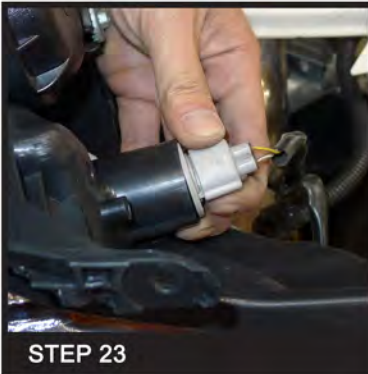

STEP 23

Install the light socket

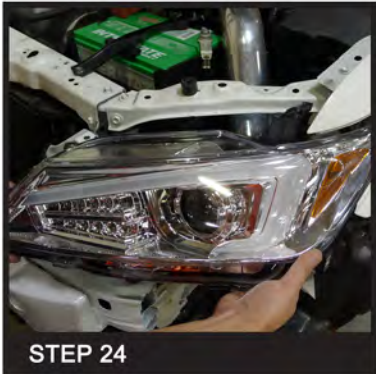

STEP 24

Place the new headlight to the stock location



STEP 25

Tighten the 2 10mm bolts



STEP 26

Replace the front bumper



STEP 27

Replace the 5 plastic clips




STEP 28

Replace the plastic cover



STEP 29

Replaec the 6 plastic clips

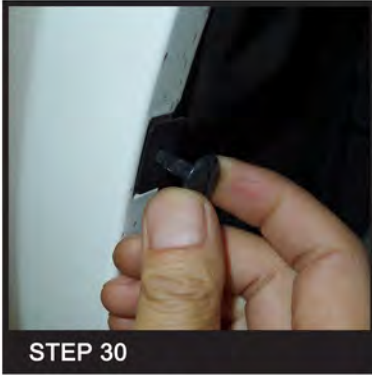


STEP 30

Replace the plastic clip




STEP 31

Connect the HID socket harness to the ballast

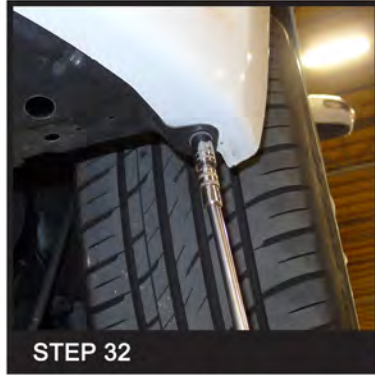

STEP 32

Tighten the 8 10mm bolts

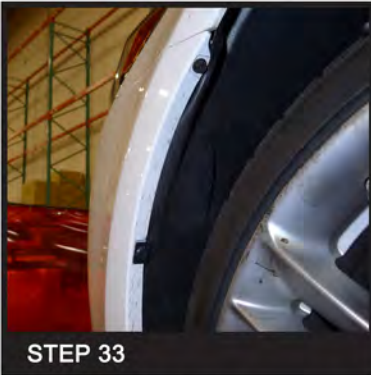


STEP 33

Tighten the 8 10mm bolts



STEP 34

Please repeat the steps from 1 to 33 for the opposite side

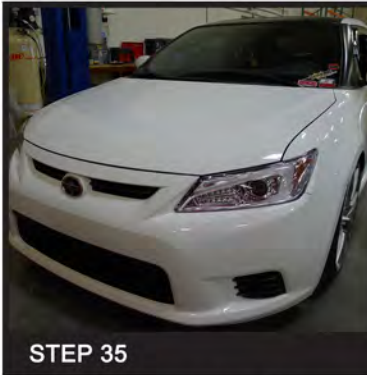

STEP 35

The instalation now is complete