INSTALLATION & CARE



INNOVATE

PERFESSIONAL

SERVI

2007-2013 TUNDRA LIGHT BAR PROJECTOR HEADLIGHT INSTALLATION INSTRUCTIONS

BEFORE INSTALLATION:

- · If you experience any difficulties that the instructions did not cover, please seek assistance at a local automotive shop.
- · Please wear proper protective equipment before you work on any vehicle.
- · An assistant is recommended when removing the front bumper from your vehicle.
- · Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

TOOLS AND SUPPLIES REQUIRED

10 mm socket Trim Pad Remover

PRODUCT NUMBER

2LHP-TUN07-G2-TM 2LHP-TUN07JM-G2-TM 2LHP-TUN07BK-G2-TM 2LHP-TUN07G-G2-TM

LET'S START THE INSTALLATION



Remove the two plastic fastener clips



Remove the extension panel



Remove the 10mm headlight mounting bolt at the bottom




Remove the two 10mm headlight mounting bolts at the top



Disconnect the headlight harness and remove the factory headlight housing



Connect the LED light bar wires to the parking light, Purple (+) and White and Black (-)

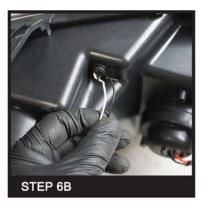

Connect the LED light bar wires to the parking light, Purple (+) and White and Black (-)



Connect the headlight harness



Seat the new headlight assembly in place



Reinstall the two 10mm headlight mounting bolts at the top



Reinstall the 10mm headlight mounting bolt at the bottom



Reinstall the extension panel



Reinstall the two plastic fastener clips



Please repeat the steps from 1 to 12 for the opposite side



Close the hood to complete installation

