

# Installation & CARE

## 2012-2014 HYUNDAI VELOSTER PROJECTOR HEADLIGHTS INSTALLATION

### BEFORE INSTALLATION

- If you experience any difficulties that the instruction did not cover, please seek assistance at local automotive shop.
- Please wear protection before you work on any vehicle.
- An assistant is useful when removing the front bumper from your vehicle.
- Please be cautious when working with the bumper or any parts belonging to the vehicles's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

### TOOLS AND SUPPLIES REQUIRED

1/4" Ratchet	6" Extension	10 mm socket	Phillips Screwdriver
			

### PRODUCT NUMBER

2LHP-VEL12JM-TM  
2LHP-VEL12G-TM  
2LHP-VEL12-TM



### LET'S START THE INSTALLATIONS




**STEP 1**

Before installation




**STEP 2**

6 plastic clips location

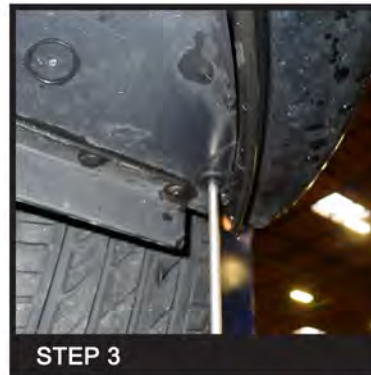

**STEP 3**

Remove the 6 plastic clips

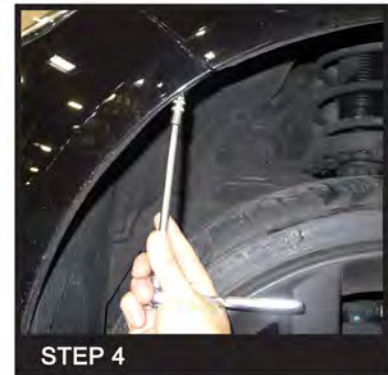

**STEP 4**

Remove the 10mm bolt




**STEP 5**

4 10mm bolts and 2 plastic clips location




**STEP 6**

Remove the 4 10mm bolts

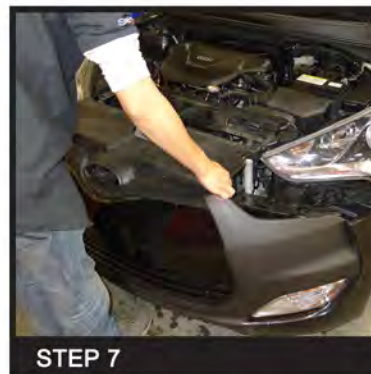

**STEP 7**

Remove the front bumper

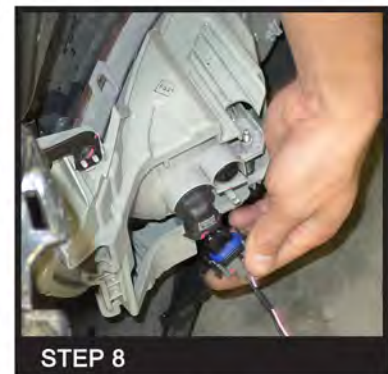

**STEP 8**

Disconnect the fog light harness



**STEP 9**

Remove the 10mm bolt



**STEP 10**

Remove the 10mm bolt



**STEP 11**

Remove the 10mm bolt




**STEP 12**

Disconnect the headlight harness




**STEP 13**

Remove the factory headlight

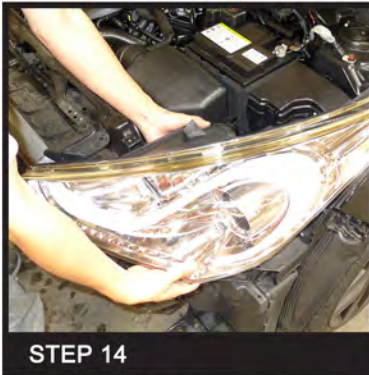

**STEP 14**

Place the new headlight in the stock location

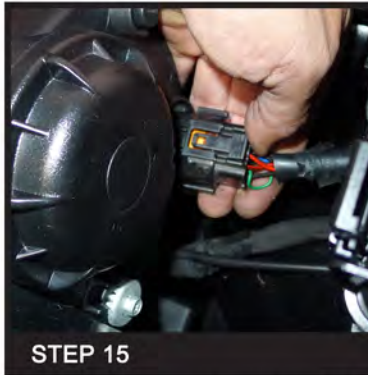

**STEP 15**

Connect the headlight harness. Please see the HALO & LED headlights installation instructions" If your head lights don't have HALO&LED You can skip the installation instruction




**STEP 16**

Tighten the 10mm bolt




**STEP 17**

Replace the front bumper

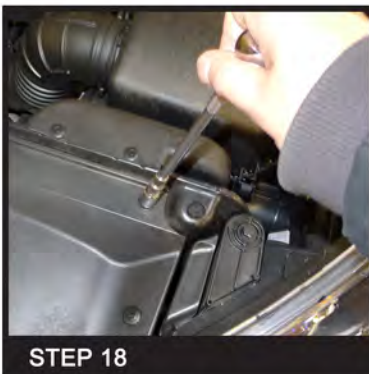


**STEP 18**

Tighten the 4 10mm bolts

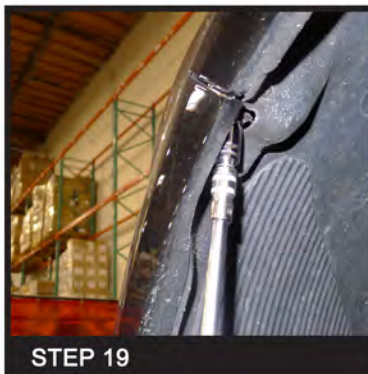


**STEP 19**

Tighten the 10mm bolt

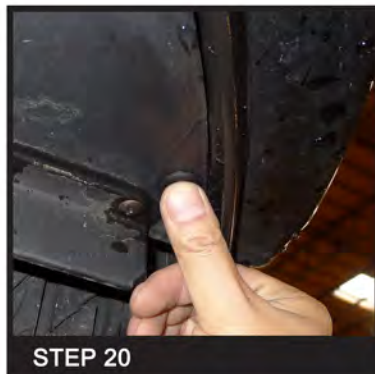


**STEP 20**

Replace the 6 plastic clips

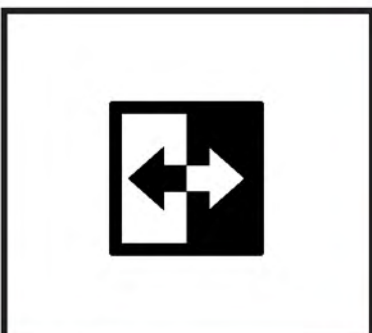

**STEP 21**

Please repeat the steps from 1 to 20 for the opposite side

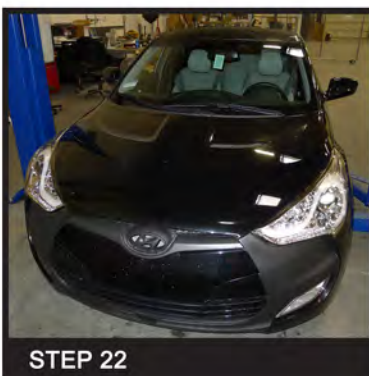

**STEP 22**

The installation now is complete