

SPEC-D *Tuning*

2008-2012 SUBARU IMPREZZA PROJECTOR HEADLIGHTS INSTALLATION INSTRUCTIONS

If you experience any difficulties that the instruction did not cover, Please seek assistance at a local automotive shop

Please wear protection before you work on any vehicle.



An assistant is useful when removing the front bumper from your vehicle.

Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.

Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

TOOLS AND SUPPLIES REQUIRED

3/8" Drive Ratchet

6" Extension

10mm Socket

Needle Nose Pliers

Phillips Screwdriver

Handy Remover

If your Headlight is Halo type, you also need:

Wire Stripper

Wire Crimper

4 Blue Quick Splice Wire Connectors

4 Blue Male Quick Wire Connectors

4 Blue Female Quick Wire Connectors

2 Red Wires (8 inch)

2 Black Wires (8 inch)

Product Part Numbers:

2LHP-WRX08JM-TM

2LHP-WRX08G-TM

2LHP-WRX08-TM



SUBARU IMPREZA PROJECTOR HEADLIGHTS INSTALLATION INSTRUCTIONS

If you experience any difficulties that the instruction did not cover, Please seek assistance at a local automotive shop

Please wear protection before you work on any vehicle.



An assistant is useful when removing the front bumper from your vehicle.

Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.

Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.




1. Before



2. (6) plastic clips location




3. Remove the (6) plastic clips

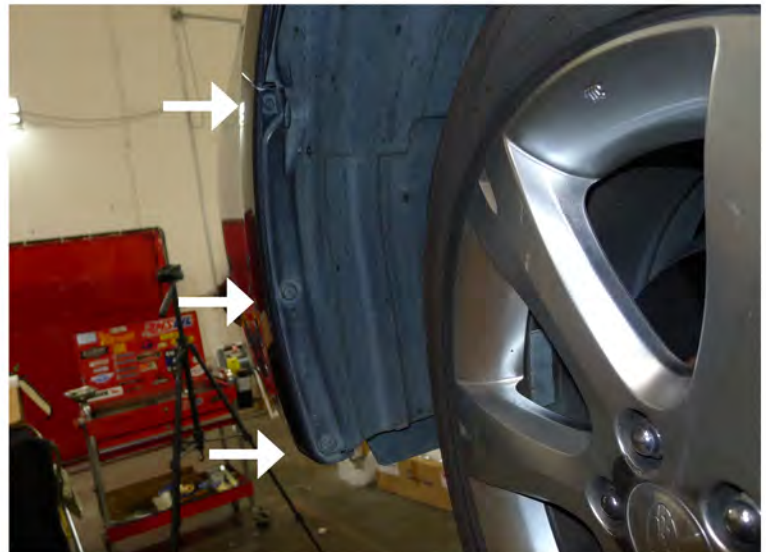

4. (3) plastic clips location



5. Remove the (3) plastic clips

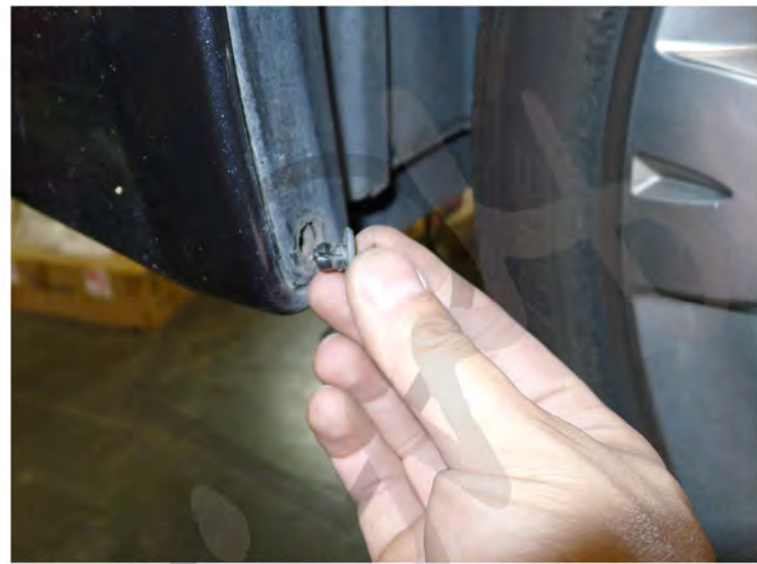

6. Remove the (3) plastic clips



7. (4) plastic clips location




8. Remove the (4) plastic clips



9. Remove the front bumper



10. Disconnect the foglight harness

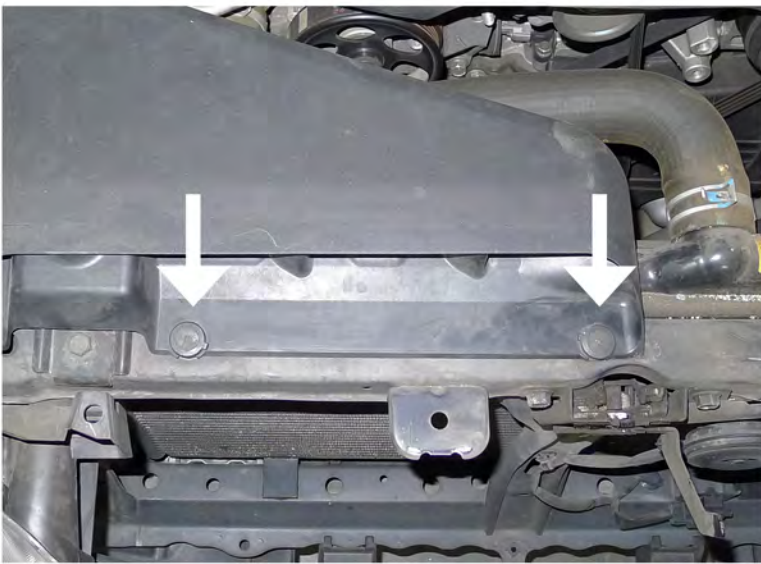

11. (2) plastic clips location



12. Remove the (2) plastic clips



13. Remove the intake air duct




14. Disconnect the headlight harness



15. (2) 10mm bolts location



16. Remove the (2) 10mm bolts

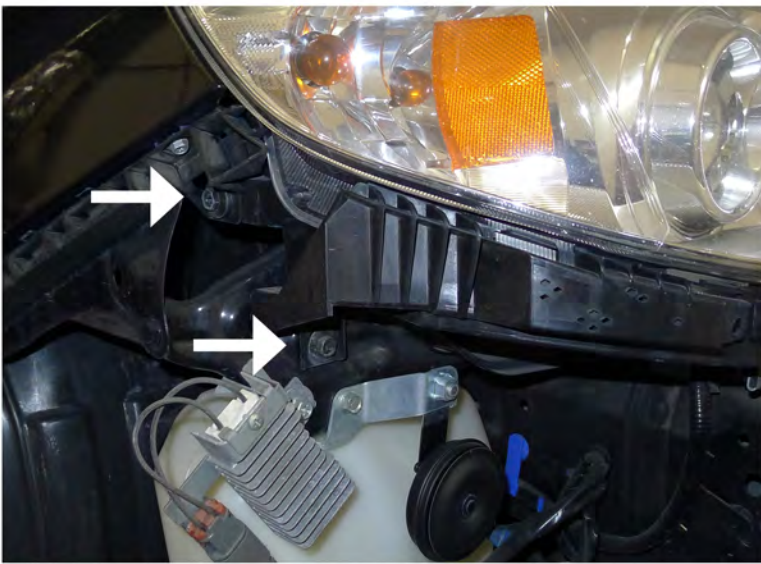

17. (2) 10mm bolts location



18. Remove the (2) 10mm bolts




19. Remove the plastic clip



20. Remove the 10mm bolt




21. Remove the plastic clip

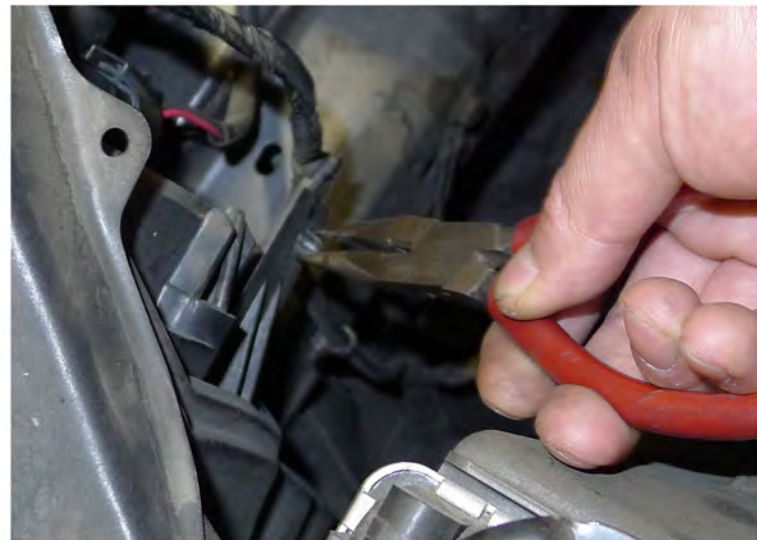

22. Unclip the harness retaining clip



23. Remove the factor headlight

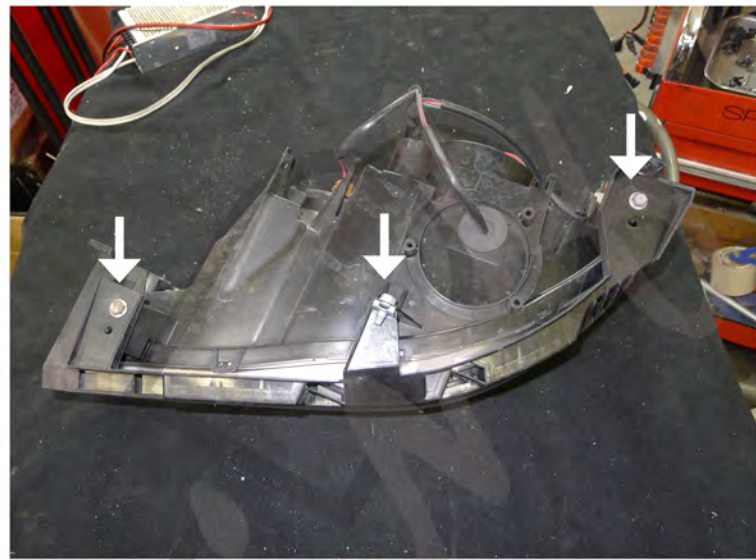


24. (3) 10mm bolts location



25. Remove the (3) 10mm bolts



26. Remove and transfer the headlight bracket to the new projector headlight

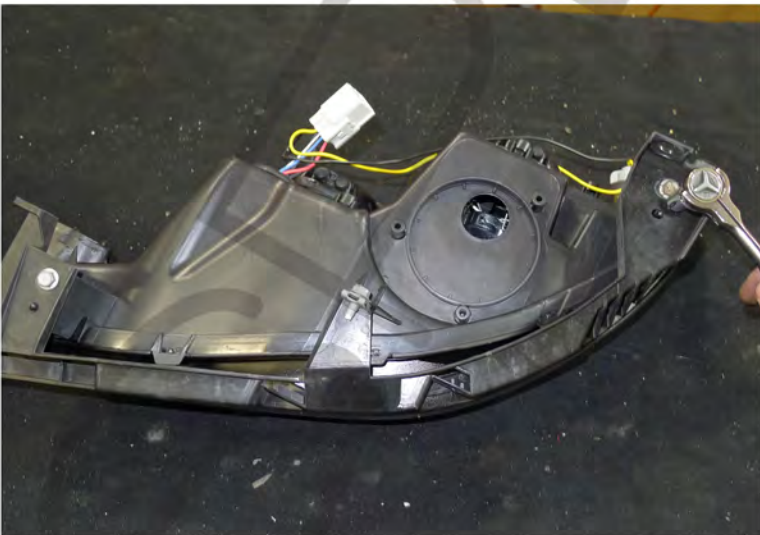


27. Tighten the (3) 10mm bolts




28. Remove the factor headlight



29. Replace the plastic clip

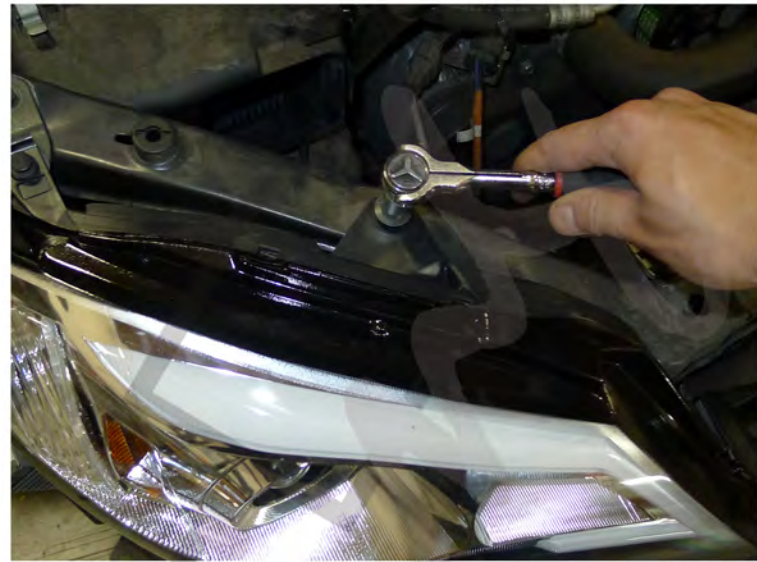

30. Tighten the 10mm bolt

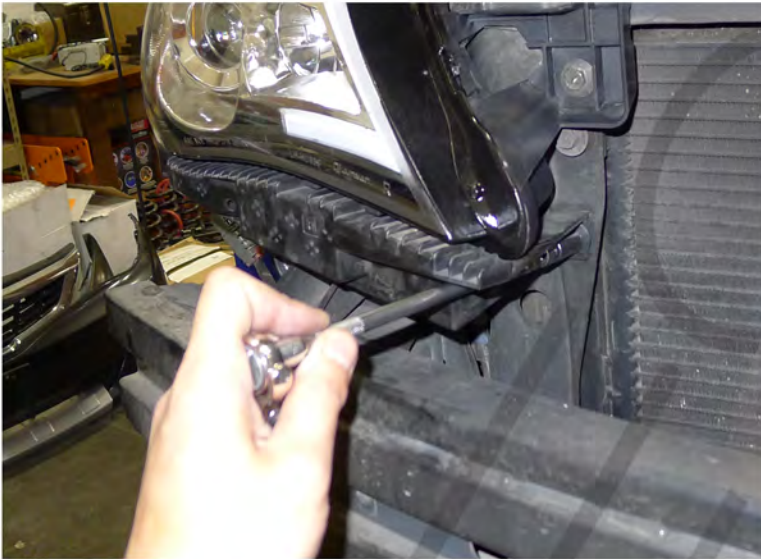

31. Tighten the (2) 10mm bolts



32. Tighten the (2) 10mm bolts



33. Connect the headlight harness to the new projector headlight
Please see the " L. E. D. head lights installation instructions"
If your head lights don't have L.E.D. You can skip the installation instruction.



34. Connect the foglight harness




29. Replace the front bumper




30. Replace the (4) plastic clips



31. Replace the (3) plastic clips

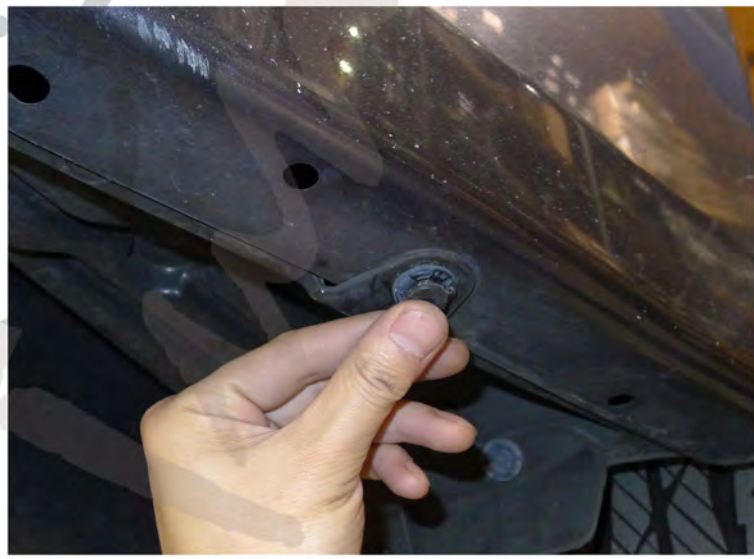

32. Replace the (6) plastic clips

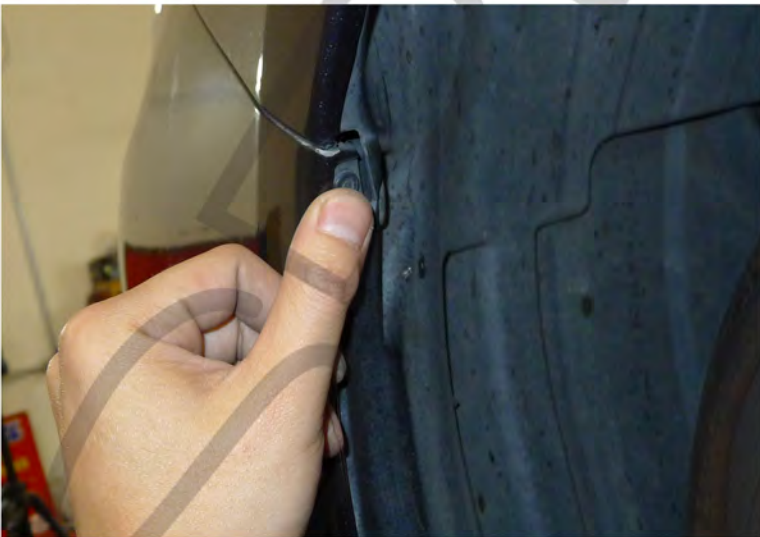

33. Replace the (6) plastic clips
Please repeat the steps from 1 to 33 for the opposite side



34. The installation is now complete