

# Installation & CARE

## 1999-2007 CHEVY SILVERADO FENDER FLARES PROTECTOR INSTALLATION

### BEFORE INSTALLATION

- If you experience any difficulties that the instruction did not cover, please seek assistance at local automotive shop.
- Please wear protection before you work on any vehicle.
- An assistant is useful when removing the front bumper from your vehicle.
- Please be cautious when working with the bumper or any parts belonging to the vehicles's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

### TOOLS AND SUPPLIES REQUIRED


Towel	Water		
			
			
			

### PRODUCT NUMBER

FDF-SIV99BK




### LET'S START THE INSTALLATIONS

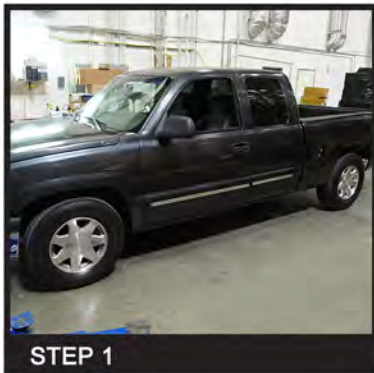

STEP 1

Before installation

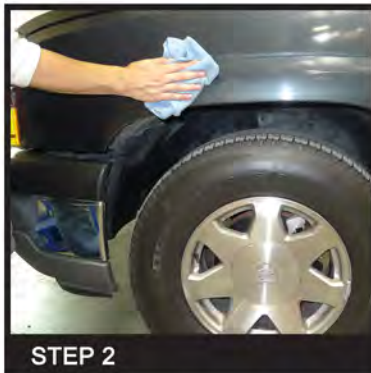


STEP 2

Clean the fender bodywork at all for the corners




STEP 3

Back of the fender flare

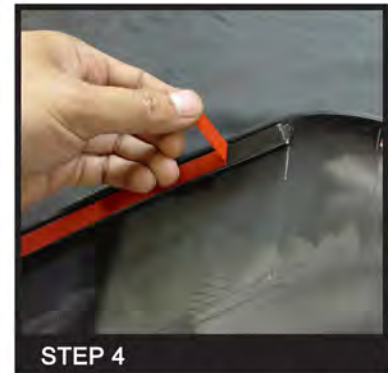


STEP 4

Peel away a portion of the adhesive backing

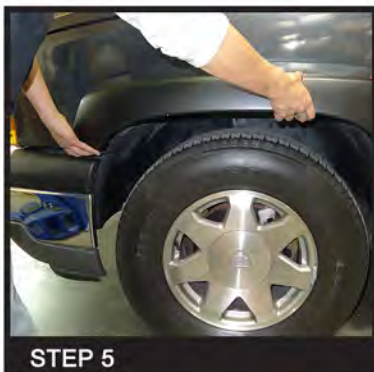


STEP 5

Position the fender flare against the bodywork

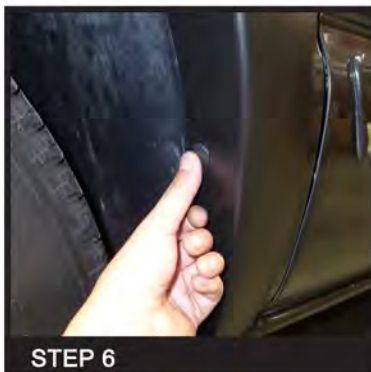


STEP 6

Install the plastic clip

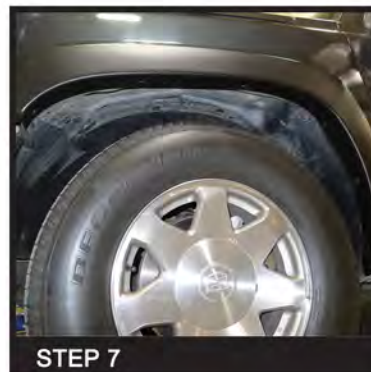

STEP 7

(6) plastic clips location

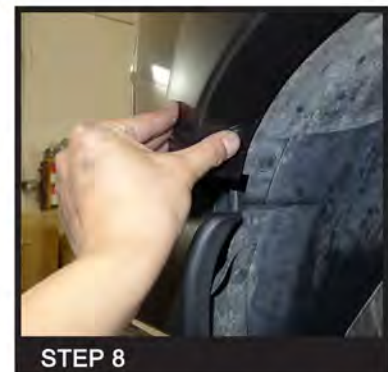


STEP 8

Install the (5) more plastic clips



**STEP 9**

Peel off the adhesive backing completely

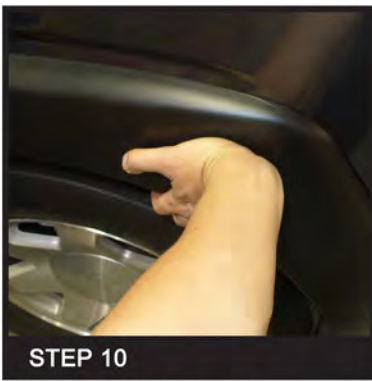

**STEP 10**

Press the fender flare against the bodywork




**STEP 11**

Clean the rear fender area




**STEP 12**

Place the rear fender flare in the position

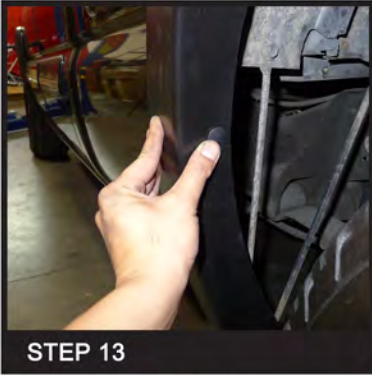


**STEP 13**

Install the (2) plastic clips

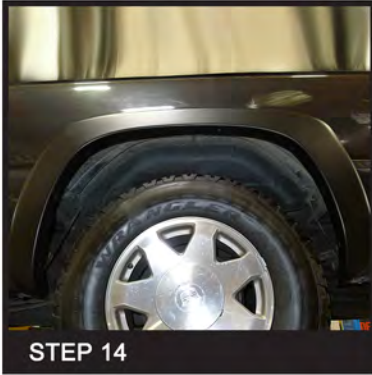


**STEP 14**

(8) plastic clips location

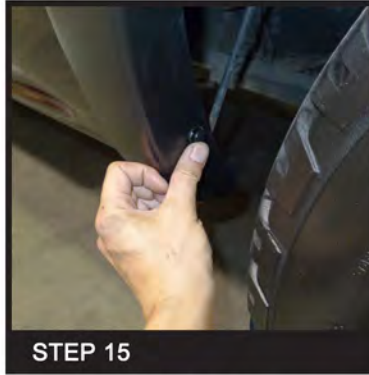


**STEP 15**

Install the (6) more plastic clips

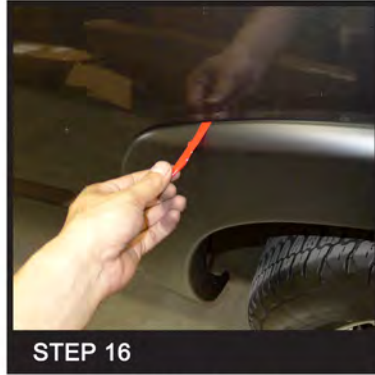

**STEP 16**

Peel off the adhesive backing

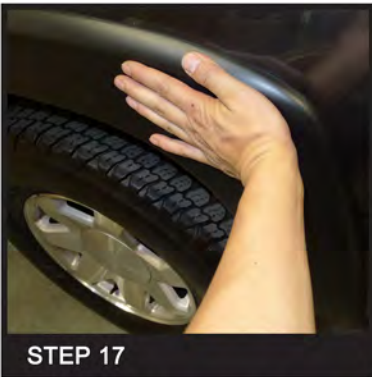

**STEP 17**

Press the fender flare against the bodywork



**STEP 18**

Please repeat the steps from 1 to 17 for the opposite side



**STEP 19**

The installation now is complete