



STEP 9

Disconnect (2) headlight connectors



STEP 10

Remove the rubber covering on OEM headlight



STEP 11

Remove the headlight bulb lock on OEM headlight by turning counter clockwise



STEP 12

Remove the bulb from OEM headlight



STEP 13

Place the bulb in dark lens headlight



STEP 14

Lock provided retaining clip by turning clockwise (counter clockwise to unlock)



STEP 15

Low beam and high beam adjustment screws



STEP 16

Connect both headlight connectors



STEP 17

Install the headlight assembly



STEP 18

Reinstall (3) 10mm bolts in appropriate locations




STEP 19

Reinstall the headlight cover



STEP 20

Reinstall (3) headlight cover retaining clips

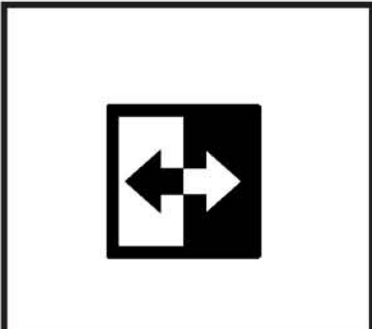

STEP 21

Please repeat the steps from 4 to 20 for the opposite side



STEP 22

Reinstall the front grille



The installation is now complete