

# Installation & CARE

## 1995-2001 SUBARU IMPREZA HEADLIGHTS WITH CORNER LIGHTS INSTALLATION

### BEFORE INSTALLATION

- If you experience any difficulties that the instruction did not cover, please seek assistance at local automotive shop.
- Please wear protection before you work on any vehicle.
- An assistant is useful when removing the front bumper from your vehicle.
- Please be cautious when working with the bumper or any parts belonging to the vehicles's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

### TOOLS AND SUPPLIES REQUIRED


¼" Ratchet	Flat Head Screwdriver	10 mm socket	Phillips Screwdriver
			
Trim Pad Remover			
			

### PRODUCT NUMBER

LC-WRX97JM-RS  
LH-WRX97JM-RS




### LET'S START THE INSTALLATIONS

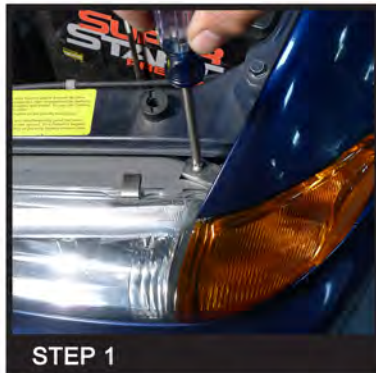

**STEP 1**

Remove the corner light by using phillips head screw

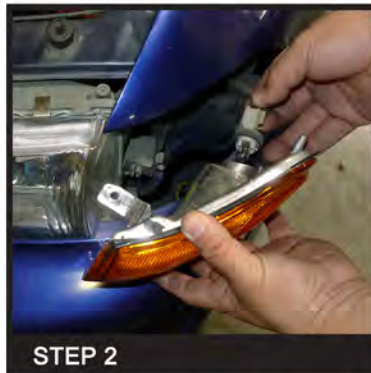


**STEP 2**

Remove the corner light and the corner light socket



**STEP 3**

Use the flat head screwdriver to unlock 2 clips

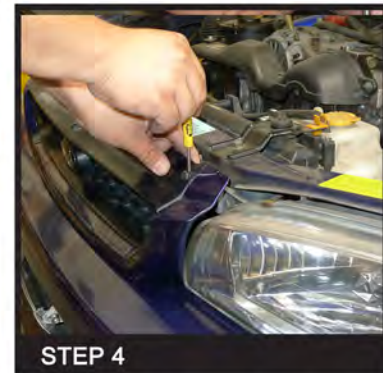


**STEP 4**

Use the flat head screwdriver to unlock 2 clip



**STEP 5**

Use the flat head screwdriver to unlock 2 clip

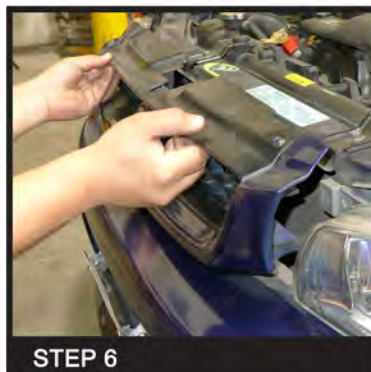

**STEP 6**

Pull out and remove the front grill



**STEP 7**

Remove the (2) 10mm bolt



**STEP 8**

Remove the (2) 10mm bolt





**STEP 9**

Disconnect the headlight harness and remove the factory headlight



**STEP 10**

Transfer the headlight bulb to the new headlight



**STEP 11**

Connect the light harness and place the new headlight in the stock location. Please see the HALO & LED headlights installation instructions" If your head lights don't have HALO&LED You can skip the installation instruction.



**STEP 12**

Tighten (2) 10mm bolt



**STEP 13**

Tighten the (2) 10mm bolt



**STEP 14**

Install the corner light socket and the corner light




**STEP 15**

Tighten the corner light Phillips head screw



**STEP 16**

Install the front grill

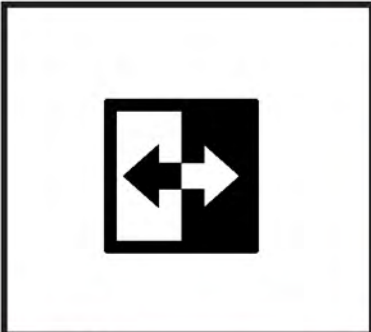

**STEP 17**

Please repeat the steps from 1 to 16 for the opposite side



**STEP 18**

The installation now is complete