SPEC-D Tuning

2005-2010 CHRYSLER 300C PROJECTOR HEADLIGHTS

INSTALLATION INSTRUCTIONS

If you experience any difficulties that the instruction did not cover, Please seek assistance at a local automotive shop

Please wear protection before you work on any vehicle.

An assistant is useful when removing the front bumper from your vehicle.

Please be cautions when working with the bumper or any parts belonging to the vehicles's body to prevent scratching.

Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

TOOLS AND SUPPLIES REQUIRED


- 3/8" Drive Ratchet
- 6" Extension
- 10mm Socket
- 8mm Socket
- 7mm Socket
- Trim Pad Remover

If your Headlight is Halo type, you also need:

- Wire Stripper
- Wire Crimper
- 4 Blue Quick Splice Wire Connectors
- 4 Blue Male Quick Wire Connectors
- 4 Blue Female Quick Wire Connectors
- 2 Red Wires (8 inch)
- 2 Black Wires (8 inch)

Product Part Numbers:

LHP-300C05-TM
LHP-300C05JM-TM
LHP-300C05G-TM

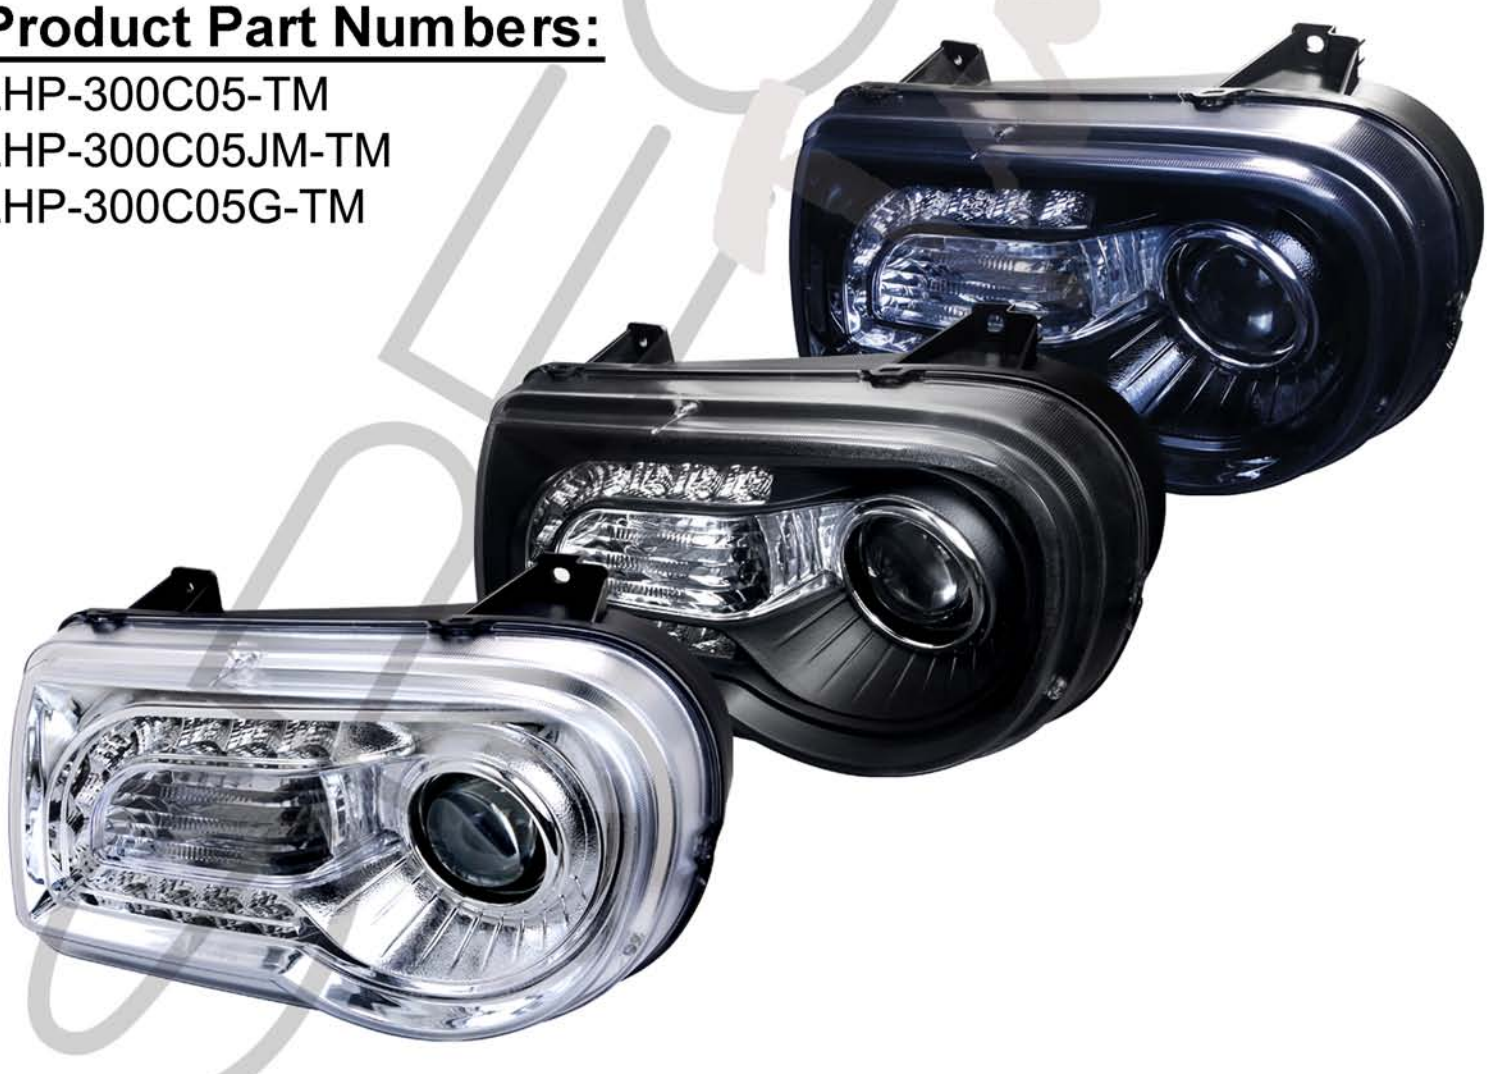

SPEC-D Tuning

WWW.SPECDTUNING.COM

2005-2010
CHRYSLER 300C PROJECTOR HEADLIGHTS
INSTALLATION INSTRUCTIONS

If you experience any difficulties that the instruction did not cover, Please seek assistance at a local automotive shop

Please wear protection before you work on any vehicle.


An assistant is useful when removing the front bumper from your vehicle.

Please be cautions when working with the bumper or any parts belonging to the vehicles's body to prevent scratching.

Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.



1. Before

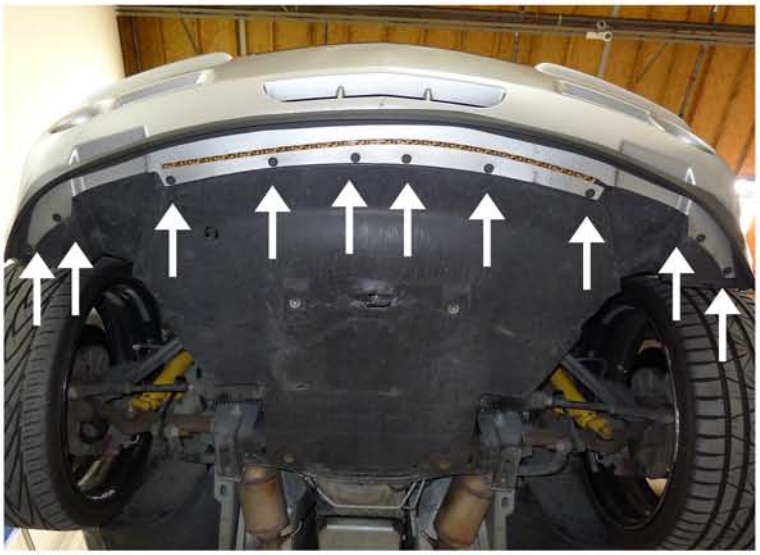

2. (10) 7mm bolts location



3. Remove the (10) 7mm bolts




4. Remove the (10) 7mm bolts




5.(3) plastic clips location



6. Remove the (3) plastic clips

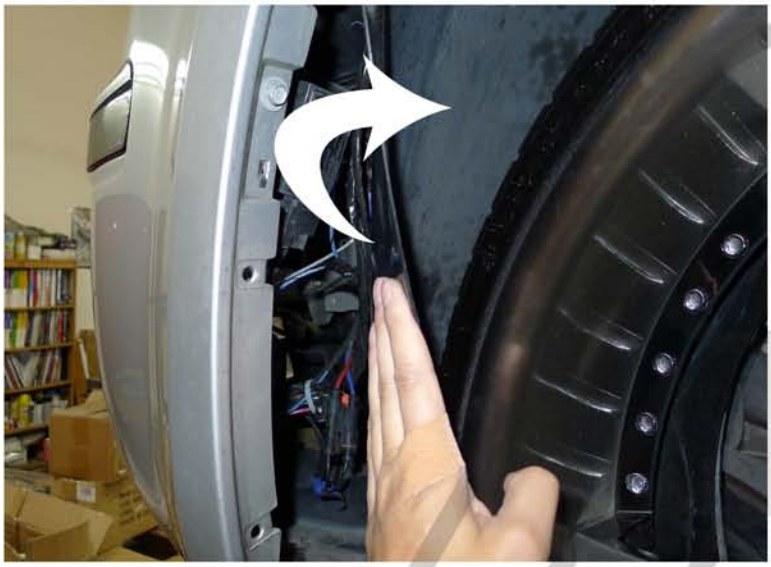

7. Pull the fender liner aside

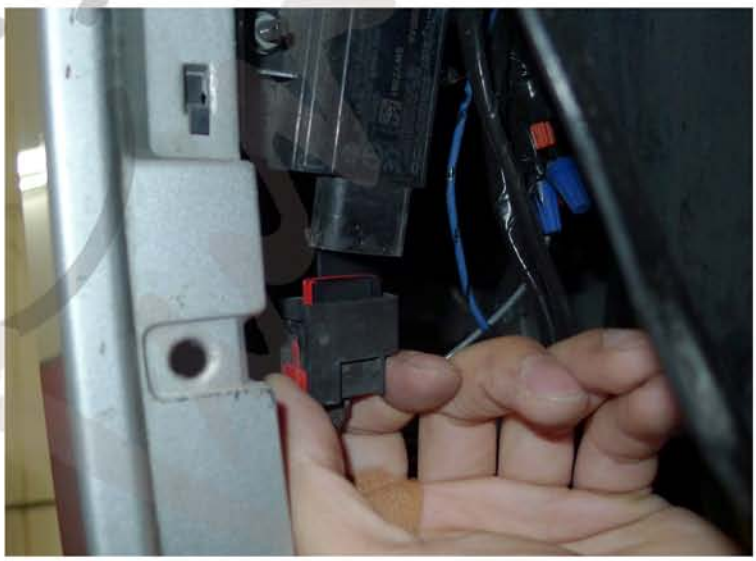

8. Disconnect the electrical harness



9. Remove the bumper light socket



10. Disconnect the fog light harnes



11. Remove the (2) 10mm bolts




12. Remove the (4) plastic clips



13. Remove the front bumper



14. Remove the 8mm bolt

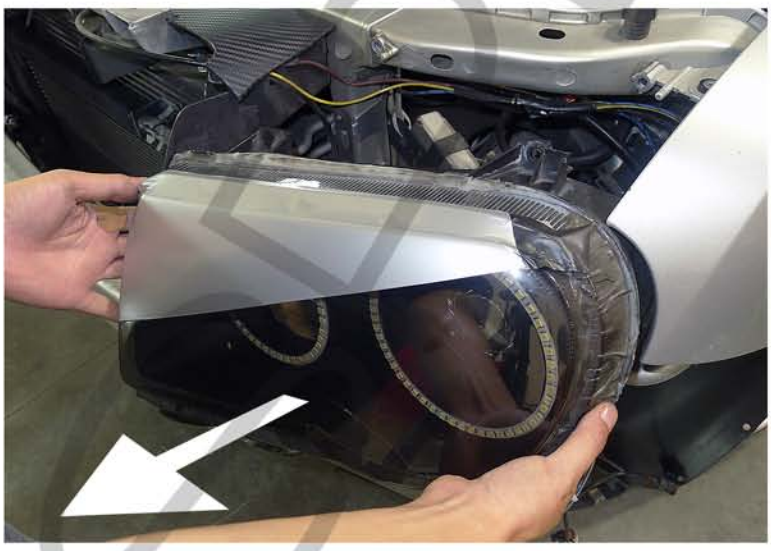

15. Remove the factory headlight




16. Disconnect the factory headlight harness



17. Disconnect the factory headlight harness



18. Disconnect the headlight harness

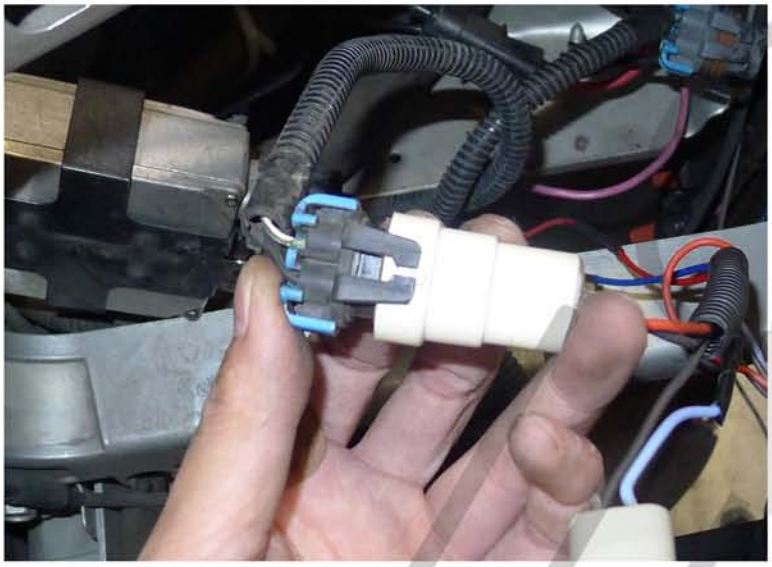

19. Connect the headlight harness to the new headlight

Please see the " L. E. D. headlights installation instructions"
If your headlights don't have L.E.D. You can skip the installation instruction.



20. Place the new headlight in the stock location



21. Tighten the (2) 8mm bolts



22.. Tighten the 8mm bolt



23. Replace the front bumper



24. Replace the (4) plastic clips



25. Replace the (4) plastic clips




26. Tighten the (2) 10mm bolts



27. Connect the fog light harnes



28. Replace the bumper light socket

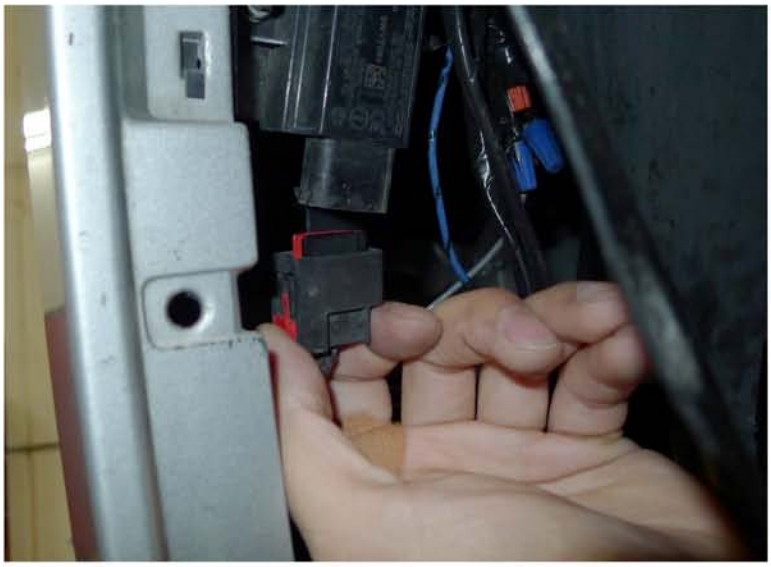

29. Reconnect the electrical harness



30. Replace the (3) plastic clips



31. Tighten the (10) 7mm bolts
Please repeat the steps from 1 to 31 for the opposite side



32.The installation now is complete

SPECD