

SPEC-D *Tuning*

2011-2013 CHEVY CRUZE PROJECTOR HEADLIGHTS INSTALLATION INSTRUCTIONS

If you experience any difficulties that the instruction did not cover, Please seek assistance at a local automotive shop

Please wear protection before you work on any vehicle.



An assistant is useful when removing the front bumper from your vehicle.

Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.

Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

TOOLS AND SUPPLIES REQUIRED

1/4" Drive Ratchet

7mm Socket

6" Extension

Trim Pad Remover

T20 Socket

10mm Socket

If your Headlight is Halo type, you also need:

Wire Stripper

4 Blue Female Quick Wire Connectors

Wire Crimper

2 Red Wires (8 inch)

4 Blue Quick Splice Wire Connectors

2 Black Wires (8 inch)

4 Blue Male Quick Wire Connectors

Product Part Numbers:

LHP-CRU11JM-TM

LHP-CRU11-TM

LHP-CRU11G-TM



2011 CHEVY CRUZE HEADLIGHTS INSTALLATION INSTRUCTIONS

If you experience any difficulties that the instruction did not cover, Please seek assistance at a local automotive shop

Please wear protection before you work on any vehicle.



An assistant is useful when removing the front bumper from your vehicle.

Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.

Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.



1. (8) T20 screws location



2. Remove the (8) T20 screws



3. (3) T20 screws location




4. Remove the (3) T20 screws



5. Remove the (3) T30 screws



6. Remove the bumper light socket

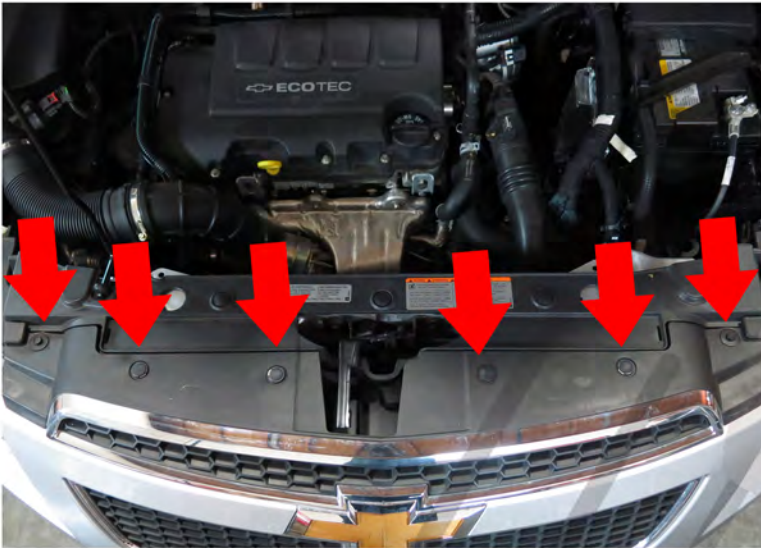

7. (4) plastic clips and (2) 10mm bolts location



8. Remove the (2) 10mm bolts



9. Remove the (4) plastic clips




10. Remove the front bumper



11. Disconnect the fog light harness



12. Disconnect the air temp sensor harness

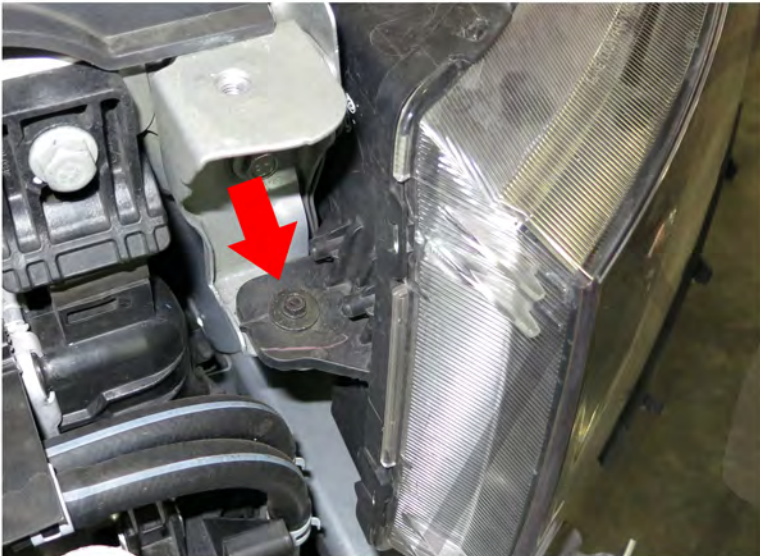

13. 7mm bolt location



14. Remove the 7mm bolt



15. (2) 7mm bolts location




16. Remove the 7mm bolt



17. The 7mm bolt location



18. Remove the 7mm bolt

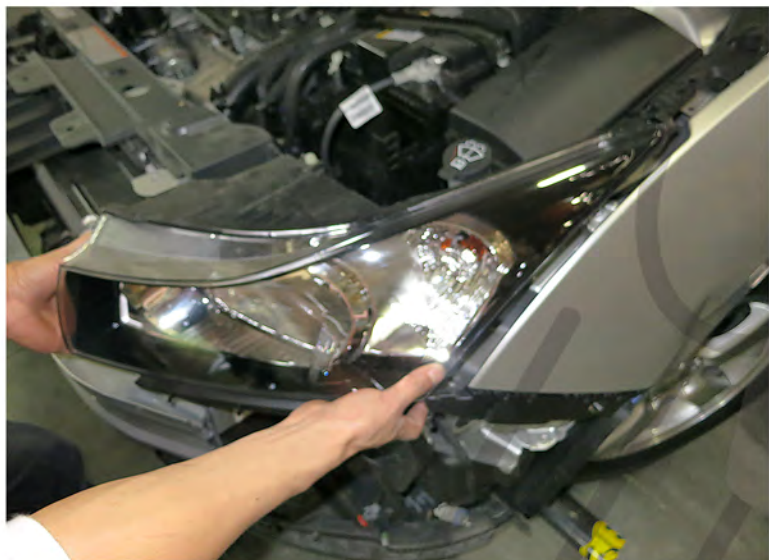

19. Remove the headlight



20. Remove the headlight bulb



21. Remove the signal light bulb




22. Remove the (5) phillips head screws



23. Remove the headlight bracket



24. Remove the headlight bracket

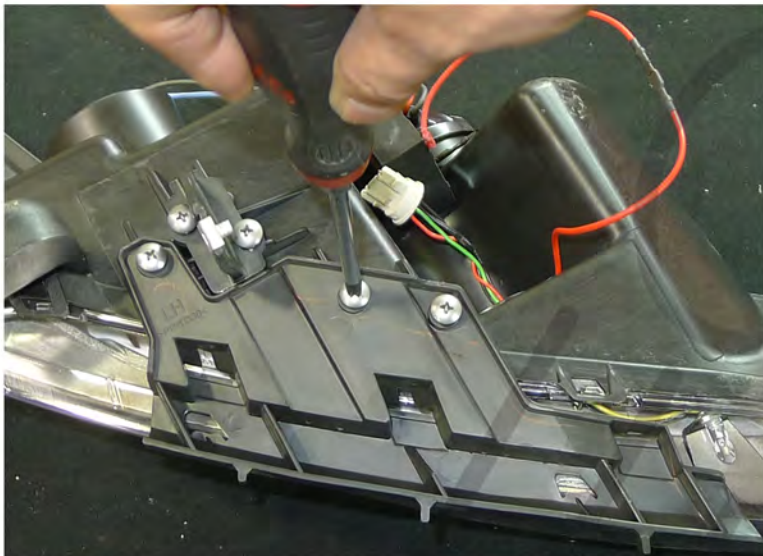

25. Transfer the headlight brackets onto the projector headlight



26. Connect the turn signal socket to the connector

Please see the "Halo and L.E.D. installation instructions"
If your headlights don't have HALO or L.E.D. you can skip it



27. Replace the (4) plastic clips



28. Connect the headlight harness to the projector headlight



29. Place the projector headlight in the stock location



30. Tighten the 7mm bolt



31. Tighten the (2) 7mm bolts



32. Tighten the (2) 7mm bolts



33. Tighten the 7mm bolt




34. Replace the front bumper




35. Connect the air temp sensor harness



36. Connect the foglight harness

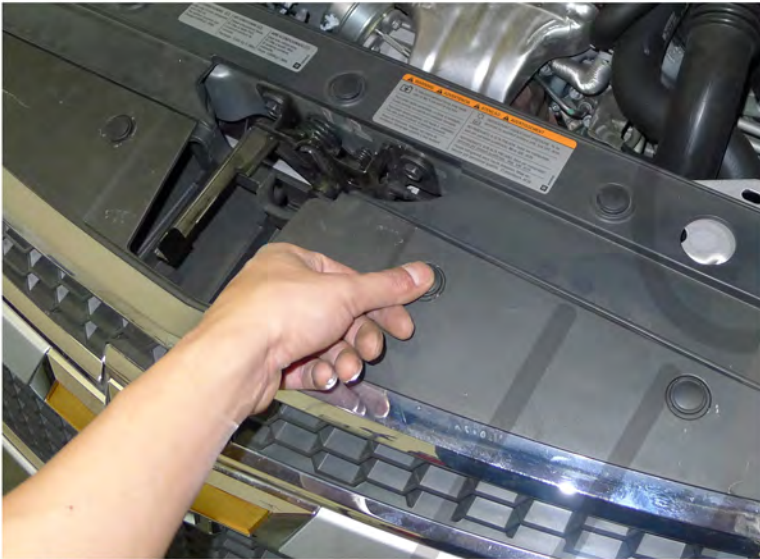

37. Replace the (4) plastic clips

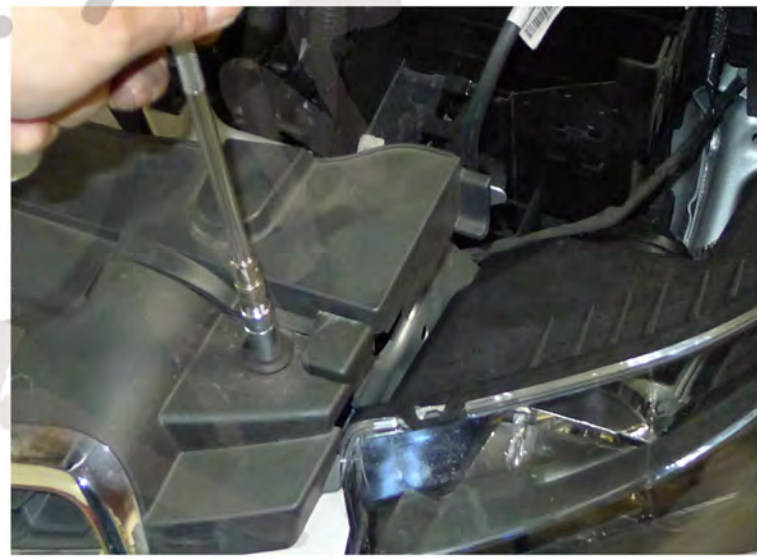

38. Tighten the (2) 10mm bolts



39. Tighten the (2) 10mm bolts




40. Replace the bumper light socket



41. Tighten the (3) T30 screws



42. Tighten the (8) T20 screws
Please repeat the steps from 1 to 42 for the opposite side

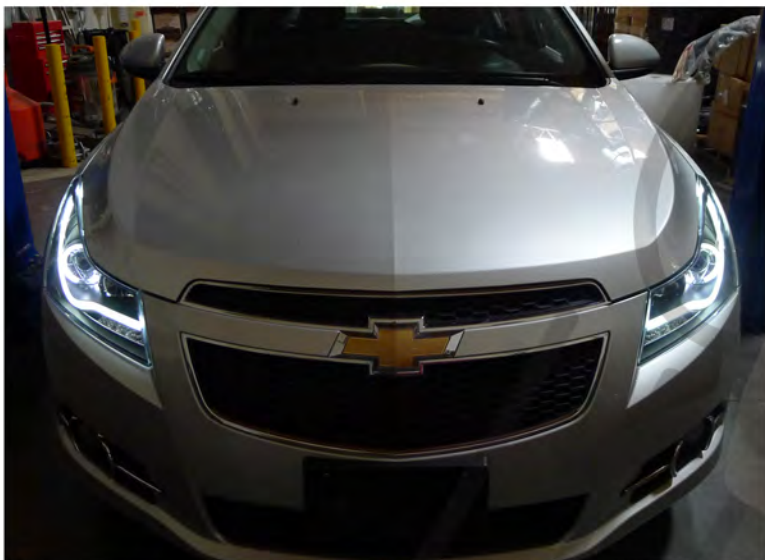

43. The installation now is complete