

SPEC-D *Tuning*

2013 AND UP SCION FR-S PROJECTOR HEADLIGHTS INSTALLATION INSTRUCTIONS

If you experience any difficulties that the instruction did not cover, Please seek assistance at a local automotive shop

Please wear protection before you work on any vehicle.



An assistant is useful when removing the front bumper from your vehicle.

Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.

Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

TOOLS AND SUPPLIES REQUIRED

3/8" Drive Ratchet

6" Extension

10mm Socket

Phillips Screwdriver

Trim Pad Remover

If your Headlight is Halo type, you also need:

Wire Stripper

Wire Crimper

4 Blue Quick Splice Wire Connectors

4 Blue Male Quick Wire Connectors

4 Blue Female Quick Wire Connectors

2 Red Wires (8 inch)

2 Black Wires (8 inch)

Product Part Numbers:

LHP-FRS10JM-TM

LHP-FRS10-TM

LHP-FRS10G-TM



2013 AND UP

SCION FR-S PROJECTOR HEADLIGHTS

INSTALLATION INSTRUCTIONS

If you experience any difficulties that the instruction did not cover, Please seek assistance at a local automotive shop

Please wear protection before you work on any vehicle.



An assistant is useful when removing the front bumper from your vehicle.

Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.

Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.



1. (6) plastic clips and (2) 10mm bolts location



2. Remove the (2) 10mm bolts




3. Remove the (6) plastic clips



4. (3) plastic clips location



5. Plastic clip location

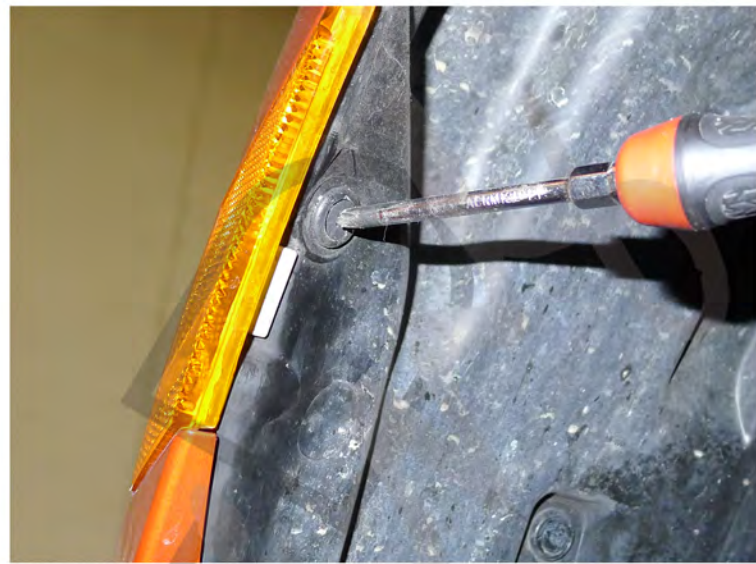

6. Remove the plastic clip



7. Pull the fender liner aside



8. Remove the turn signal light socket



9. Remove the bumper light



10. Disconnect the bumper light harness



11. Remove the plastic clip




12. (5) 10mm bolts and (2) plastic clips location



13. Remove the (5) 10mm bolts



14. Remove the (2) plastic clips

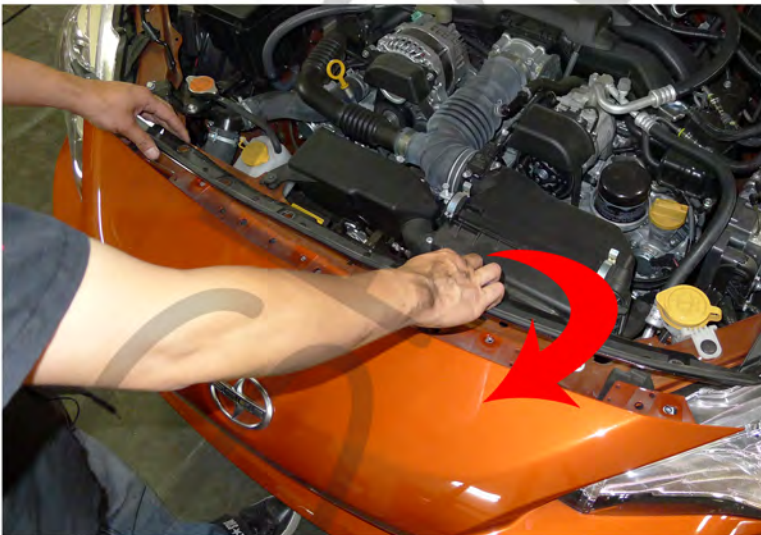

15. Remove the metal bracket




16. Remove the front bumper



17. 10mm bolt location



18. Remove the 10mm bolt

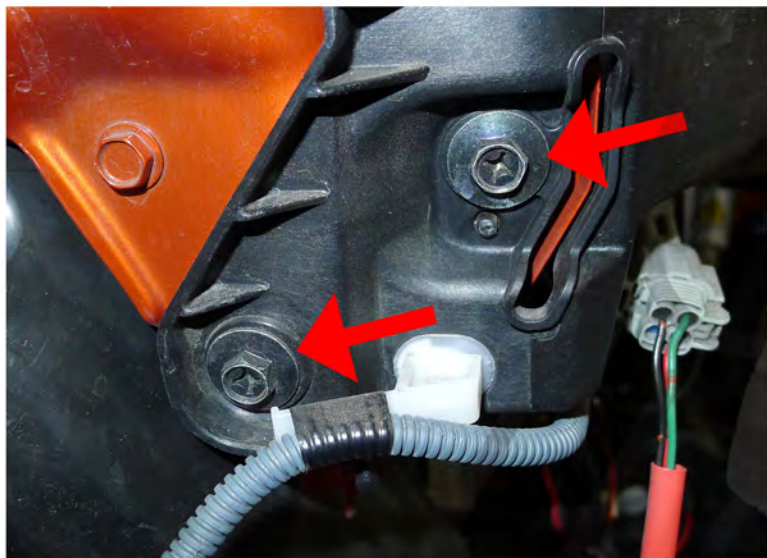

19. (2) 10mm bolts location



20. Remove the (2) 10mm bolts



21. Remove the 10mm bolt



22. Remove the headlight bracket



23. Remove the plastic clip



24. Remove the headlight



25. Disconnect the headlight harness



26. Place the new headlight in the stock location



27. Tighten the 10mm bolt



28. Replace the plastic clip



29. Replace the headlight bracket



30. Tighten the 10mm bolt




31. Tighten the (2) 10mm bolt




32. Connect the headlight harness


Please see the "Halo and L. E. D. headlights installation instructions"
If your headlights don't have Halo and L. E. D. You can skip the installation instruction.

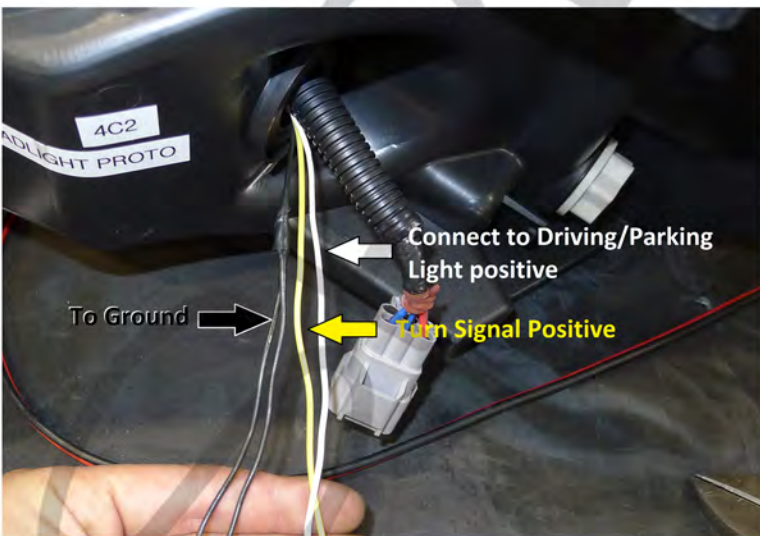

33. Wiring

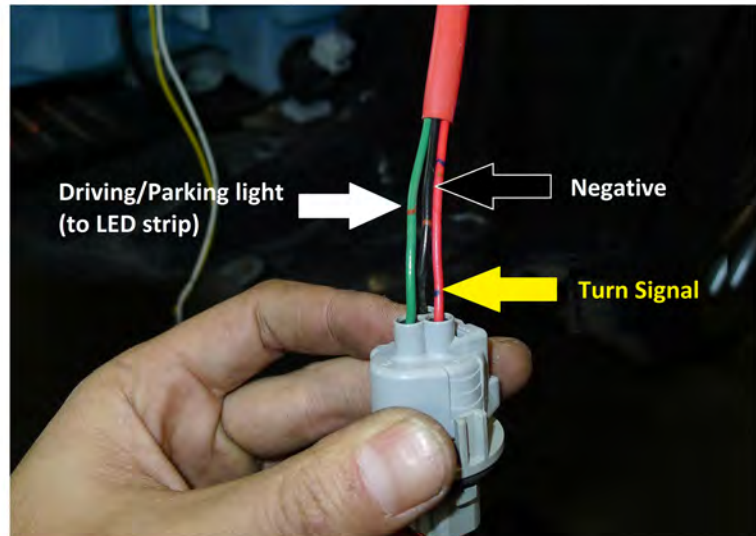

34. Wiring

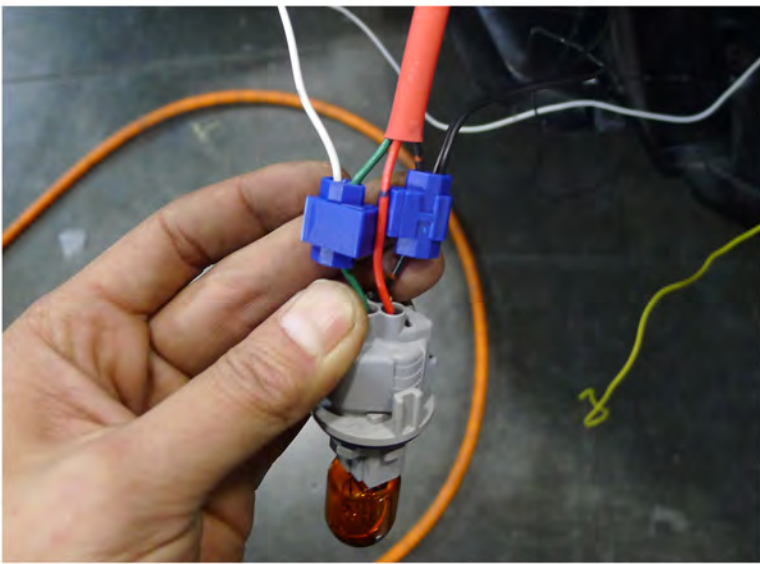

35. Wiring




36. Replace the front bumper



37. Replace the impact absorbing foam



38. Replace the (2) plastic clips

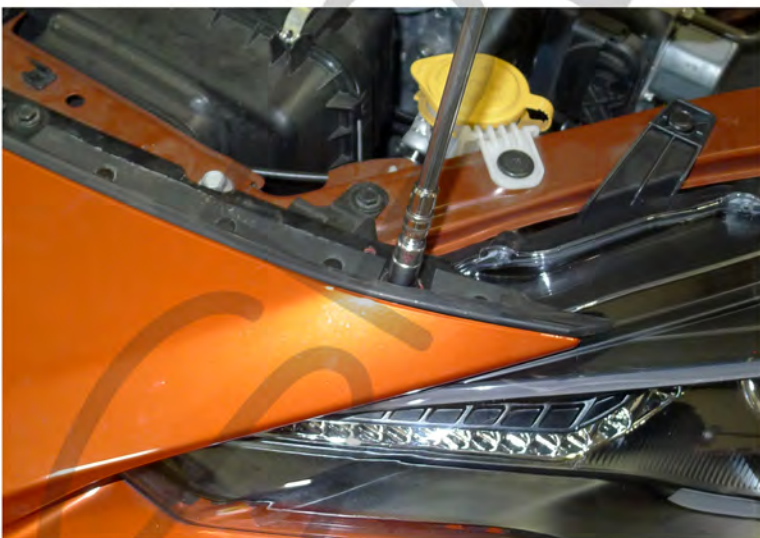

39. Tighten the (5) 10mm bolts



40. Replace the plastic clip




41. Connect the bumper light harness



42. Replace the bumper light



43. Replace turn signal light socket

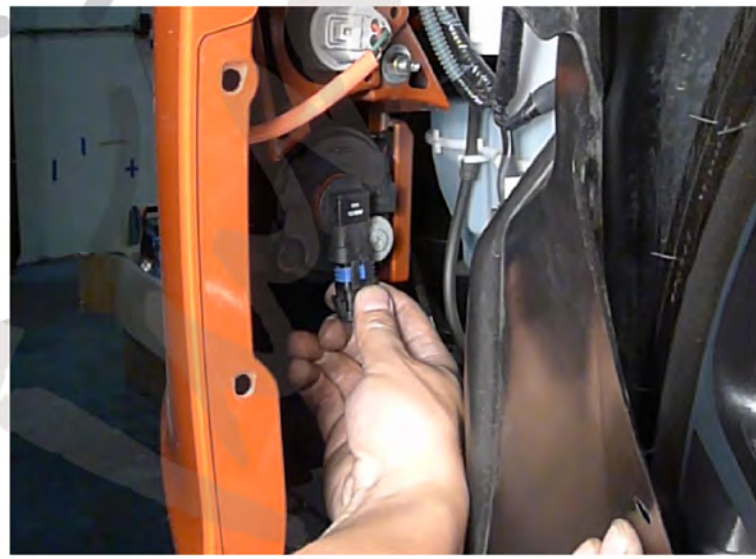

44. Connect the fog light harness




45. Replace the plastic clip



46. Replace the (3) plastic clips



47. Tighten the (2) 10mm bolts

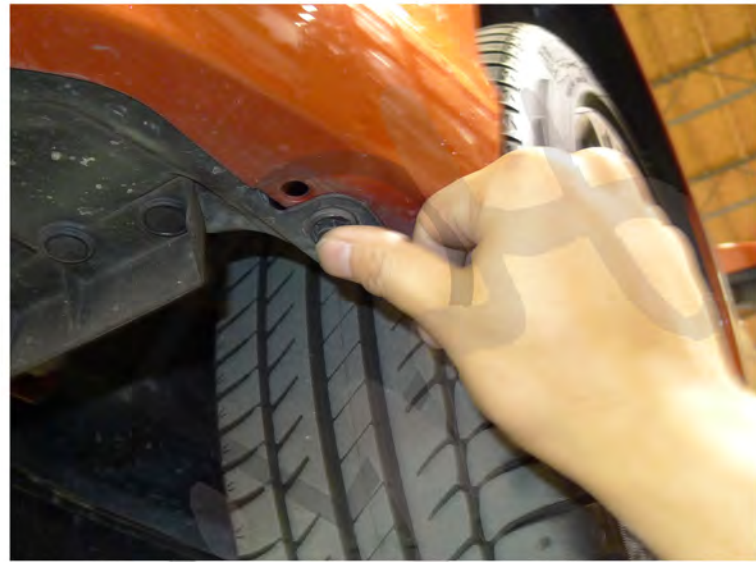

48. Replace the (9) plastic clips
Please repeat the steps from 1 to 48 for the opposite side



49. The installation now is complete