

SPEC-D *Tuning*

2001-2005 VOLKSWAGEN PASSAT PROJECTOR HEADLIGHTS INSTALLATION INSTRUCTIONS



- *If you experience any difficulties that the instruction did not cover, Please seek local auto shop for advise.
- *Please wear protection before you work on your vehicle.
- *An assistant is helpful when removing the front bumper.
- *Please be careful while working with the bumper or body part to avoid scratching.
- *Do not make direct contact with the halogen bulb or the wire assembly until the unit has cooled down after use.

TOOLS AND SUPPLIES REQUIRED

Phillips Screwdriver	3/8" Drive Extensions (3 to 6 inches)	T30 Torx Socket	If your Headlight is Halo type, you also need:	4 Blue Male Quick Wire Connectors
Flat Tip Screwdriver	1/4" Drive Extensions (3 to 6 inches)	T25 Torx Socket	Wire Stripper	4 Blue Female Quick Wire Connectors
3/8" Drive Ratchet	8mm Socket		Wire Crimper	2 Red Wires (8 inch)
1/4" Drive Ratchet	10mm Socket		4 Blue Quick Splice Wire Connectors	2 Black Wires (8 inch)

Product Part Numbers:

LHP-PAS01JM-TM

LHP-PAS01-TM



2001-2005 VOLKSWAGEN PASSAT PROJECTOR HEADLIGHTS INSTALLATION INSTRUCTIONS



If you experience any difficulties that the instruction did not cover, Please seek local auto shop for advise.
Please wear protection before you work on your vehicle.
An assistant is helpful when removing the front bumper.
Please be careful while working with the bumper or body part to avoid scratching.
Do not make direct contact with the halogen bulb or the wire assembly until the unit has cooled down after use.



1. Open the hood, Remove the cover




2. Remove two T30 bolts



3. Unlock two clips from the hood latch cover then remove the cover




4. Unlock the hood latch

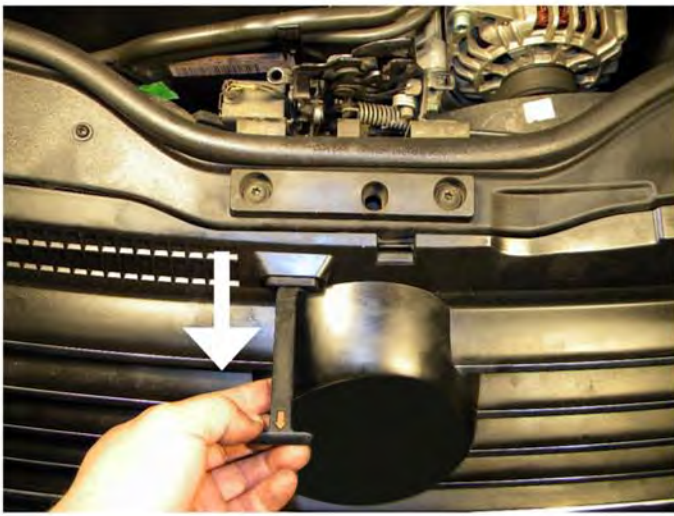

5. Pull out the latch



6. Remove the front grill

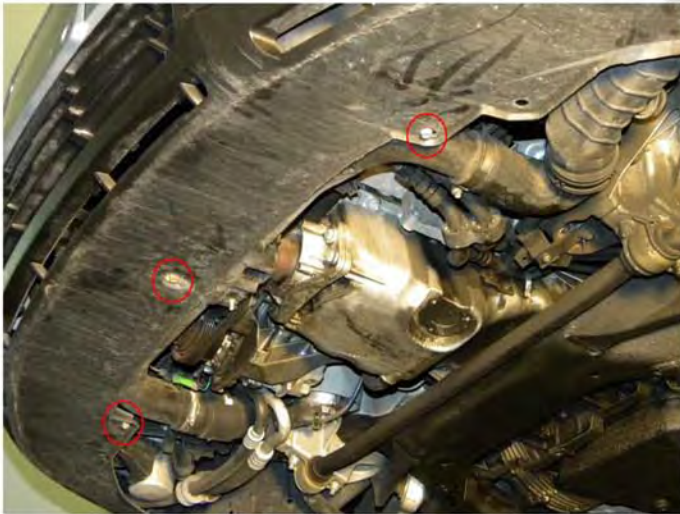

7. Remove three 10mm bolts underneath the bumper



8. Remove four T25 bolts from the side of the bumper



9. Remove four T30 bolts



10. Disconnect the driving light socket



11. Disconnect fog light socket



12. Remove the front bumper



13. Remove five T30 bolts from the front bumper support



14. Remove the front bumper support



15. Remove cover



16. Remove four 8mm headlight bolts




17. Disconnect headlight harness



18. Remove headlight



19. Remove two nuts from the OEM headlight

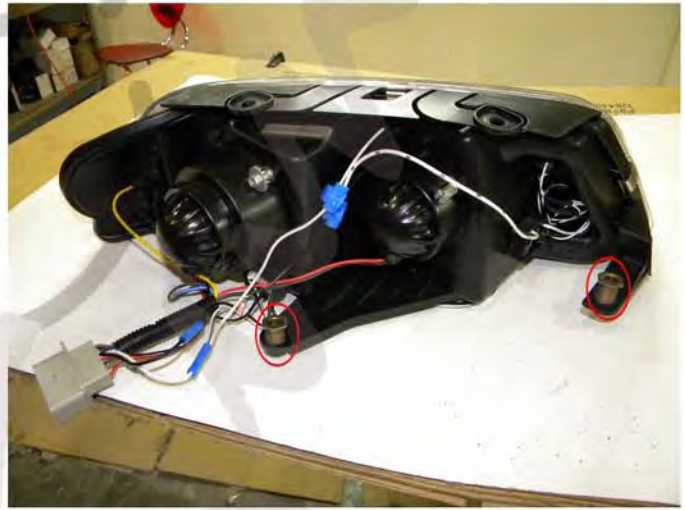

20. Install on the TM projector headlight



21. Install headlight



22. Install front bumper support



23. Connect driving light socket
Please see the "Halo and L.E.D installation instructions"
If your headlights don't have HALO or L.E.D. You can skip



24. Connect fog light socket




25. Install front bumper



26. Install four T30 bolts




27. Install four T25 bolts

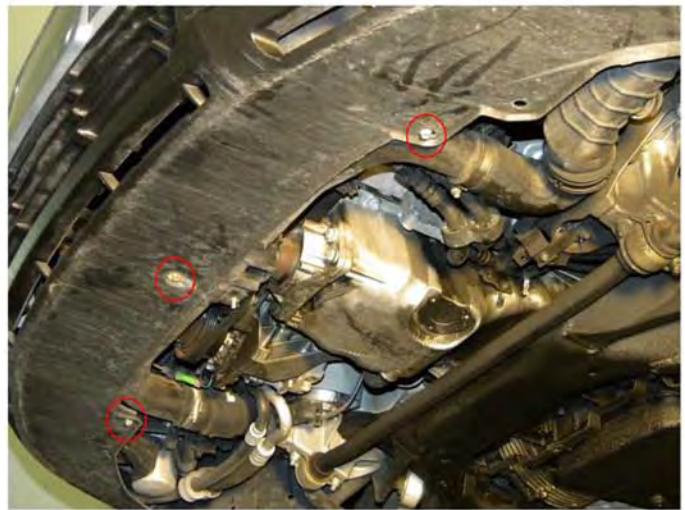

28. Install three 10mm bolts



29. Install the front grill

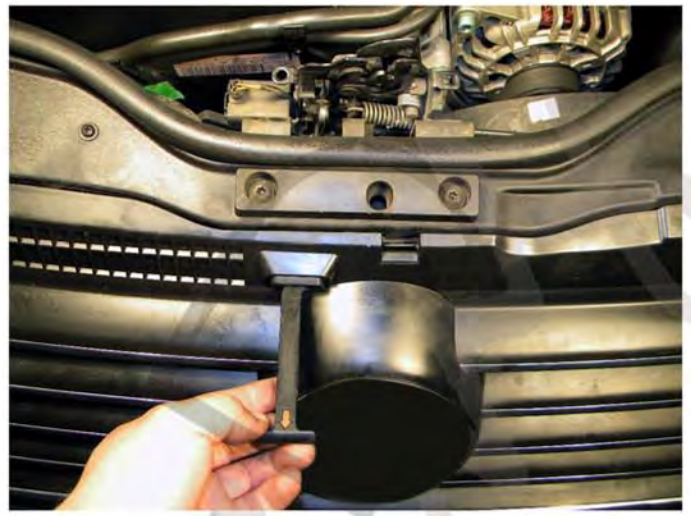

30. Lock the hood latch



31. Install hood latch cover



32. Install two T30 bolts



33. Install the cover
please repeat the picture order from 1 to 33 for the opposite side



34. The installation is now complete