

INSTALLATION & CARE

2007-2014 CHEVY TAHOE/SUBURBAN&GMC YUKON/DENALI TAIL LIGHT INSTALLATION INSTRUCTION

BEFORE INSTALLATION:

- If you experience any difficulties that the instructions did not cover, please seek assistance at a local automotive shop.
- Please wear proper protective equipment before you work on any vehicle.
- An assistant is recommended when removing the front bumper from your vehicle.
- Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

TOOLS AND SUPPLIES REQUIRED

Plastic Pry Bar	Phillips Screwdriver		
			

PRODUCT NUMBER

LT-DEN07CLED-SQ-RS
 LT-DEN07GLED-SQ-RS
 LT-DEN07JMLED-SQ-RS
 LT-DEN07BKLED-SQ-RS
 LT-DEN07RLED-SQ-RS

LET'S START THE INSTALLATION




STEP 1

Remove the two phillips head screws



STEP 2

Disconnect the tail light harness from underneath the rear bumper

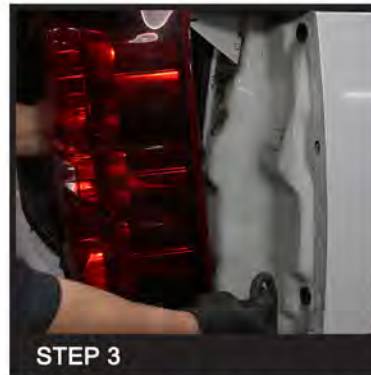

STEP 3

Unseat and remove the factory tail light housing



STEP 4

Seat the new headlight assembly in place



STEP 5

Reconnect the tail light harness from underneath the rear bumper



STEP 6

Reinstall the two phillips head screws



STEP 7

Please repeat the steps from 1 to 6 for the opposite side



STEP 8

Close the trunk to complete the installation