

INSTALLATION & CARE

2017-2019 FORD F250 FULL LED TAIL LIGHT INSTALLATION INSTRUCTION

BEFORE INSTALLATION:

- If you experience any difficulties that the instructions did not cover, please seek assistance at a local automotive shop.
- Please wear proper protective equipment before you work on any vehicle.
- An assistant is recommended when removing the front bumper from your vehicle.
- Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.


TOOLS AND SUPPLIES REQUIRED

1/4" Ratchet	Alcohol Pads	8 mm Socket	Plastic Pry Bar
			

PRODUCT NUMBER

LT-F25017RLED-TM
 LT-F25017GLED-TM
 LT-F25017BKLED-TM
 LT-F25017BBLED-TM
 LT-F25017JMLED-TM

LET'S START THE INSTALLATION

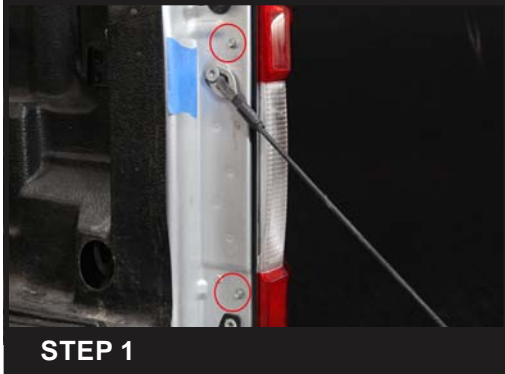

STEP 1

Remove the two 8mm bolts



STEP 2

Unseat the factory tail light housing



STEP 3

Disconnect all three light bulb socket connectors and remove the factory tail light housing




STEP 4

Remove all three light bulb sockets from the factory tail light housing



STEP 5

Remove all three light bulbs from the light socket

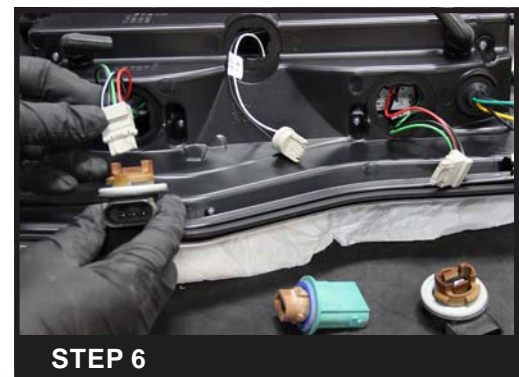

STEP 6

Insert all three connectors from the new tail light housing to the light sockets, (+) to (+)




STEP 7

Reinstall all three light bulb sockets to the new tail light housing



STEP 8

Use alcohol to clean the metal surface to apply the resistor

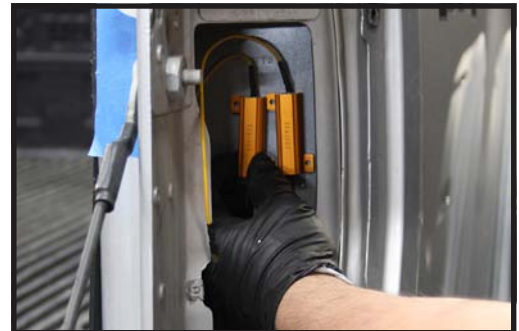


STEP 9

Set the new tail light resistor on the metal area




STEP 10

Connect all the light socket connectors and resistor wires

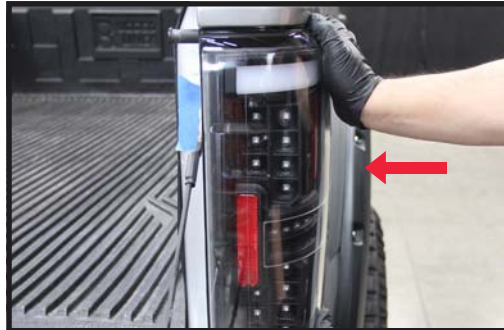


STEP 11

Seat the new headlight assembly in place

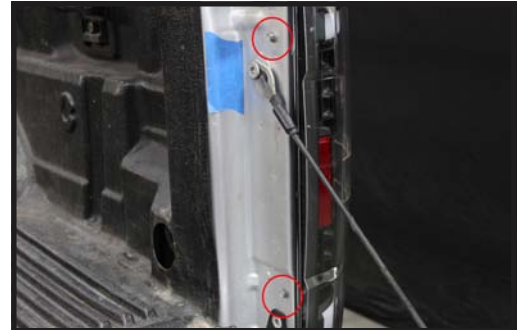

STEP 12

Reinstall the two 8mm bolts

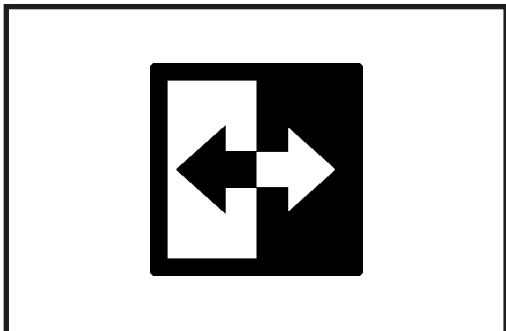

STEP 13

Please repeat the steps from 1 to 12 for the opposite side



STEP 14

Close the tailgate to complete the installation

