

Installation & CARE

2003-2007 CHEVY SILVERADO LED TAIL LIGHTS INSTALLATION INSTRUCTIONS

BEFORE INSTALLATION:

- If you experience any difficulties that the instructions did not cover, please seek assistance at a local automotive shop.
- Please wear protection before you work on any vehicle.
- An assistant is useful when removing the front bumper from your vehicle.
- Please be cautious when working with the bumper or any parts belonging to the vehicles's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

TOOLS AND SUPPLIES REQUIRED

Flathead screwdriver	Plastic Pry bar		
			

PRODUCT NUMBER

LT-SIV03GLED-G2-TM
 LT-SIV03RLED-G2-TM
 LT-SIV03JMLED-G2-TM
 LT-SIV03BBLED-G2-TM
 LT-SIV03BKLED-G2-TM



LET'S START THE INSTALLATION




STEP 1

Remove the two phillips head screws



STEP 2

Uninstall the tail light

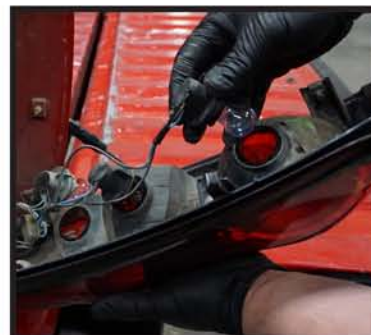

STEP 3

Disconnect the bulb socket from tail light



STEP 4

Remove all the light bulbs from the harness socket except the backup light bulb



STEP 5

Connect the LED connector to the bulb socket




STEP 6

Install the taillight housing




STEP 7

Tighten the two phillips head screws

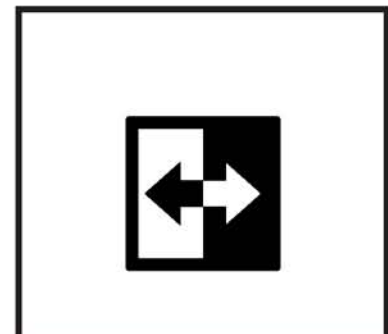

STEP 8

Please repeat the steps from 1 to 7 for the opposite side

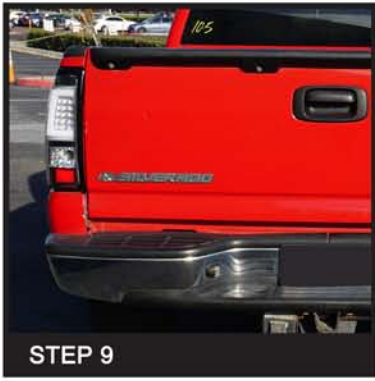

Complete