

INSTALLATION & CARE

2007-2013 CHEVY SILVERADO LED TAIL LIGHT INSTALLATION INSTRUCTION

BEFORE INSTALLATION:

- If you experience any difficulties that the instructions did not cover, please seek assistance at a local automotive shop.
- Please wear proper protective equipment before you work on any vehicle.
- An assistant is recommended when removing the front bumper from your vehicle.
- Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

TOOLS AND SUPPLIES REQUIRED

¼" Ratchet	Plastic Pry Bar	Alcohol Pads	Phillips Screwdriver
			

PRODUCT NUMBER

LT-SIV07RLED-G2-TM
 LT-SIV07GLED-G2-TM
 LT-SIV07BKLED-G2-TM
 LT-SIV07BBLED-G2-TM
 LT-SIV07JMLED-G2-TM

LET'S START THE INSTALLATION



STEP 1

Remove the two phillips head screws



STEP 2

Unseat the factory tail light housing



STEP 3

Remove all three light bulb sockets and remove the factory tail light housing



STEP 4

Remove all three light bulbs from the light sockets



STEP 5

Use alcohol to clean the metal surface to apply the resistor



STEP 6

Set the new tail light resistor on the metal area



STEP 7

Insert the bottom and the middle connectors to the light sockets, (+) to (+)



STEP 8

Install the top socket without connect anything




STEP 9

Connect the resistor wires




STEP 10

Seat the new tail light assembly in place

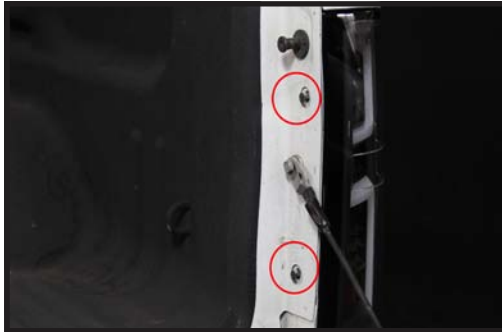

STEP 11

Reinstall the two phillips head screws

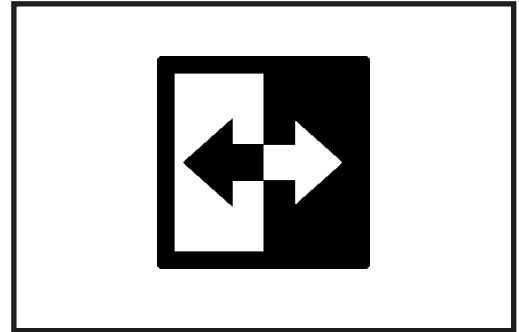

STEP 12

Please repeat the steps from 1 to 11 for the opposite side



STEP 13

Close the tailgate to complete the installation

