

INSTALLATION & CARE

2016-2021 TOYOTA TACOMA LED TAIL LIGHT INSTALLATION INSTRUCTIONS

BEFORE INSTALLATION:

- If you experience any difficulties that the instructions did not cover, please seek assistance at a local automotive shop.
- Please wear proper protective equipment before you work on any vehicle.
- An assistant is recommended when removing the front bumper from your vehicle.
- Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

TOOLS AND SUPPLIES REQUIRED

¼" Ratchet	Trim Pad Remover	10 mm Socket	
			

PRODUCT NUMBER

LT-TAC16JMLED-TM LT-TAC16BBLED-TM
 LT-TAC16RLED-TM LT-TAC16BKLED-TM
 LT-TAC16GLED-TM




LET'S START THE INSTALLATION




STEP 1

Remove the two 10mm bolts

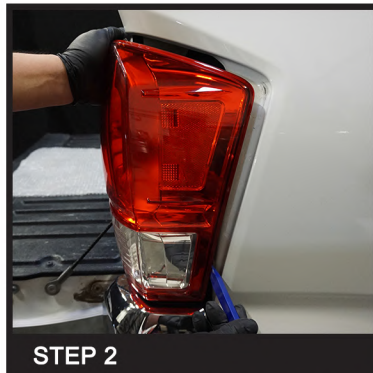


STEP 2

Uninstall the factory tail light housing

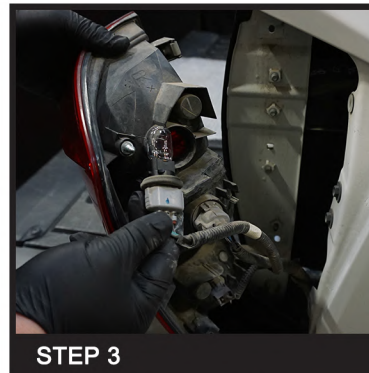

STEP 3

Disconnect the wire connectors

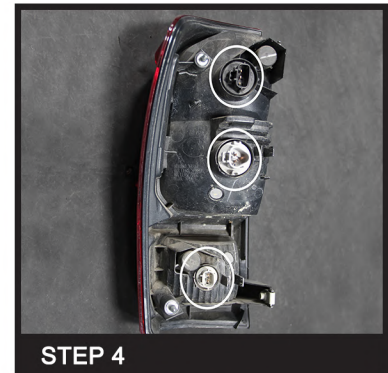

STEP 4

Remove all 3 light sockets from the factory tail light housing




STEP 5

Remove the brake light bulbs and the signal light bulbs from the light socket



STEP 6A

Install the light sockets

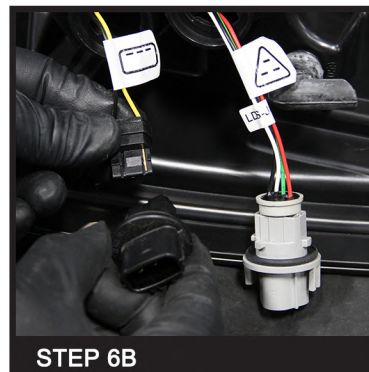

STEP 6B

Make sure to insert to the same shape shown on the label



STEP 6C

Make sure to insert to the same shape shown on the label



STEP 6D

Make sure to insert to the same shape shown on the label




STEP 7

Use alcohol to clean the metal surface to apply the resistor




STEP 8

Set the new tail light resistor on the metal surface

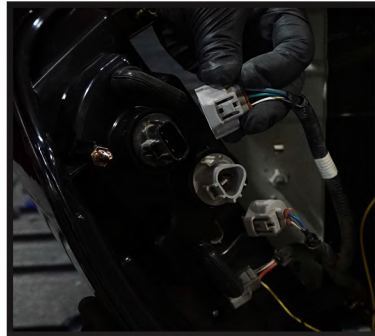

STEP 9

Connect all light socket connectors and resistor wires

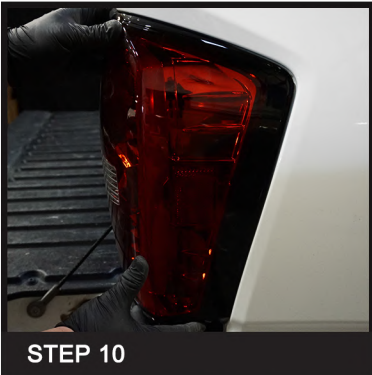

STEP 10

Install the new tail light housing



STEP 11

Tighten the two 10mm bolts



STEP 12

Please repeat the steps from 1 to 11 for the opposite side



STEP 13

Close the tailgate to complete the installation

INSTALLATION & CARE

2016-2021 TOYOTA TACOMA LED TAIL LIGHT INSTALLATION INSTRUCTIONS

BEFORE INSTALLATION:

- If you experience any difficulties that the instructions did not cover, please seek assistance at a local automotive shop.
- Please wear proper protective equipment before you work on any vehicle.
- An assistant is recommended when removing the front bumper from your vehicle.
- Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

2016-2021 TOYOTA TACOMA LED TAIL LIGHT INSTALLATION INSTRUCTIONS



Learn more about custom and factory tail lights we have.