

Installation & CARE

2015-UP CHEVY TAHOE LED TAIL LIGHTS INSTALLATION INSTRUCTION

BEFORE INSTALLATION

- If you experience any difficulties that the instruction did not cover, please seek assistance at local automotive shop.
- Please wear protection before you work on any vehicle.
- An assistant is useful when removing the front bumper from your vehicle.
- Please be cautious when working with the bumper or any parts belonging to the vehicles's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

TOOLS AND SUPPLIES REQUIRED

ST15 screwdriver	Plastic Pry bar		
			


PRODUCT NUMBER

LT-TAH15BBLED-TM
LT-TAH15JMLED-TM
LT-TAH15RGLLED-TM

LT-TAH15RLED-TM
LT-TAH15BKLED-TM




LET'S START THE INSTALLATIONS

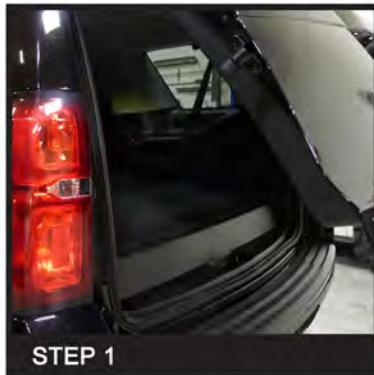

STEP 1

Lift the tailgate

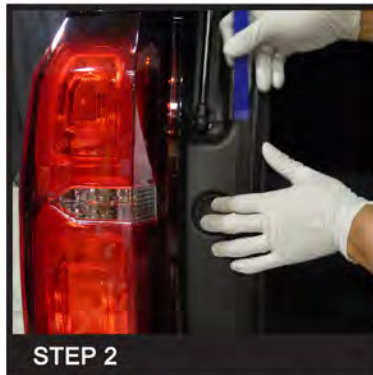

STEP 2

Pry across edges to unfasten tail light cover




STEP 3

Remove tail light cover




STEP 4

Remove two ST15 screws

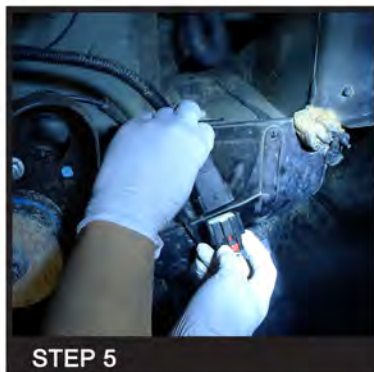


STEP 5

Disconnect tail light connector harness under vehicle

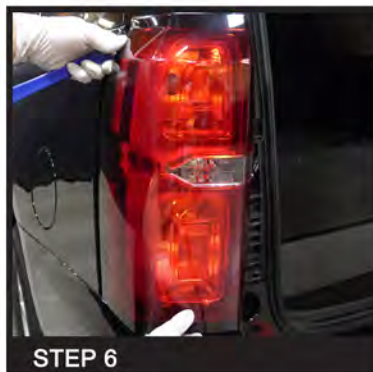


STEP 6

Unseat tail light

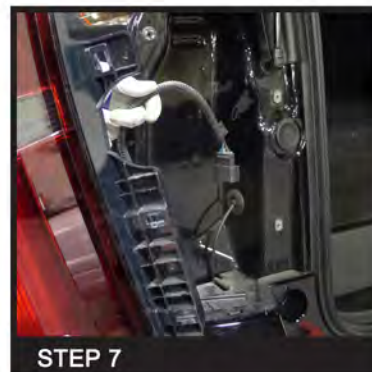

STEP 7

Uninstall tail light and connector harness

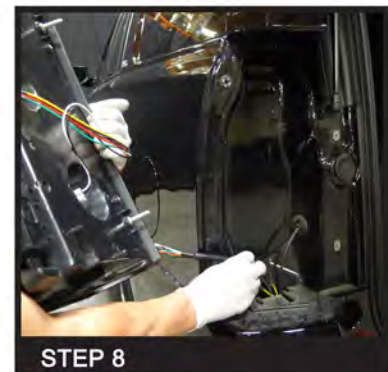


STEP 8

Route LED tail light harness through bumper



STEP 9

Install tail light housing

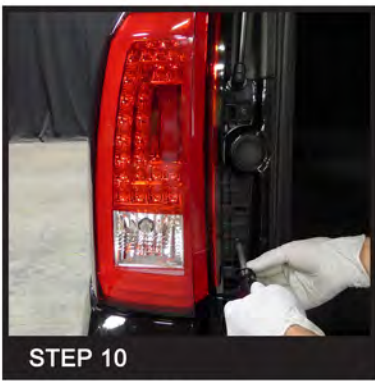


STEP 10

Reinstall two ST15 screws




STEP 11

Reinstall tail light cover

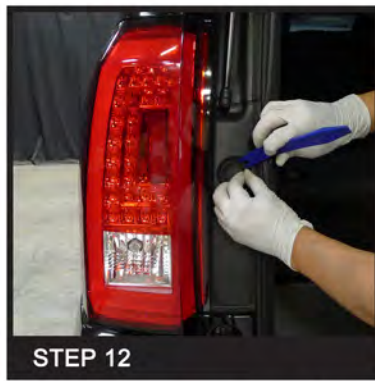

STEP 12

To reinstall circular grommet, gently pull along edges until it is seated correctly in the tail light cover

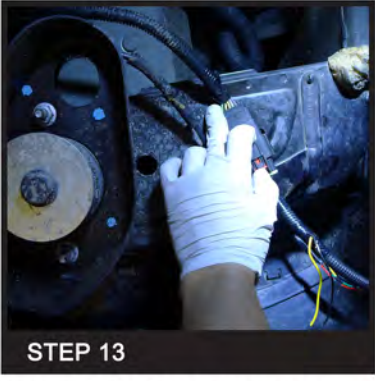


STEP 13

Connect LED tail light connector to body connector



STEP 14

Repeat steps 2-13 for other side

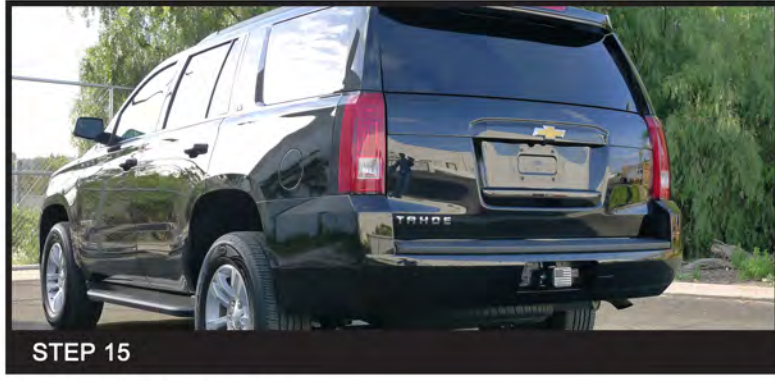

STEP 15

The installation is now complete