

Installation & CARE

SNAP-FIT UNIVERSAL ROOF RACK

BEFORE INSTALLATION

- If you experience any difficulties that the instruction did not cover, please seek assistance at local automotive shop.
- Please wear protection before you work on any vehicle.
- An assistant is useful when removing the front bumper from your vehicle.
- Please be cautious when working with the bumper or any parts belonging to the vehicles's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

TOOLS AND SUPPLIES REQUIRED

Keys	Allen Wrench		
			

PRODUCT NUMBER

RRB-1005
RRB-1006
RRB-S1005
RRB-S1006



LET'S START THE INSTALLATIONS



STEP 1

Before installation



STEP 2

Place the bar on the top of the car between the 2 rails



STEP 3

Unlock the cover




STEP 4

Remove the plastic cover



STEP 5

Insert the small end of the rubber strap into the slot

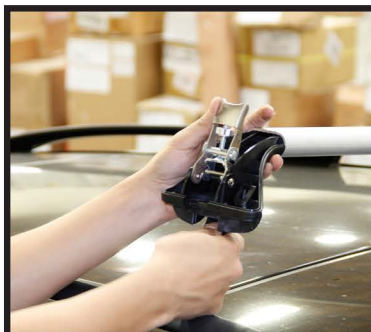

STEP 6

Hook the small end of the strap onto the hook




STEP 7

Remove the plastic cover




STEP 8

Tighten the screw to secure the strap

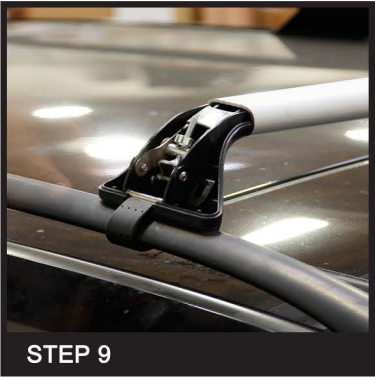

STEP 9

Strap wrapped in place

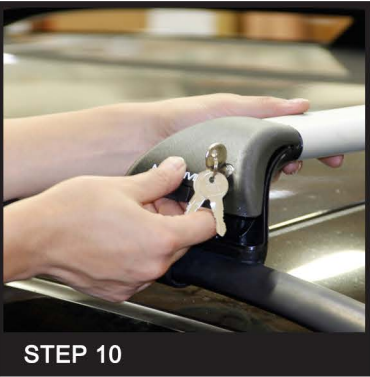

STEP 10

Replace the plastic cover



STEP 11

Lock the cover in place



STEP 12

The installation now is complete