

# SPEC-D *Turning*

## 2008-2011 MERCEDES BENZ W204 C CLASS 3D TAIL LIGHTS

### INSTALLATION INSTRUCTIONS

If you experience any difficulties that the instruction did not cover, Please seek assistance at a local automotive shop

Please wear protection before you work on any vehicle.



An assistant is useful when removing the front bumper from your vehicle.

Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.

Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

#### TOOLS AND SUPPLIES REQUIRED



#### Product Part Numbers:

LT-BW20408RGLED-APC

LT-BW20408GLED-APC

LT-BW20408RCLED-APC



## MERCEDES BENZ W204 C CLASS 3D TAIL LIGHT INSTALLATION INSTRUCTIONS

If you experience any difficulties that the instruction did not cover, Please seek assistance at a local automotive shop

Please wear protection before you work on any vehicle.



An assistant is useful when removing the front bumper from your vehicle.

Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.

Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.



1. Before



2. Lift trunk floor



3. (2) 10mm plastic nut location



4. Remove (2) 10mm plastic nuts



5. Remove the (2) 10mm plastic nuts



6. Pull up to remove the plastic trim



7. Remove the plastic clip



8. Remove the access hole over



9. Plastic hook location



10. Remove the plastic hook retaining pin



11. Pull the trunk liner aside



12. Remove the plastic hook



13. Remove the 8mm nut



14. Remove the (3) 8mm nuts



15. Remove the (3) 8mm nuts




16. Remove the (3) 8mm nuts




17. Remove the factory taillight



18. Place the LED taillight in the stock location

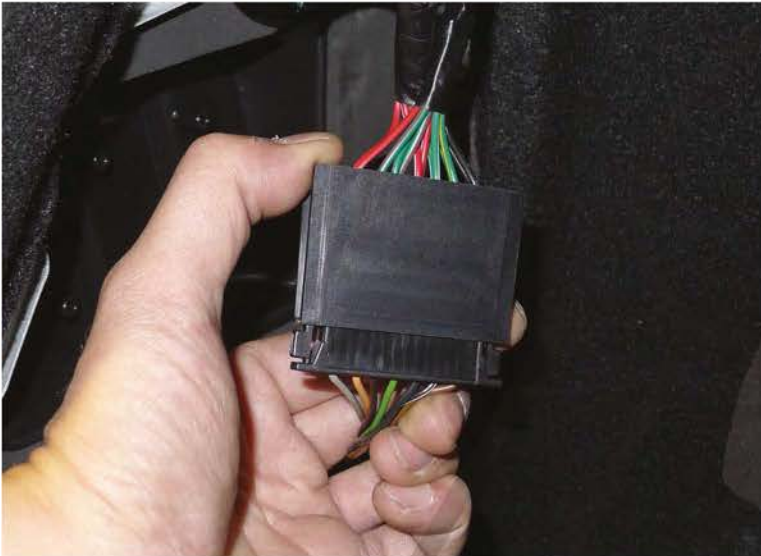

19. Connect the taillight harness  
please see the "L.E.D. tail lights installation instruction"  
If your tail lights don't have L.E.D. You can skip the installation instruction.

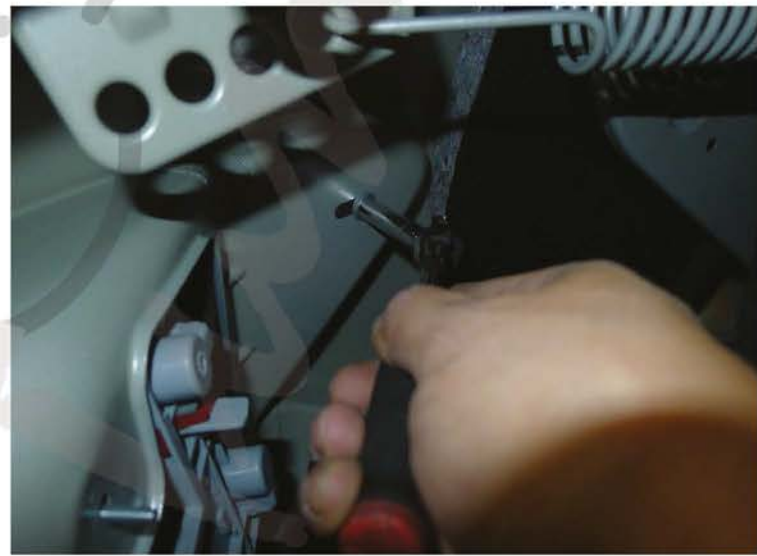

20. Tighten the (4) 8mm nuts



21. Replace the access hole cover



22. Replace the plastic hook and retaining pin



23. Replace the plastic clip



24. Replace the plastic trim



25. Tighten the (2) 10mm plastic nuts  
Please repeat the steps from 1 to 25 for the opposite side



26. The installation now is complete