

# SPEC-D *Tuning*

## 2005-2010 CHEVY COBALT **LED TAILLIGHTS** INSTALLATION INSTRUCTIONS

If you experience any difficulties that the instruction did not cover, Please seek assistance at a local automotive shop

Please wear protection before you work on any vehicle.



An assistant is useful when removing the front bumper from your vehicle.

Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.

Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

### TOOLS AND SUPPLIES REQUIRED



1/4" Ratchet

11mm Socket

10mm Socket

### Product Part Numbers:

LT-COB052RLED-TM

LT-COB052GLED-TM





# 2005-2010 CHEVY COBALT LED TAIL LIGHTS INSTALLATION INSTRUCTIONS

If you experience any difficulties that the instruction did not cover, Please seek assistance at a local automotive shop

Please wear protection before you work on any vehicle.



An assistant is useful when removing the front bumper from your vehicle.

Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.

Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.



1. Before



2. Thumb screws location



3. Remove the thumb screws



4. Peel back the trunk liner





5. Remove the taillight socket



6. Remove the (3) 10mm nuts




7. Remove the factory taillight



8. Place the LED taillight into position



9. Tighten the (3) 10mm nuts

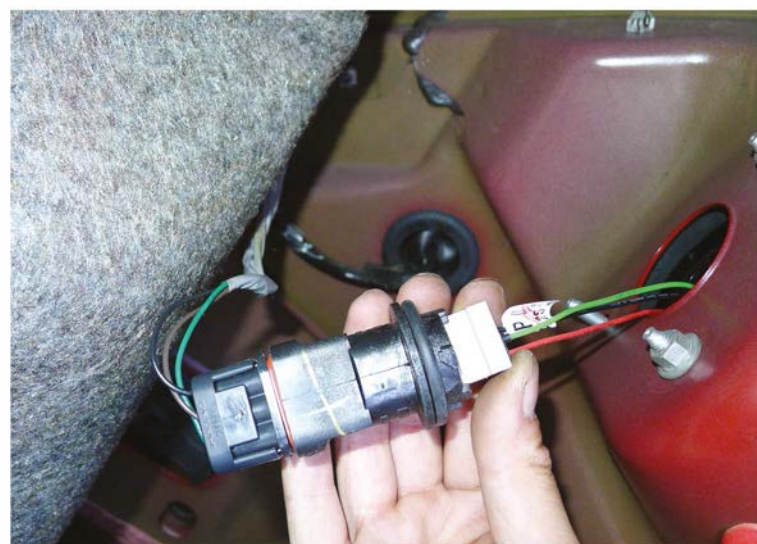

10. Connect the LED taillight harness to the taillight socket  
please see the " L.E.D. tail lights installation instruction"  
If your tail lights don't have L.E.D. You can skip the installation instruction.





11. Install the taillight socket



12. Reverse the light location



13. Remove the reverse light socket



18. Remove the (2) 11mm nuts



15. Remove the factory reverse light from the trunk lid




16. Place the new reverselight housing into the position





17. Tighten the (2) 11mm nuts

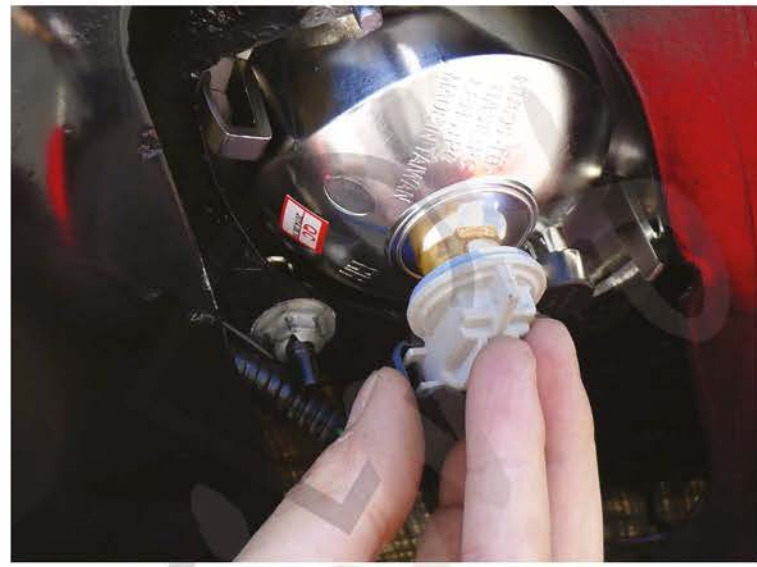

18. Install the reverse light socket  
Please repeat the steps from 1 to 18 for the opposite side



17. The installation now is complete