

2000-2006 CHEVY TAHOE DENALI LED TAIL LIGHTS INSTALLATION INSTRUCTIONS

If you experience any difficulties that the instruction did not cover, Please seek assistance at a local automotive shop

Please wear protection before you work on any vehicle.

 \bigwedge

An assistant is useful when removing the front bumper from your vehicle.

Please be cautions when working with the bumper or any parts belonging to the vehicles's body to prevent scratching.

Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

TOOLS AND SUPPLIES REQUIRED

Phillips Screwdriver





2000-2006 CHEVY TAHOE DENALI LED TAIL LIGHTS INSTALLATION INSTRUCTIONS

If you experience any difficulties that the instruction did not cover, Please seek assistance at a local automotive shop

Please wear protection before you work on any vehicle.

An assistant is useful when removing the front bumper from your vehicle.

Please be cautions when working with the bumper or any parts belonging to the vehicles's body to prevent scratching.

Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.



1. Remove the (2) phillips head screws




2. Remove the tail light



3. Remove the tail light sockets from the tail light



4. Remove the brake light bulbs

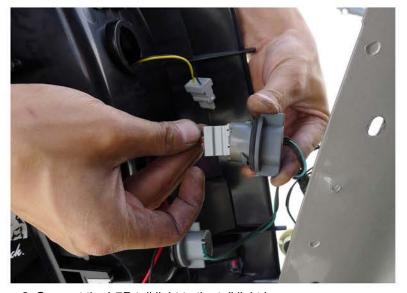

6. Connect the LED tail light to the tail light harness

Please see the "L.E.D. tail lights installation instructions"

If your tail lights don't have L.E.D. you can skip the installation instructions.



6. Connect the LED tail light to the tail light harness



7. Place the tail light socket into the LED tail light



8. Place the LED tail light in the stock location and tighten the (2) phillips head screws



9. Please repeat the steps in order from 1 to 8 for the opposite side. The installation is now complete.