

SPEC-D *Tuning*

1997-2003 FORD F150 STYLESIDE TAIL LIGHTS INSTALLATION INSTRUCTIONS



If you experience any difficulties that the instruction did not cover, Please seek local auto shop for advise. Please wear protection before you work on your vehicle.

An assistant is helpful when removing the front bumper.

Please be careful while working with the bumper or body part to avoid scratching.

Do not make direct contact with the halogen bulb or the wire assembly until the unit has cooled down after use.

TOOLS AND SUPPLIES REQUIRED

Pocket Flat Tip Screwdriver

1/4" Drive Ratchet

8mm Deep Socket

Handy Remover

Product Part Numbers:

LT-F150973D-TM

LT-F150973DCF-TM

LT-F150973DJM-TM

LT-F15097CLED-TM

LT-F15097GLED-TM

LT-F15097JMLED-TM

LT-F15097RLED-TM




1997-2003 FORD F150 **STYLESIDE TAIL LIGHTS** INSTALLATION INSTRUCTIONS



If you experience any difficulties that the instruction did not cover, Please seek local auto shop for advise.
Please wear protection before you work on your vehicle.
An assistant is helpful when removing the front bumper.
Please be careful while working with the bumper or body part to avoid scratching.
Do not make direct contact with the halogen bulb or the wire assembly until the unit has cooled down after use.




1. Open the tailgate first

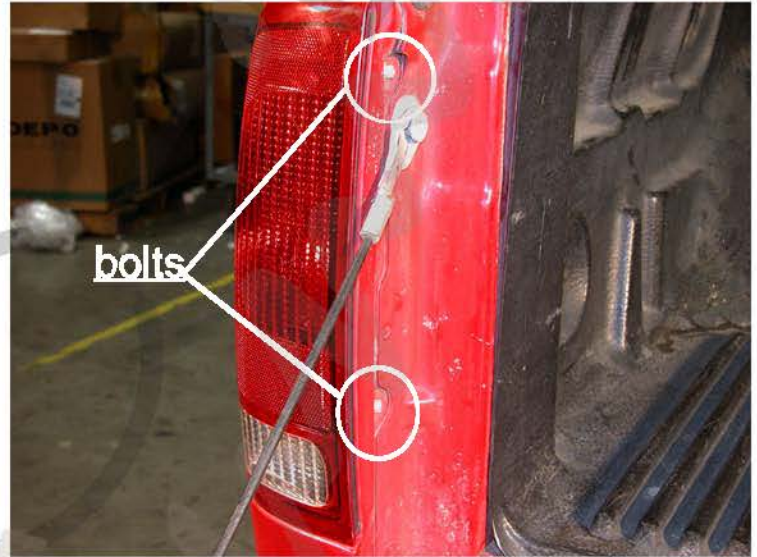


2. Remove two 8mm bolts



3. Use handy remover to pull out the tail light

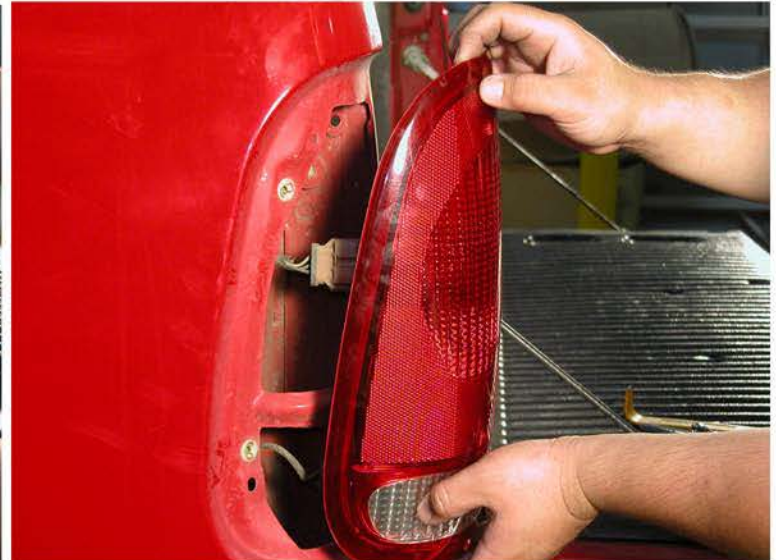

4. Pull out the tail light slightly, just enough to see the back of the tail light

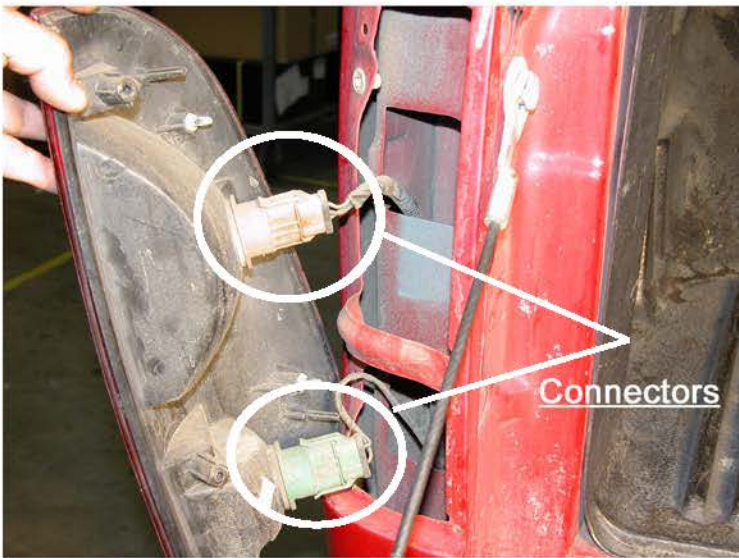

5. Disconnect all the connectors



6. After disconnecting all the connectors, remove the OEM tail light



7. Stick the relay inside the tail light spot, and connect all the connectors with the new tail light

please see the "L.E.D. TAIL LIGHTS installation instructions"
If your Tail lights don't have L.E.D. You can skip the installation instructions.



8. Install the new tail light back to its original spot



9. Install the two bolts to stabilize the tail light
(Please do the other side follow the picture order from 1 to 9)



10. The installation is now complete