

1998-2005 LEXUS GS300 400 L.E.D. TAIL LIGHTS

INSTALLATION INSTRUCTIONS




If you experience any difficulties that the instruction did not cover, Please seek local auto shop for advise. Please wear protection before you work on your vehicle.

An assistant is helpful when removing the front bumper.

Please be careful while working with the bumper or body part to avoid scratching.

Do not make direct contact with the halogen bulb or the wire assembly until the unit has cooled down after use.

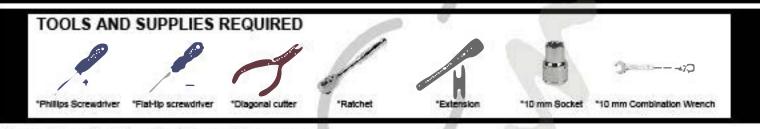

Product Part Numbers:

LT-GS30098GLED-TM LT-GS30098RLED-TM





1998-2005 LEXUS GS300 400 LE.B. LIGHTS INSTALLATION INSTRUCTIONS

 \wedge

If you experience any difficulties that the instruction did not cover, Please seek local auto shop for advise. Please wear protection before you work on your vehicle.

An assistant is helpful when removing the front bumper.

Please be careful while working with the bumper or body part to avoid scratching.

Do not make direct contact with the halogen bulb or the wire assembly until the unit has cooled down after use.



1. Remove the dip



2. Open the plastic cover Inside the plastic cover, there are three screws



3. Remove two sciew covers



4. Then remove two botts



Remove the three screws which are inside the plastic cover shown earlier



Gently pull out the OEM tail light slightly, just enough to see the back of the lights



7. Remove the screw on the OEM tail light



 Remove all the sockets by turning them counter clockwise to unlock them



BRETOVE the three bulbs from the sockets



10. Plug the male harness from the L.E.D. tail light to the vehicle sockets by gently pushing them in f a snug fit



11. Replace the socket back into the L.E.O. Tail light please see the 5.E.D. TAIL LIGHTS installation instructions if your Tail lights don't have L.E.D. You can skip the traduition instructions.



12.Gently put the L.E.D. tail light back into vehicle



13.Install the three screws to fasten the tail light



14. Put the plastic cover back into place



15.Install the two bolts (Please repeat the picture order from 1 to 15 for the opposite side)



16. The installation now is complete