

2005-2006 MINI COOPER SLED TAIL LIGHTS

INSTALLATION INSTRUCTIONS

- *If you experience any difficulties that the instructions did not cover, Please seek assistance at local automotive shop.
- *Please wear protection before you work on your vehicle.
- *An assistant is useful when removing the front bumper from your vehicle.
- *Please be cautious when working with the bumper or any parts belonging to the vehicles' body prevent scratching.
- *Do not make direct contact with the halogen bulb or the wire assembly until the unit has cooled down after use.

TOOLS AND SUPPLIES REQUIRED

1/4" Drive Ratchet

10mm Socket

Handy Remover






2005-2006 MINI COOPER S LED TAIL LIGHTS INSTALLATION INSTRUCTIONS

*If you experience any difficulties that the instructions did not cover, Please seek assistance at local automotive shop.

*Please wear protection before you work on your vehicle.

*An assistant is useful when removing the front bumper from your vehicle.




*Do not make direct contact with the halogen bulb or the wire assembly until the unit has cooled down after use.



1. Remove the access panel




2. Remove the 10mm nut

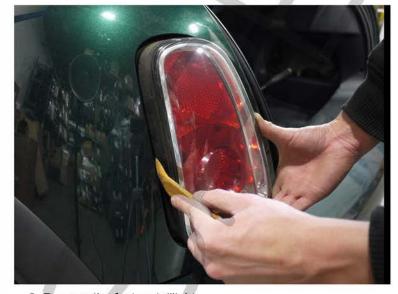

3. Remove the factory taillight



4. Disconnect the factory taillight

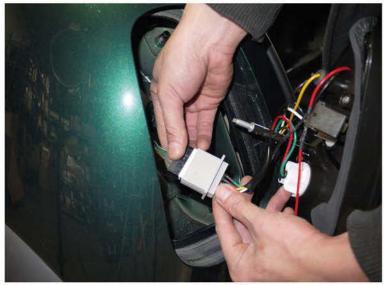

5. Connect the tailight harness to the LED taillight please see the "L.E.D. tail lights installation instructions" If your tail lights don't have L.E.D. you can skip the installation instructions.



6. Place the LED taillight in the factory location



7. Tighten the 10mm nut



8. Please repeat the steps in order from 1 to 7 for the opposite side



9 The installation is now complete

