

SPEC-D *Turning*

2005-2009 FORD MUSTANG LED SEQUENTIAL TAIL LIGHTS INSTALLATION INSTRUCTIONS

If you experience any difficulties that the instruction did not cover, Please seek assistance at a local automotive shop

Please wear protection before you work on any vehicle.



An assistant is useful when removing the front bumper from your vehicle.

Please be cautious when working with the bumper or any parts belonging to the vehicle's body to prevent scratching.

Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

TOOLS AND SUPPLIES REQUIRED

Trim Pad Remover

10mm Box Wrench

Product Part Numbers:

LT-MST05CLEL-SQ-TM

LT-MST05RLED-SQ-TM

LT-MST05RGLED-SQ-TM

LT-MST05GLEL-SQ-TM



2005-2009 FORD MUSTANG LED SEQUENTIAL TAIL LIGHTS INSTALLATION INSTRUCTIONS

If you experience any difficulties that the instruction did not cover, Please seek assistance at a local automotive shop

Please wear protection before you work on any vehicle.



An assistant is useful when removing the front bumper from your vehicle.

Please be cautious when working with the bumper or any parts belonging to the vehicles's body to prevent scratching.

Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.



1. Open the trunk, to access the plastic trunk moulding



2. Remove the (6) plastic clips




3. Remove the (6) plastic clips



4. Remove the (6) plastic clips



5. Unplug the taillight harness

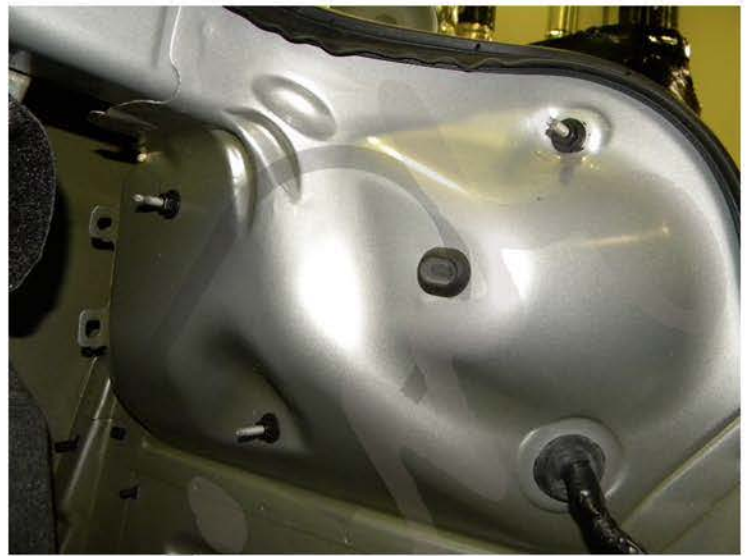


6. Pull away the felt trim



7. Remove the (3) 10mm nuts




8. Push in the harness rubber seal

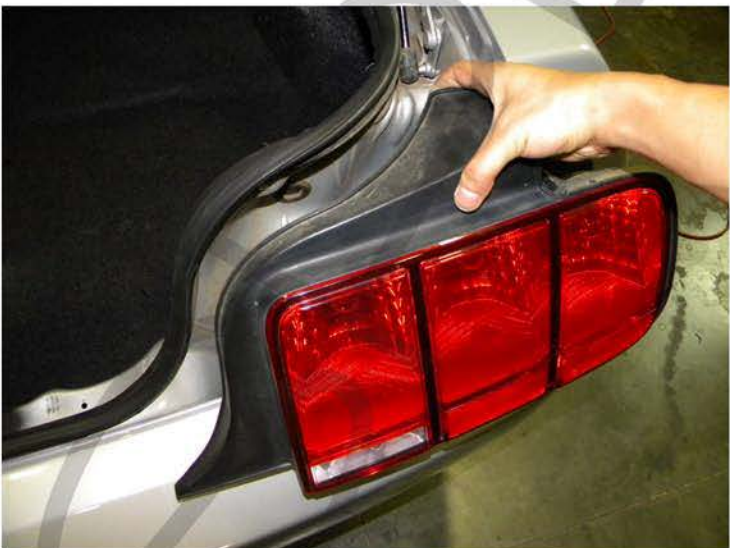

9. Remove the stock tail light




10. Secure the LED resistor block and harness to the body with double sided foam tape

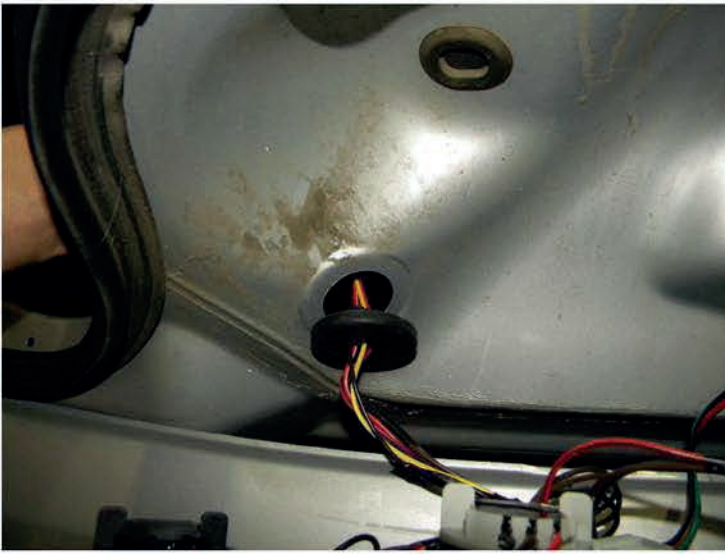

11. Run Tail light harness through body work

please see the "L.E.D. tail light installation instruction"
If your tail lights don't have L.E.D. You can skip the installation instruction.

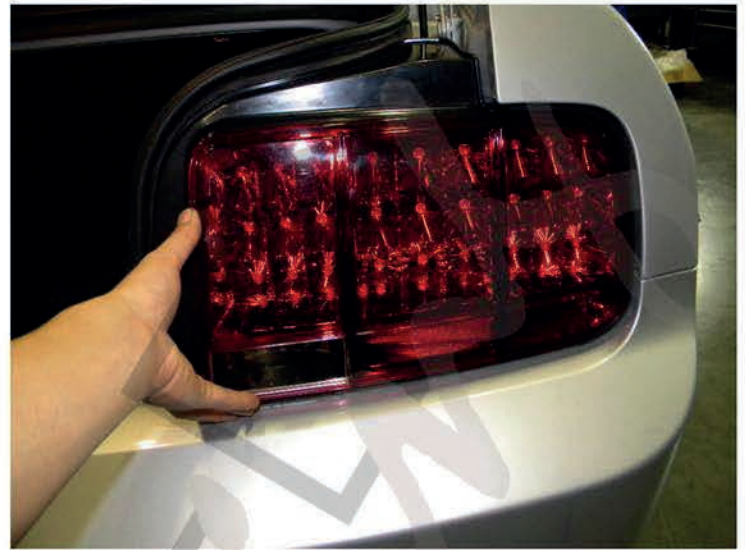

12. Place Sequential LED tail light into position



13. Tighten (3) 10mm bolts



14. Replace Plastic trunk moulding



15. Replace (6) plastic clips



16. Please repeat the steps in order from 1 to 15 for the opposite side
The installation is now complete