


# Installation Instructions

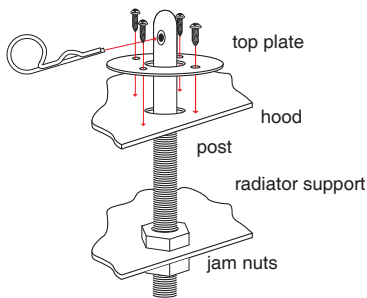

1. Select an accessible area along the radiator support housing.
2. Drill clearance holes for the threaded post to pass through.
3. Attach post to the radiator support with a nut above and below the support hole, but do not tighten.
4. Adjust the height of the post until the tip just makes contact when the [hood](#) is closed. Put a dab of grease on the tip of the post to mark the underside of the hood.
5. Drill a hole in the hood for the post to fit through.
6. Install post and mounting plate as shown in the diagram (drill pilot holes for screws)
7. Adjust post and slide pin into place.

*Installation tip:* You may drill a hole for the hood pin slightly larger than the post to allow for adjustment from side to side.