


SPECTRE™

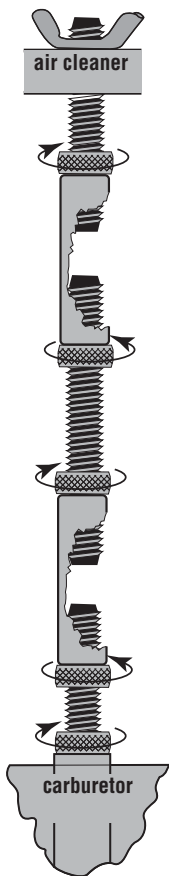

INSTRUCTIONS

1. Thread the appropriate stud into carburetor and tighten in place with nut.
2. Add additional couplers and nuts as necessary to reach the desired height above air cleaner lid.
3. At the desired length secure couplers by tightening all nuts as shown.
4. Place air cleaner over stud and tighten in place with wing nut.