

Spohn Performance, Inc.

Part #LX-REL – Rear Sway Bar End Links - 2005+ Chrysler LX, LC & LD


USE OF THIS PRODUCT IS ACCEPTANCE OF SELLER'S DISCLAIMER OF WARRANTY!

By their very nature, competition components are constantly pushed to their limits. While our components are designed to withstand intense race conditions, it is impossible to control the quality of installation or the varying conditions in which they are used. It is for this reason that absolutely no warranty or guarantee is either written or implied. Neither the seller or the manufacturer will be liable for any loss, damage, or injury – direct or indirect – arising from the use of or inability to determine the use of any product. Before using, the user should determine the suitability of the product for its intended use, and the user shall assume all responsibility in connection therewith. Spohn Performance, Inc. makes no guarantee as to the legality for any specific class. Spohn Performance, Inc. makes no claims, nor does it intend its products to be used in street driven vehicles. Spohn Performance, Inc. reserves the right to make changes in design or add to or improve on their product without incurring any obligation to install the same on product previously manufactured. The Buyer agrees to indemnify and hold Spohn Performance, Inc. harmless from any claim, action or demand arising out of or incident to the Buyer's installation or use of products purchased from Spohn Performance, Inc.

INSTRUCTIONS

INSTALLATION

1. Install isolators on stabilizer bar utilizing slits in bushings. Install each isolator so its slit faces forward and flat side is positioned toward crossmember once installed.
2. Install retainers on isolators.
3. Install stabilizer bar (4) with isolators and retainers on crossmember.
4. Install isolator retainer mounting bolts (1). **Do not tighten at this time.**
5. Install bolt (3) and nut fastening stabilizer bar ends to each stabilizer links (2). **Do not tighten at this time.**
6. Tighten isolator retainer mounting bolts (1) to 61 N·m (45 ft. lbs.) torque.

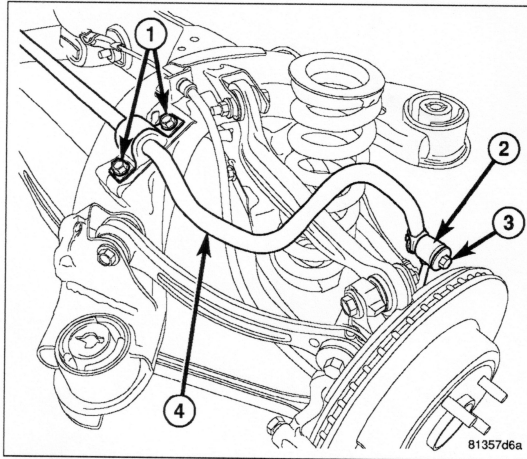

7. Place the included large flat washer between the sway bar and the poly bushing at the top (2) of the end link.
8. Tighten all four of the rear sway bar end link mounting bolts to 45 ft./lbs.

The bushings come pre-lubed. DO NOT use petroleum-based grease on your bushings! The bushings must be lubricated with synthetic silicone based waterproof grease. These are the manufacturer's recommendations to prevent pre-mature bushing wear, and will keep things "squeak-free". You can order this grease from Spohn Performance using our Part #902. Do not over grease the bushings! You only need a couple pumps of grease. Over greasing will cause the bushings to balloon from the hydraulic pressure inside of the sleeve and they will fail.