



SPYDER

INSTALLATION GUIDE

PRO-YD-CS03-AM-(ALL COLORS)

Tools Required

None

Please Note

If you unfamiliar with the installation processes, professional installation is highly recommended.




1) Open the hood. Remove the headlight retainer stake by sliding it out towards the grille.



2) Unseat the headlight and disconnect the headlight wiring harnesses.



3) Remove the headlight. Squeeze the tab indicated to loosen the lower lens assembly.

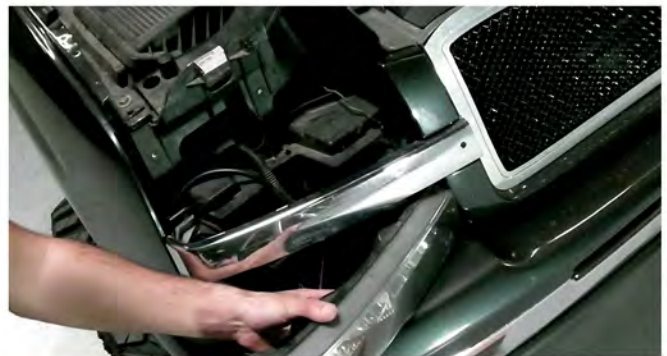

4) Unseat the lower lens assembly and disconnect the DRL socket and turn signal socket, then remove the lower lens and set it aside.



5) Reinstall the DRL socket and turn signal socket into the SPYDER lower lens assembly, then seat the lower lens assembly.



6) Reconnect the OEM headlight harness to the SPYDER upper lens Projector headlight assembly. Seat the Spyder upper headlight lens.



7) Reinstall the headlight retainer stake to secure the upper headlight lens assembly.



8) Close the hood and enjoy your [SPYDER headlights.](#)