



SPYDER

INSTALLATION GUIDE: PRO-YD-HYGEN09-DRL(ALL COLORS)

Tools Required

10mm Socket wrench/ratchet
Phillips Screw Driver

Please Note

If you are unfamiliar with the installation processes, professional installation is highly recommended.




1) Open your hood and locate the 8 phillips screws that you will need to remove in order to get the grille off. You will need to do this in order to be able to fully remove the headlight.




2) Once the grille has been removed, locate the two 10mm bolts shown here and unscrew them. Once these have been removed, set the screws aside as you will reuse them later.



3) Next before being able to remove the headlight, you will need to disconnect the wiring harness from your headlight. Note* the test car photographed here has custom wiring, and may look different than your wiring, but removal is the same.

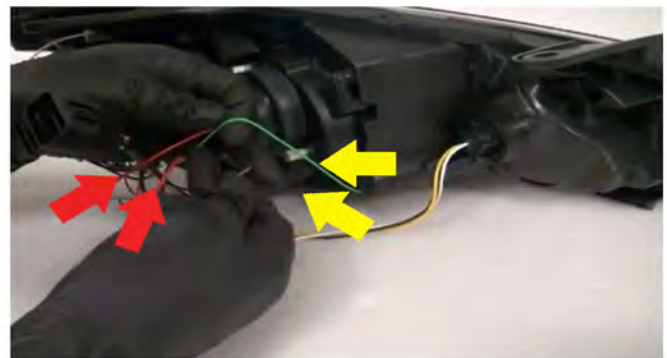

4) Once the headlight is removed, get your new Spyder headlight and turn it around. Locate the black and red loose wires (red arrow) and splice them into your black and green wires (yellow arrow) off the new harness. Black will match with black, red will match with green. These will activate your halo lights once fully installed.

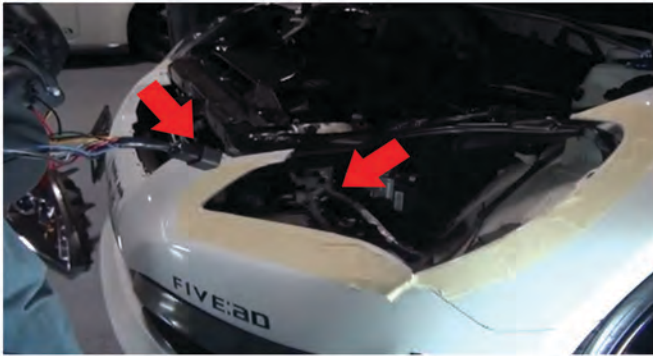

5) Now to reinstall the headlight. Locate your OEM harness you removed, and connect it with the new spyder harness. The connector should “click” in place when attached correctly.



6) Once the headlight has been reseated, reinstall the two 10mm bolts that will lock the new light in place. Repeat this entire process for the other side. Then reattach the grille, and all 8 phillips screws to secure it into place.



7) Congratulations, you have successfully installed your new Spyder DRL headlights for your 2010-2012 Hyundai Genesis Coupe!