



# SPYDER

## INSTALLATION GUIDE: PRO-YD-FF12-DRL-(ALL COLORS)

### Tools Required

10mm Socket & Ratchet



**\*Please Note\***

If you are unfamiliar with the installation processes,  
professional installation is highly recommended.



1) Open the hood.




2) Remove [2x] T-30 Torx Screws securing the headlight.



3) Unseat the headlight by sliding it forwards.



4) Disconnect the headlight wiring harness.

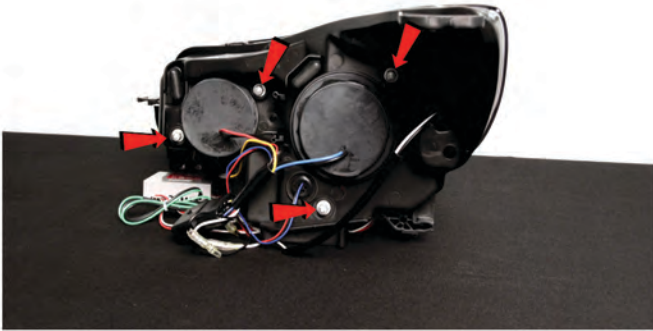

5) The beam adjusters are marked here and are 8mm. No additional wiring is necessary for your light tube DRLs.



6) Reconnect the wiring harness.



7) Seat the Spyder headlight.



8) Reinstall [2x] T-30 torx screws to secure the headlight.



9) Close the hood and enjoy your new Spyder projector headlights.