




SPYDER

WWW.SPYDERAUTO.COM


INSTALLATION GUIDE: ALT-YD-ATT07-LED-(All)

Tools Needed:


- Factory Multi Tool

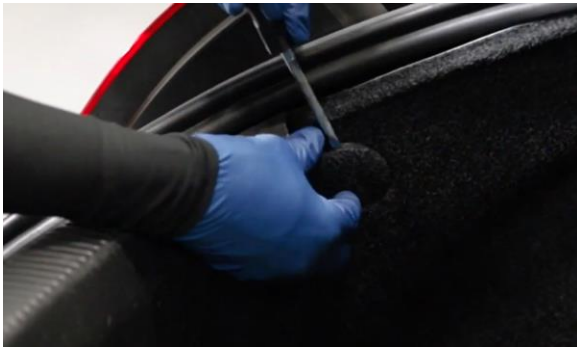

1. Use the flat head to remove the round cover.

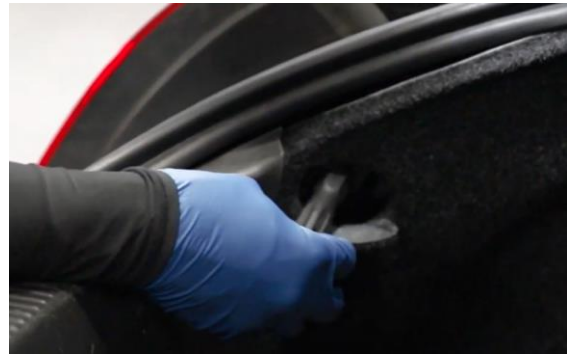


2. Using handle of multi tool remove (x1) retaining screw.

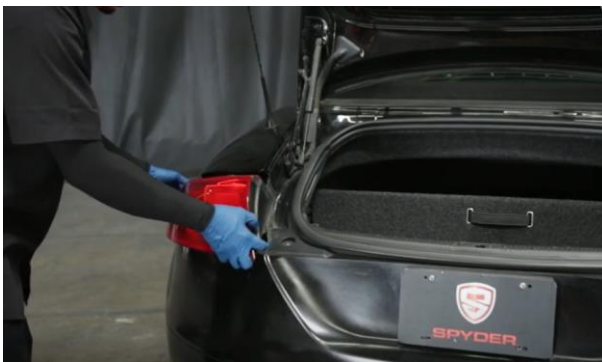

3. Unseat outer tail light.



4. Disconnect outer tail light harness.

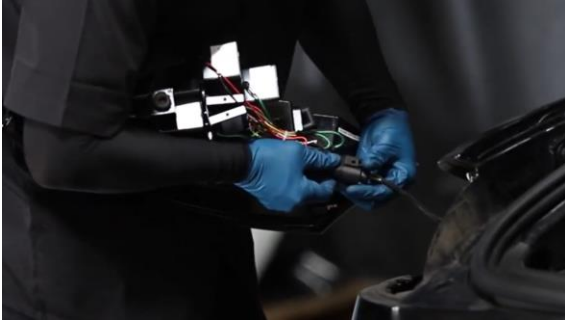

5. Connect wire harness to Spyder tail light.



6. Make sure inner side of tail light slides over body panel.



7. Push firmly on upper outside of tail light to snap in tail light.



8. Reinstall retaining screw using multi tool.



9. Close round cover.



10. Turn on lights and confirm all functions are working properly. You have successfully completed the install of your new Spyder LED tail lights.



SPYDER

WWW.SPYDERAUTO.COM

For further help with installation, please watch our installation video.

Follow the direct link below to our YouTube channel for more
information:

<http://www.youtube.com/watch>

DISCLAIMER

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is intended to be an installation guide, to reduce installation time. We have no responsibility for improper installation. If you do not know how to install, please have a professional install it.