



# SPYDER

## INSTALLATION GUIDE: ALT-YD-ATT99-LED-(ALL COLORS)

### Tools Required Phillips Screwdriver



**\*Please Note\***

If you are unfamiliar with the installation processes,  
professional installation is highly recommended.



1) Open the trunk and open the tail light access panel.




2) Remove [2x] plastic thumbscrews securing the outer tail light.




3) Unseat the OEM tail light.



4) Disconnect the tail light wiring harness.

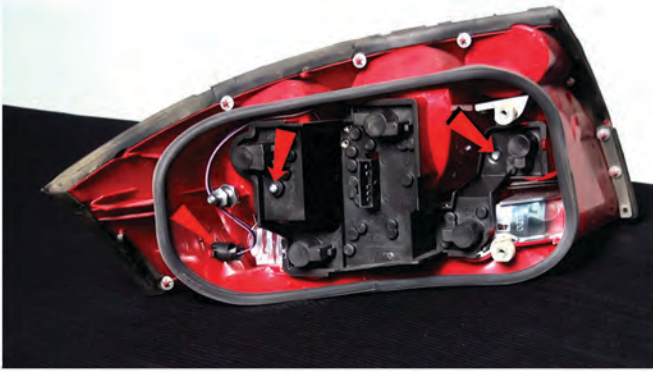

5) Remove [2x] Phillips screws securing the bulb plate to the tail light. Remove the side marker socket from the OEM tail light.

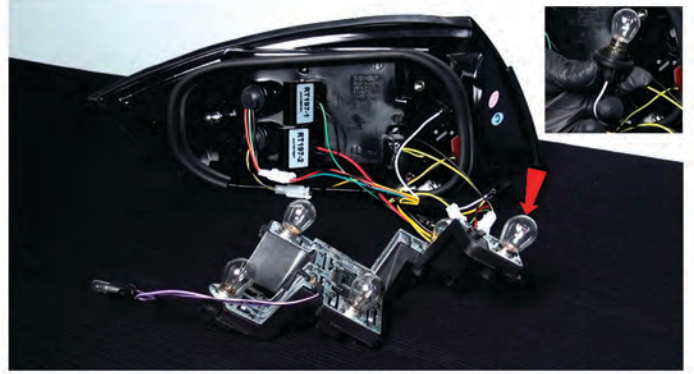

6) Remove the bulb plate, then transfer the reverse lamp from the bulb plate to the black and white wire reverse socket of your Spyder tail light. Then reinstall the socket. Never touch exposed bulbs with bare hands. Your Spyder tail light is now ready to install.



7) Connect the Spyder tail light to the wiring harness.



8) Seat the Spyder tail light.



9) Reinstall the two plastic thumbscrews (white on top, black on the bottom), then close the access panel.



10) Close the trunk and enjoy your new Spyder tail lights!