



SPYDER

WWW.SPYDERAUTO.COM

INSTALLATION GUIDE: ALT-YD-ATT99-LED-(All)

Tools Needed:

- Phillips Screwdriver



1. Start by opening the access panel inside the trunk.



2. Remove the (x2) thumbscrews securing the light.



3. Unseat tail light.




4. Disconnect tail light harness.



5. On old tail light remove (2x) Phillips screws securing the bulb plate.



6. Remove side marker socket and remove bulb plate.

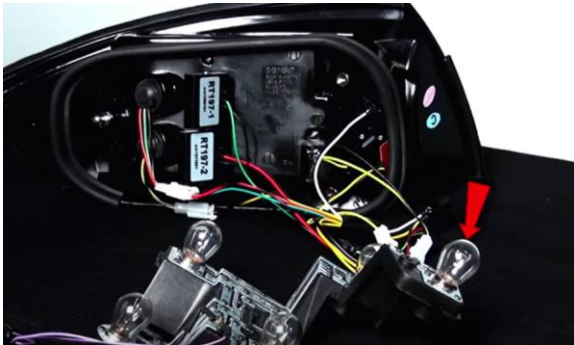

7. Remove reverse bulb from bulb plate.
(Note: Never touch bulbs with bare hands)



8. Transfer reverse bulb to socket with Wht/Blk wires on the Spyder tail light.



9. Connect wire harness to Spyder tail light.



10. Seat Spyder tail light.



11. Reinstall the (x2) thumbscrews securing the light.



12. Close access panel.



13. Turn on lights and confirm all functions are working properly. You have successfully completed the install of your new Spyder LED tail lights.



SPYDER

WWW.SPYDERAUTO.COM

For further help with installation, please watch our installation video.

Follow the direct link below to our YouTube channel for more
information:

<http://www.youtube.com/watch>

DISCLAIMER

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is intended to be an installation guide, to reduce installation time. We have no responsibility for improper installation. If you do not know how to install, please have a professional install it.