

## **INSTALLATION GUIDE:**

ALT-YD-BE3997-LED-(ALL COLORS)

## **Tools Required**

8mm Socket + Ratchet



\*Please Note\*
If you are unfamiliar with the installation processes, professional installation is highly recommended.



1) Open the trunk.



2) Open the trunk access panel.



3) Disconnect the tail light wiring harness.



4) Unlock the bulb panel by twisting the tab counter clockwise, then remove it and set it aside.



5) After removing the bulb panel, remove [4x] 8mm nuts securing the tail light.



6) Unseat the OEM tail light.



7) Locate your Spyder tail light. Disconnect all the white harness connectors. These must be disconnected to avoid pinching the harness when installing the tail light.



8) Remove the turn signal bulb from the bulb plate. Never touch exposed bulbs with bare hands. Transfer the bulb to the yellow and black wire turn signal socket of the Spyder tail light.



9) Remove the reverse bulb from the bulb plate. Never touch exposed bulbs with bare hands. Transfer the bulb to the white and black wire reverse lamp socket of the Spyder tail light.



10) Reinstall the rear fog lamp bulb from the bulb plate. Transfer the bulb to the blue and black wire socket of the Spyder tail light.




11) Your Spyder tail light is ready to install.



12) Seat the Spyder tail light. Seat the tail light without the harness connected to avoid pinching the harness between the tail light and body.



13) Reinstall [4x] 8mm nuts to secure the tail light to the body.

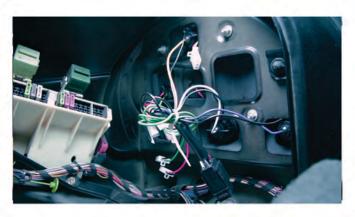

14) Reinstall the turn signal, reverse and rear fog lamp sockets into their corresponding sockets in the Spyder tail light.



15) Reconnect the white wiring harness clips, red and black to red and black, green and black to green and black. Then reconnect the wiring harness.



16) Close the trunk access panel.



17) Close the trunk and enjoy your new Spyder LED tail lights.