



SPYDER

WWW.SPYDERAUTO.COM

INSTALLATION GUIDE: ALT-YD-BE3997-LED-(All)

Tools Needed:

- ¼" ratchet
- 8mm socket




1. Start by opening the trunk and pulling on the pull tab to open the access panel.



2. Disconnect main tail light harness.




3. Unlock thumbscrew securing the bulb plate. Remove bulb plate and set it aside.

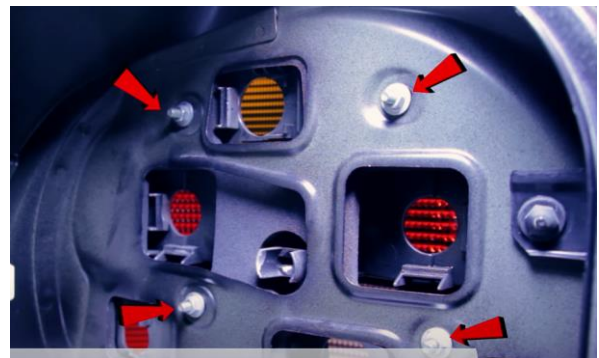


4. Remove (4x) 8mm bolts securing tail light to the body.



5. Unseat tail light.

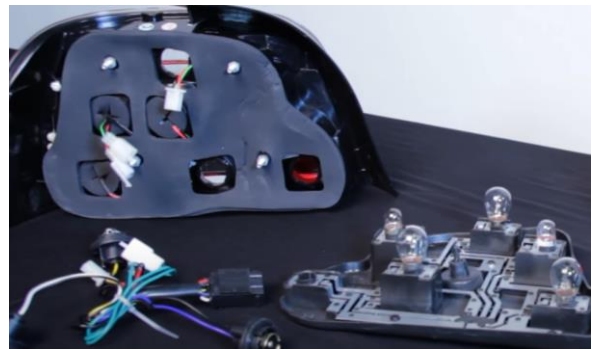

6. Remove Spyder tail light harness.

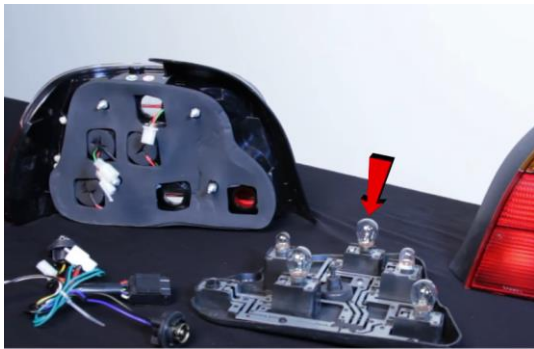

7. Remove turn signal bulb from bulb plate. Transfer bulb to Ylw/Blk wire socket on Spyder harness. (Never touch bulbs with bare hands)




8. Remove reverse bulb from the bulb plate. Transfer bulb to Wht/Blk wire socket on Spyder harness.




9. Remove rear fog lamp bulb from bulb plate. Transfer bulb to blue/blk wire socket on Spyder harness.



10. Seat Spyder tail light without harness to avoid pinching wiring.

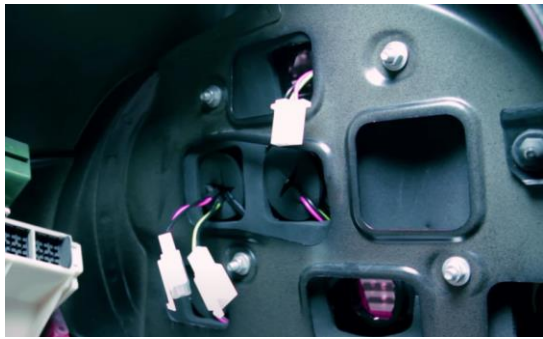

11. Reinstall the (4x) 8mm bolts securing tail light to the body.

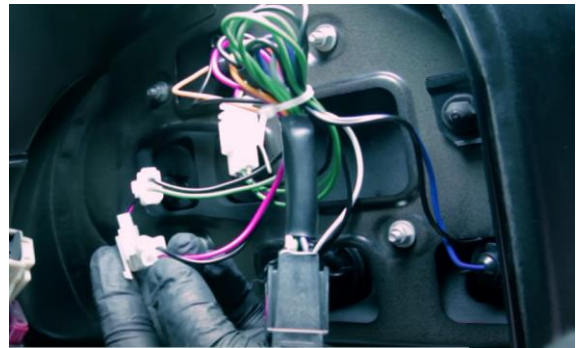

12. Reinstall Spyder tail light harness to the tail light.



13. Reconnect main tail light wiring harness.



14. Close trunk access panel.



15. Turn on lights and confirm all functions are working properly. You have successfully completed the install of your new Spyder LED tail lights.



SPYDER

WWW.SPYDERAUTO.COM

For further help with installation, please watch our installation video.

Follow the direct link below to our YouTube channel for more information:

<http://www.youtube.com/watch>

DISCLAIMER

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is intended to be an installation guide, to reduce installation time. We have no responsibility for improper installation. If you do not know how to install, please have a professional install it.