



SPYDER

INSTALLATION GUIDE: ALT-YD-BE4602-4D-LED-(ALL COLORS)

Tools Required

8mm Socket + Ratchet
Panel Popper
Phillips Screwdriver

Please Note

If you are unfamiliar with the installation processes,
professional installation is highly recommended.



1) Open the trunk.




2) Unscrew the thumbscrew securing the bulb panel.



3) Disconnect the tail light wiring harness.



4) Peel back the trunkliner carpet and remove the two plastic retainers securing the battery cover panel.

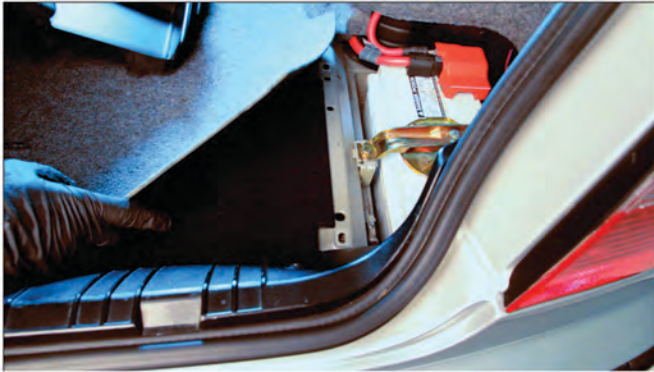

5) Remove the battery cover panel.



6) Pop out the round plastic plug covering an 8mm nut.



7) Remove [3x] 8mm nuts securing the tail light to the body.




8) Unseat the OEM outer tail light.



9) Locate your Spyder outer tail light. Connect the Spyder outer tail light to the tail light wiring harness.




10) Seat the Spyder outer tail light.

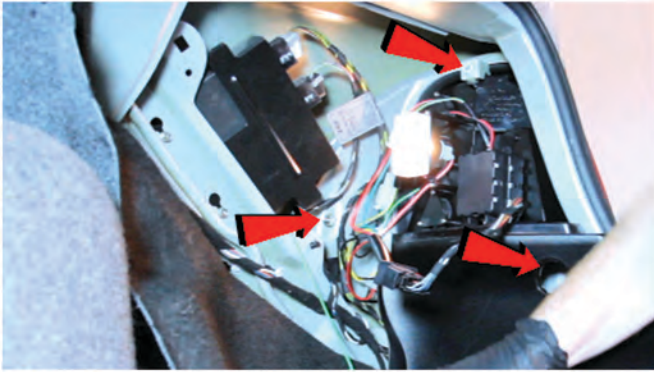


11) Reinstall [3x] 8mm nuts to secure the Spyder outer tail light.




12) Reinstall the battery cover panel and secure it with [2x] plastic retainers, then replace the trunk liner.

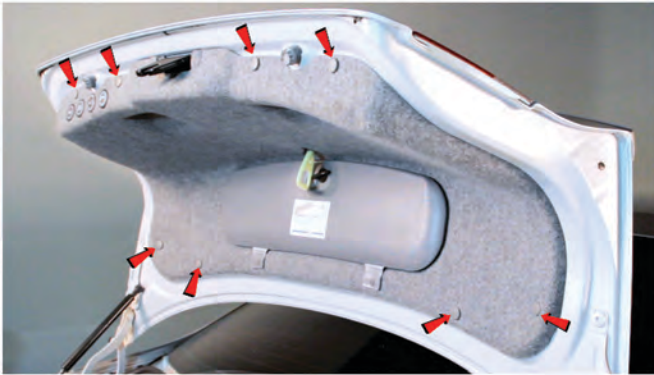

13) Remove [8x] plastic retainers securing the decklid liner using a panel popper.

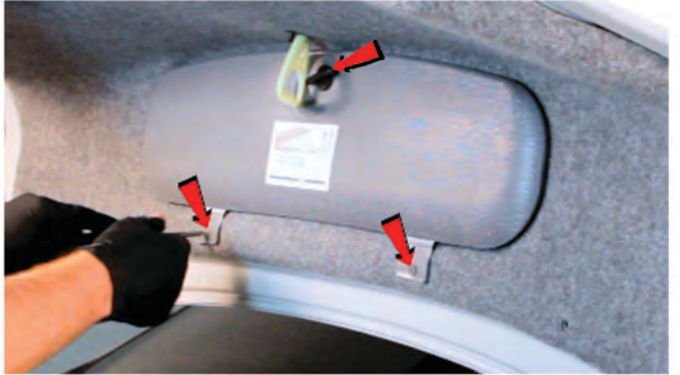

14) Remove [2x] Phillips screws securing the decklid toolkit. Then undo the thumbscrew to remove the toolkit from the decklid. Then remove the decklid liner and set it aside.

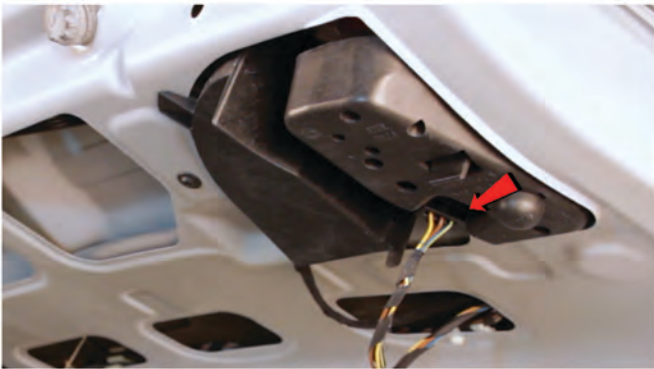

15) Disconnect the inner tail light harness.



16) Squeeze the tab to release and remove the bulb panel.




17) Remove [1x] 10mm nut and spacer securing the inner tail light.



18) Unseat the OEM inner tail light by carefully easing its retainer hook off the edge of the decklid.



19) Seat the Spyder inner tail light. Carefully snap its retainer hook over the edge of the decklid.

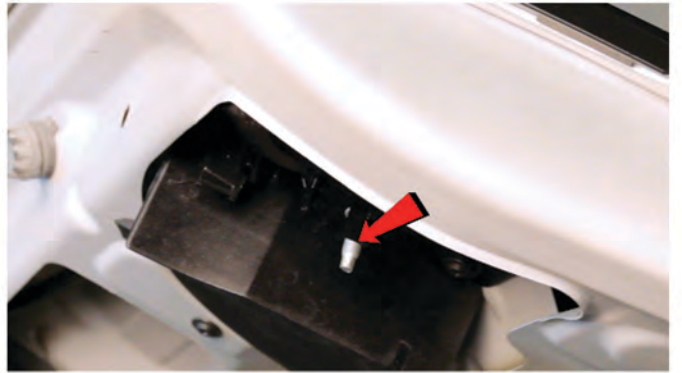

20) Reinstall [1x] 10mm nut and spacer to secure the inner tail light.



21) Reinstall the inner tail light bulb plate.



22) Reconnect the inner tail light wiring harness to the bulb plate.



23) Replace the decklid liner, then reinstall [8x] plastic retainers to secure the decklid liner. Then reinstall [2x] phillips screws and thumbscrew to reinstall the decklid toolkit.



24) Close the decklid and enjoy your new Spyder LED tail lights!