



SPYDER

WWW.SPYDERAUTO.COM

INSTALLATION GUIDE: ALT-YD-BE5300-LED-(All)

Tools Needed:

- ¼" ratchet
- Panel popper
- 8mm socket



1. Open access panel in the trunk.



2. Remove (3x) 8mm bolts securing tail light.



3. Unseat outer tail light.



4. Disconnect outer tail light harness.




5. Connect harness to Spyder outer tail light harness.



6. Disconnect Red/Grn harness clip and remove turn signal socket from Spyder tail light, thread harness thru body.



7. Reinstall Red/Grn clip and turn signal socket. Seat tail light making sure not to pinch wires.

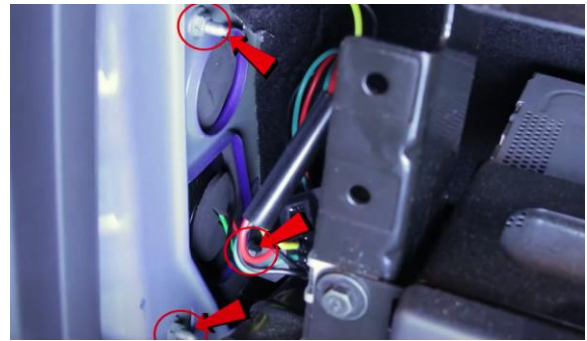

8. Reinstall (3x) 8mm bolts to mount tail light.




9. Close access panel.



10. Remove tailgate access panel using the panel popper.



11. Pull back slightly on foam to remove hidden (1x) 8mm bolt.

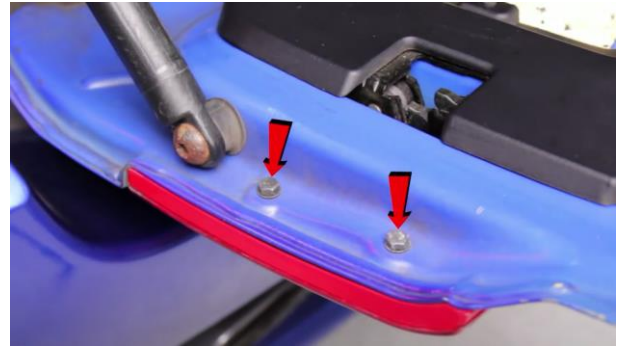

12. Remove (2x) 8mm bolts securing inner tail light.




13. Disconnect inner tail light harness.




14. Unseat and remove inner tail light.




15. Remove reverse bulb from factory inner tail light.

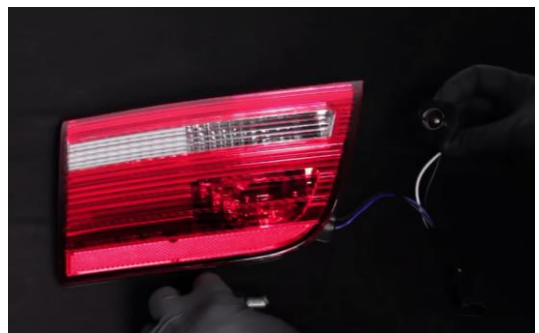

16. Reinstall reverse bulb in Blk/Wht socket on Spyder inner tail light.

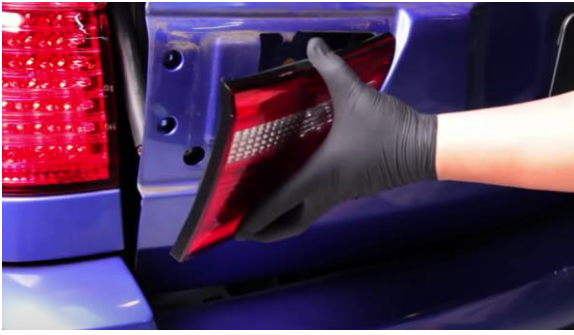

17. Seat Spyder inner tail light.

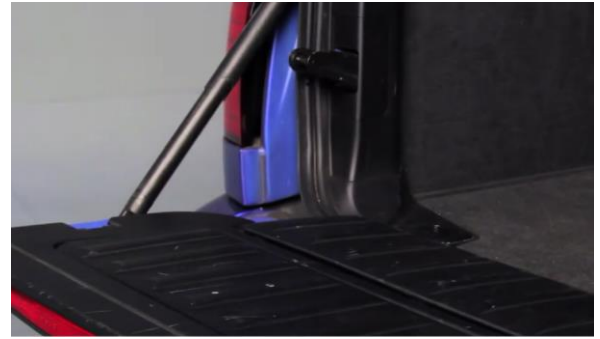

18. Reinstall (3x) 8mm bolts to mount Spyder inner tail light. Reconnect inner tail light harness and reinstall tailgate cover panel.



19. Turn on lights and confirm all functions are working properly. You have successfully completed the install of your new Spyder LED tail lights.



SPYDER

WWW.SPYDERAUTO.COM

For further help with installation, please watch our installation video.

Follow the direct link below to our YouTube channel for more
information:

<http://www.youtube.com/watch>

DISCLAIMER

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is intended to be an installation guide, to reduce installation time. We have no responsibility for improper installation. If you do not know how to install, please have a professional install it.