



SPYDER

WWW.SPYDERAUTO.COM


INSTALLATION GUIDE: ALT-YD-C305-LED-(All)



1. Remove thumb screw located behind the tail light.



2. Pull back carpet lining to access tail light.

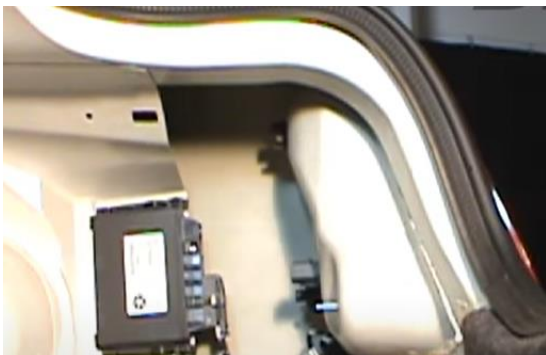

3. Remove (2x) thumb screws that secure tail light to the body.



4. Unseat tail light.




5. Disconnect tail light harness.



6. Connect Spyder tail light and secure rubber grommet.



7. Seat Spyder tail light making sure not to pinch harness.

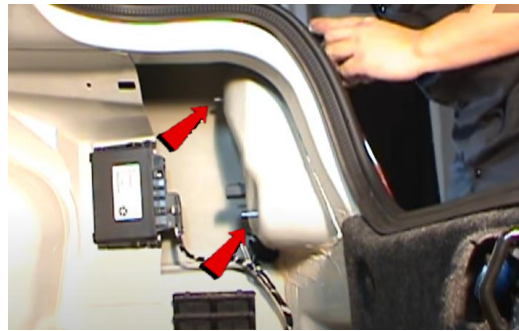

8. Reinstall (2x) thumb screws that secure tail light to the body.



9. Reinstall carpet and (1x) thumb screw to secure carpet.



10. Turn on lights and confirm all functions are working properly. You have successfully completed the install of your new Spyder LED tail lights.



SPYDER

WWW.SPYDERAUTO.COM

For further help with installation, please watch our installation video.
Follow the direct link below to our YouTube channel for more
information:

<http://www.youtube.com/watch>

DISCLAIMER

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is intended to be an installation guide, to reduce installation time. We have no responsibility for improper installation. If you do not know how to install, please have a professional install it.