



SPYDER

INSTALLATION GUIDE: ALT-YD-CAV02-LED-(ALL COLORS)

Tools Required Phillips Screwdriver




Please Note

If you are unfamiliar with the installation processes,
professional installation is highly recommended.




1) Open the tailgate.

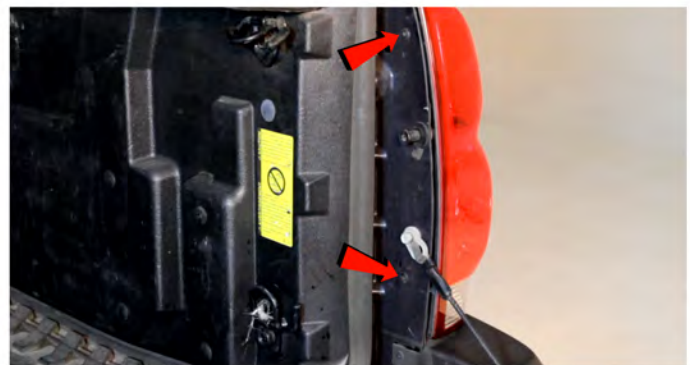

2) Remove [2x] Phillips Bolts securing the tail light.



3) Unseat the tail light.

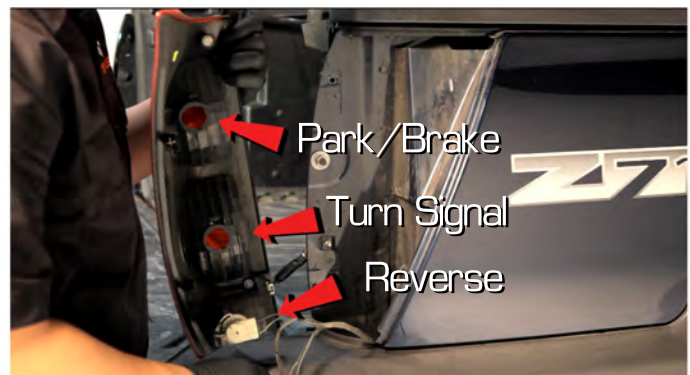


4) Remove the turn signal, reverse lamp and brake lamp bulb sockets from the OEM tail light. Never touch exposed bulbs with bare hands.



5) Remove the center and top bulbs from their sockets. Never touch exposed bulbs with bare hands.




6) Reinstall the reverse lamp socket into the Spyder tail light.

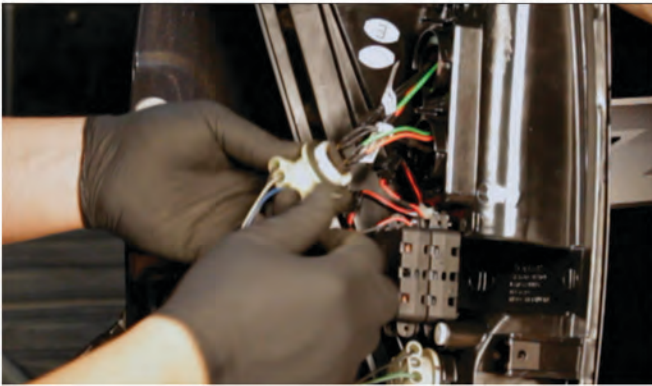

7) Connect the center socket to the center socket insert of the Spyder tail light. Connect the top socket to the upper socket insert of the Spyder tail light. Reinstall the sockets. Align the black wire side of the socket with the black wire side of the insert. Your Spyder tail light is ready to install.



8) Seat the Spyder tail light.

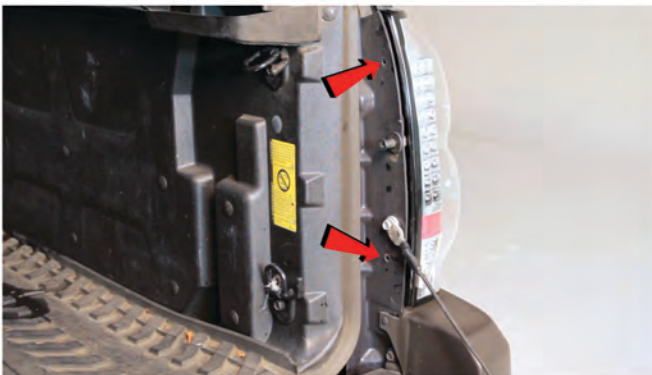

9) Reinstall the two Phillips screws to secure the tail light.



10) Close the tailgate and enjoy your new Spyder tail lights.