



SPYDER

WWW.SPYDERAUTO.COM


INSTALLATION GUIDE: ALT-YD-CCAM98-(All)

Tools Needed:

- Flathead Screwdriver



1. Remove trunk filler panel.

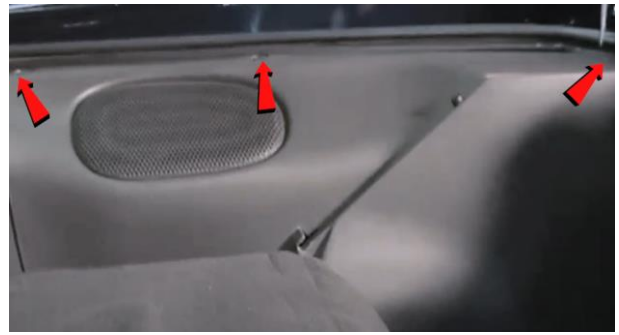

2. Unlock (3x) retainers with flathead screwdriver.



3. Unseat the cover panel and disconnect speaker harness.



4. Remove the cover panel and set it aside.



5. Remove (1x) inner thumbscrew securing tail light.



6. Remove spare tire retainer and spare tire.



7. Remove thumb screw located behind spare tire.



8. Unseat the tail light.



9. Remove all bulb sockets from tail light.



10. Install bulbs into the corresponding sockets on Spyder tail light.



11. Seat Spyder tail light.



12. Reinstall (2x) thumbscrews to secure tail light.



13. Reinstall spare and spare tire retainer hook.



14. Reinstall speaker harness and cover panel.



15. Lock (3x) retainers with flathead screwdriver and reinstall trunk filler panel.



16. Turn on lights and confirm all functions are working properly. You have successfully completed the install of your new Spyder LED tail lights.



SPYDER

WWW.SPYDERAUTO.COM

For further help with installation, please watch our installation video.
Follow the direct link below to our YouTube channel for more
information:

<http://www.youtube.com/watch>

DISCLAIMER

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is intended to be an installation guide, to reduce installation time. We have no responsibility for improper installation. If you do not know how to install, please have a professional install it.