



# SPYDER™

## SKU# 5084576



SCAN THE QR CODE TO  
VIEW THE INSTALL VIDEO

### PACKAGE CONTENTS:



• 2X TAIL LIGHT ASSEMBLIES

### FITMENT:

- 2015-2022 CHEVY COLORADO
- 2015-2019 GMC CANYON

- [FACEBOOK.COM/SPYDERAUTO](https://www.facebook.com/spyderauto)
- [LINKEDIN.COM/COMPANY/SPYDER-AUTO](https://www.linkedin.com/company/spyder-auto)
- [INSTAGRAM.COM/SPYDERAUTO](https://www.instagram.com/spyderauto)
- [TWITTER.COM/SPYDERAUTO](https://twitter.com/spyderauto)
- [TIKTOK.COM/@SPYDERAUTO](https://www.tiktok.com/@spyderauto)



SCAN THE QR CODE  
TO VISIT OUR WEBSITE

**WARNING:** BY READING THIS DOCUMENT, YOU AGREE IT IS ONLY TO BE USED AS AN EDUCATIONAL GUIDE. SPYDER AUTO NOR ITS DEALERS MAKE GUARANTEES ON ANY FINISHED RESULTS, NOR ARE THEY TO BE HELD RESPONSIBLE FOR ANY DAMAGE, MISUSE, OR PERSONAL INJURIES. IF YOU ARE UNABLE TO CLEARLY UNDERSTAND AND ADAPT THE INFORMATION BELOW, PROFESSIONAL INSTALLATION IS RECOMMENDED. FOR ANY ISSUES OR QUESTIONS ABOUT YOUR SPYDER PRODUCT, REACH OUT TO OUR TECH SUPPORT TEAM [TECHSUPPORT@SPYDERAUTO.COM](mailto:TECHSUPPORT@SPYDERAUTO.COM). IT IS THE INSTALLER'S RESPONSIBILITY TO CONFIRM COMPLIANCE WITH STATE AND LOCAL LAWS. THIS PRODUCT CAN EXPOSE YOU TO CHEMICALS INCLUDING CHROMIUM (HEXAVALENT COMPOUNDS), WHICH ARE KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER AND BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM. FOR MORE INFORMATION GO TO [WWW.P65WARNING.CA.GOV](http://WWW.P65WARNING.CA.GOV)

**TOOLS REQUIRED:**

- PHILLIPS SCREWDRIVER



**STEP 1:**  
**DISCONNECT THE NEGATIVE BATTERY TERMINAL**




**STEP 2:**

**LOCATE THE WIRE HARNESS UNDER THE REAR OF THE VEHICLE**



**STEP 3:**

**SLIDE THE RED TAB BACK AND DISCONNECT THE HARNESS**

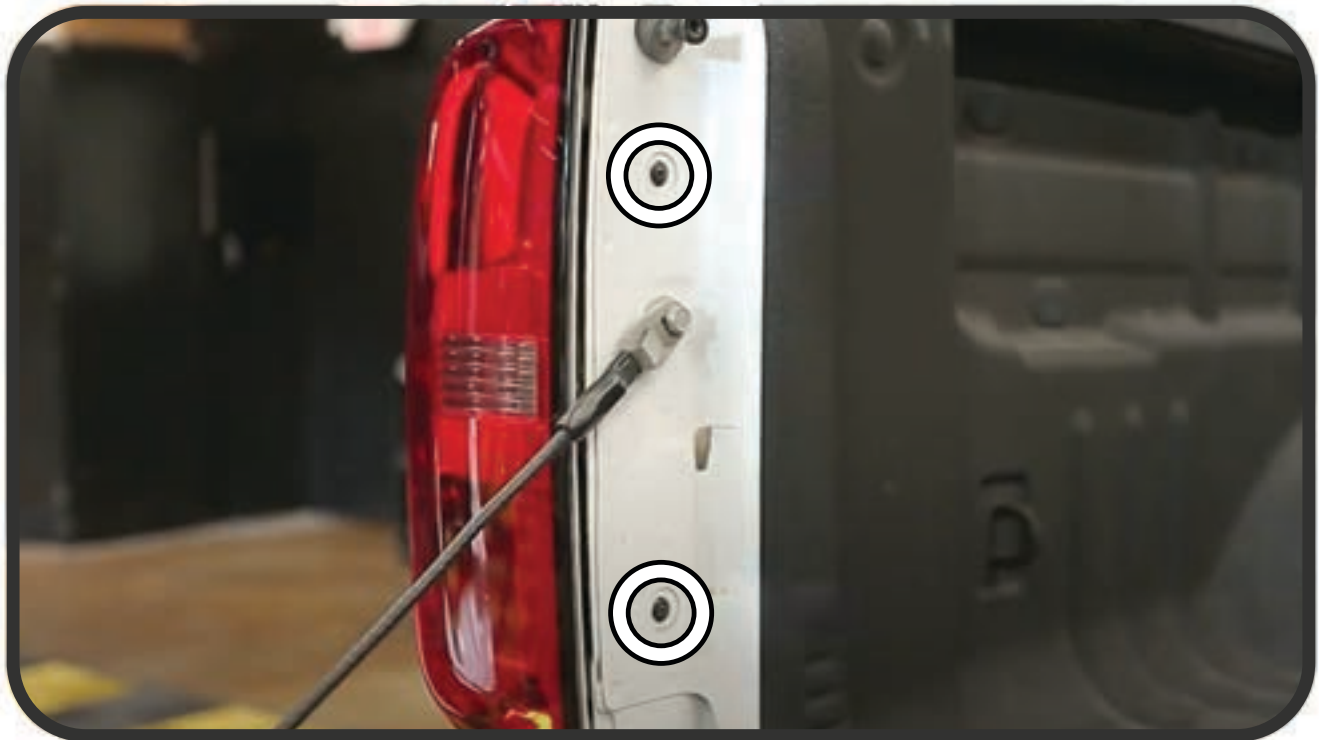


**STEP 4:**  
REMOVE (2) PHILLIPS SCREWS SECURING THE TAIL LIGHT




**STEP 5:**  
UNSEAT THE TAIL LIGHT




**STEP 6:**  
REMOVE TAIL LIGHT AND WIRING HARNESS

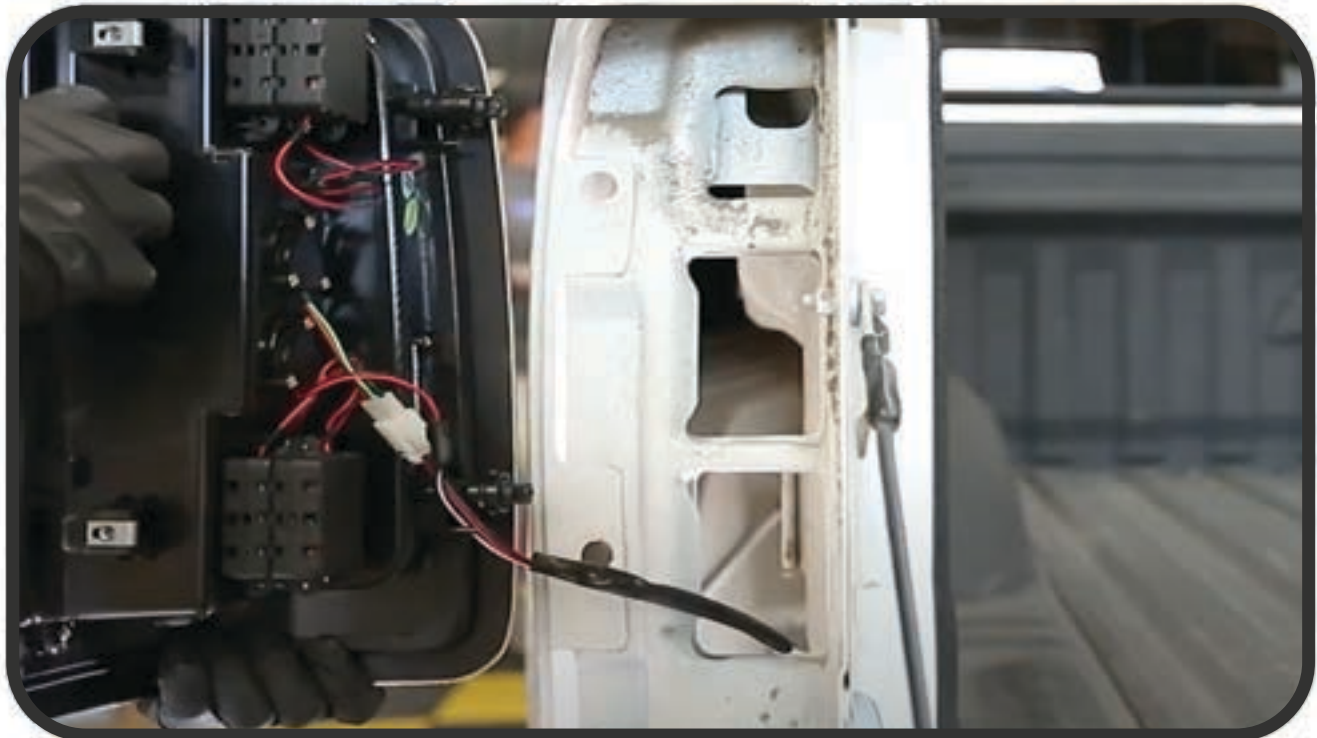

**STEP 7:**  
FEED SPYDER TAIL LIGHT HARNESS INTO THE TRUCK USING THE  
SAME WIRE ROUTING

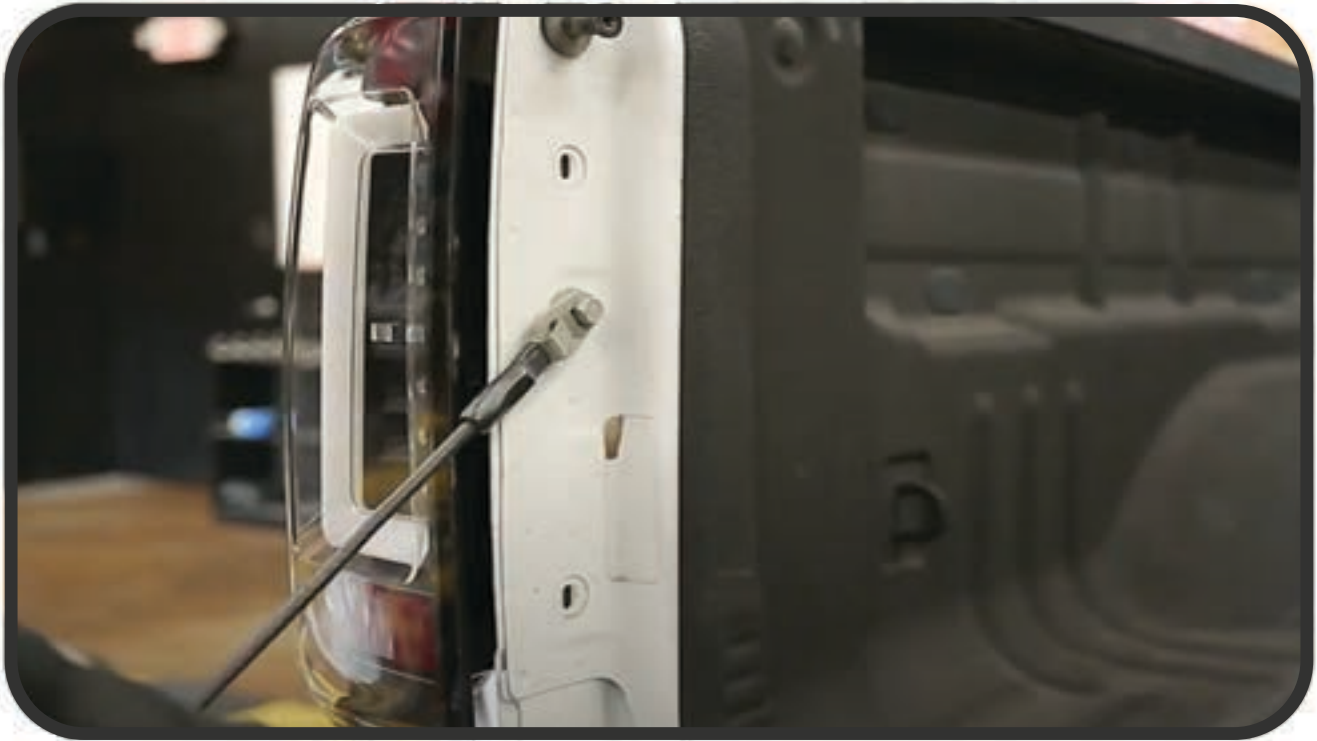

**STEP 8:**  
**SEAT THE SPYDER TAIL LIGHT MAKING SURE NOT TO PINCH THE HARNESS**

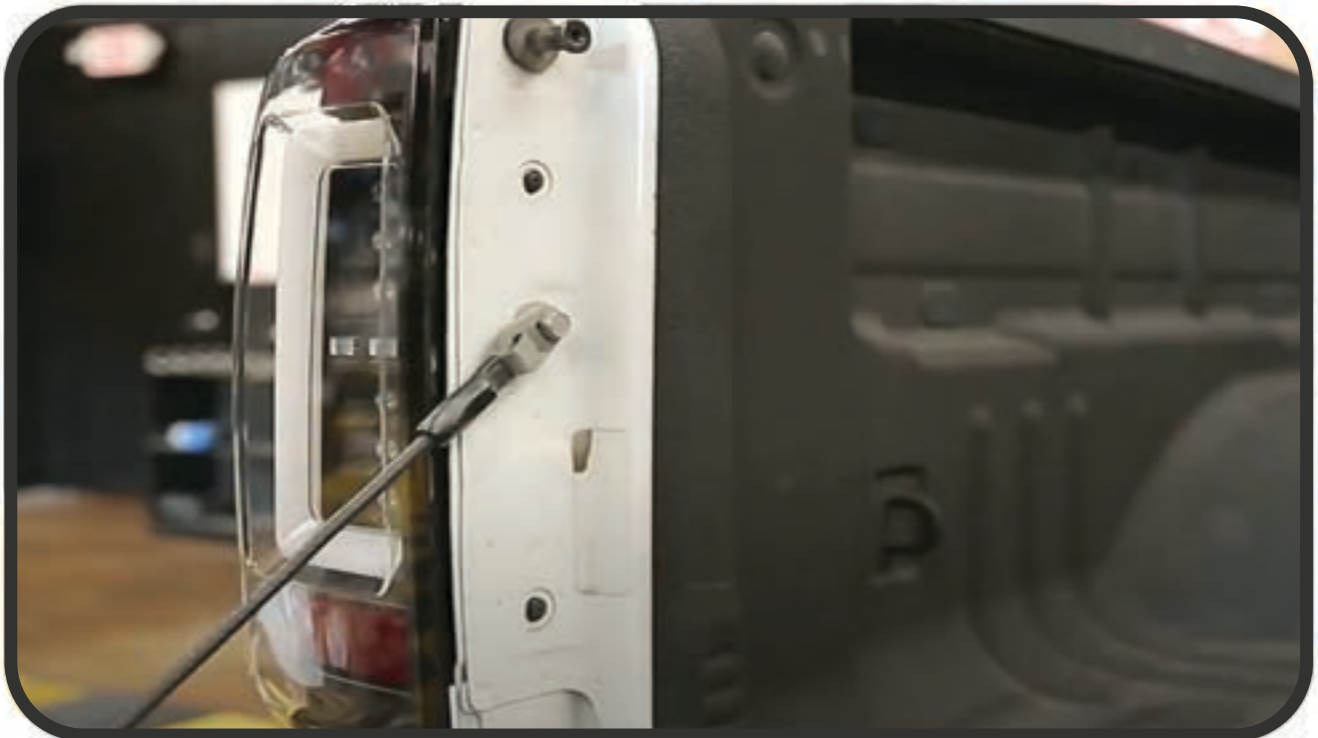

**STEP 9:**  
**REINSTALL THE (2) PHILLIPS SCREWS**

**STEP 10:**

**CONNECT THE TAIL LIGHT HARNESS AND SEAT THE HARNESS ONTO THE HOLDER**

**STEP 11:**

**RECONNECT THE BATTERY AND TEST THE FUNCTIONS TO ENSURE THEY FUNCTION PROPERLY**