2006-13 Impala LED Taillight Installation



Fits: 2006-2013 Chevy Impala




Tools required


Flathead screwdriver





1. Before











4. Remove 2 plastic retainers

5. Remove plastic trunk moulding

6. Wing nut









7. Remove wing nut



8. Pull trunk liner aside to access 2 more wing nuts



9. Remove 2 wing nuts securing tail light



10. Remove 2 wing nuts securing tail light



11. Remove factory tail light



12. Factory tail light





13. Unclip connector from tail light



15. Remove 3 light sockets







16. Remove 3 light sockets

17. Remove brake light bulb

18. Remove parking light bulb









19. Connect LED connector

20. Make sure black wire on LED connector is lined up to black wire on factory harness

21. Install brake light socket







22. Connect LED connector to parking light socket.

23. Make sure wires are in the correct orientation.

24. Install parking light socket










25. Install reverse light socket



27. Replace 3 wing nuts and trunk liner








28. Replace 3 wing nuts and trunk liner

29. Plastic moulding

30. Replace plastic retainer





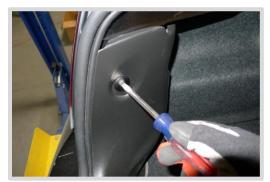



31. Complete

