



# SPYDER

## Installation Instructions: ALT-YD-CS03-LED-(All)

### Tools Needed:

- Phillips Screwdriver




1. Remove (2x) phillips screws.



2. Unseat tail light.



3. Remove (3x) bulb sockets from tail light.  
(Never touch bulbs with bare hands)

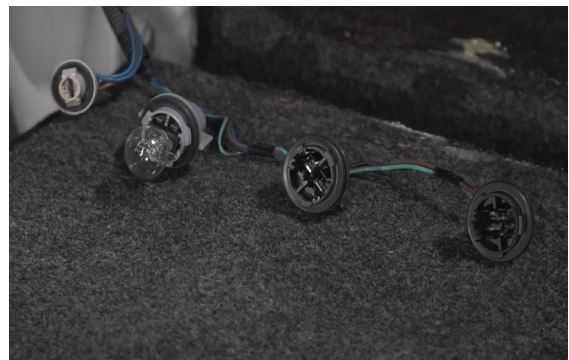

4. Remove brake, turn signal and side marker bulb from sockets.




5. Seat reverse tail light socket into Spyder tail light.



6. Connect turn signal socket to Spyder tail light center socket plug. (Make sure socket plug black wire lines up with socket black wire)



7. Connect brake light socket to Spyder Upper tail light socket plug. (Make sure socket plug black wire lines up with socket black wire)

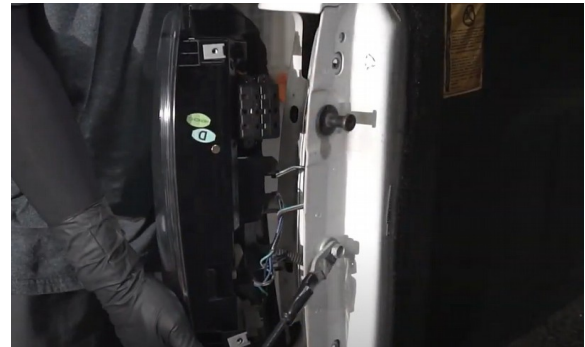

8. Reinstall all sockets and seat Spyder tail light.



9. Reinstall (2x) phillips screw securing tail light.



10. Turn on lights and confirm all functions are working properly. You have successfully completed the install of your new Spyder tail lights.

## DISCLAIMER

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is intended to be an installation guide, to reduce installation time. We have no responsibility for improper installation. If you do not know how to install, please have a professional install it.