




SPYDER

WWW.SPYDERAUTO.COM

INSTALLATION GUIDE: ALT-YD-CS99-(All)

Tools Needed:

- Phillips Screwdriver

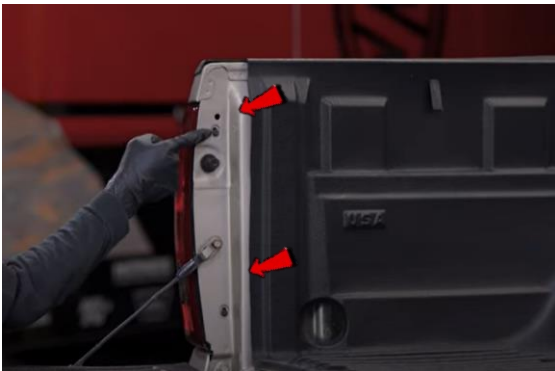


1. Remove (2x) phillips screws.



2. Unseat tail light.



3. Remove (3x) bulb sockets from tail light.
(Never touch bulbs with bare hands)

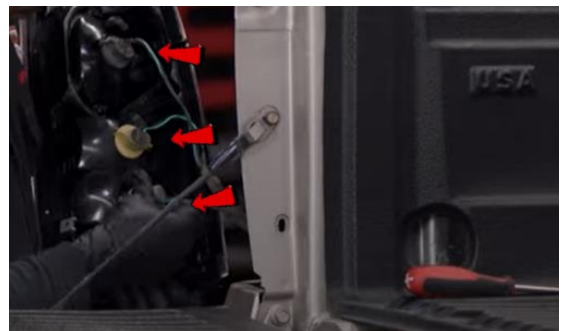

4. Install (3x) bulb sockets into Spyder tail light. (Making sure you have canter amber turn signal bulb)



5. Seat Spyder tail light.



6. Reinstall (2x) phillips screws securing tail light.



7. Turn on lights and confirm all functions are working properly. You have successfully completed the install of your new Spyder tail lights.



SPYDER

WWW.SPYDERAUTO.COM

For further help with installation, please watch our installation video.

Follow the direct link below to our YouTube channel for more information:

<http://www.youtube.com/watch>

DISCLAIMER

Spyder Auto Installation Guide is not liable for damages, injuries, and death while installing the product. This is intended to be an installation guide, to reduce installation time. We have no responsibility for improper installation. If you do not know how to install, please have a professional install it.